



Follow all safety procedures included in your dryer Owner's manual.

1. Cycle the Control Power switch. The Vision computer will start. (See Figure 1.)

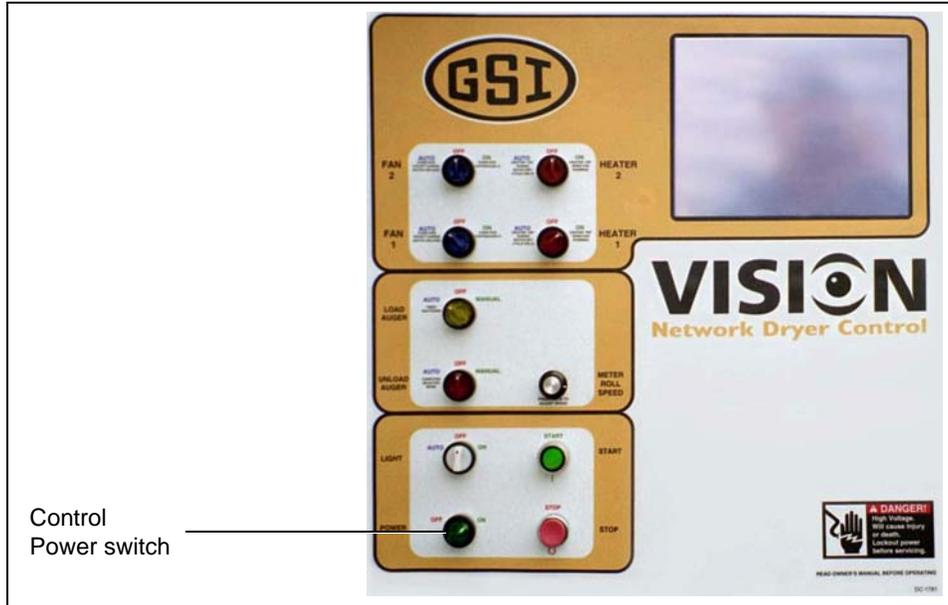


Figure 1

2. Insert USB flash drive into USB port. (See Figure 2.)

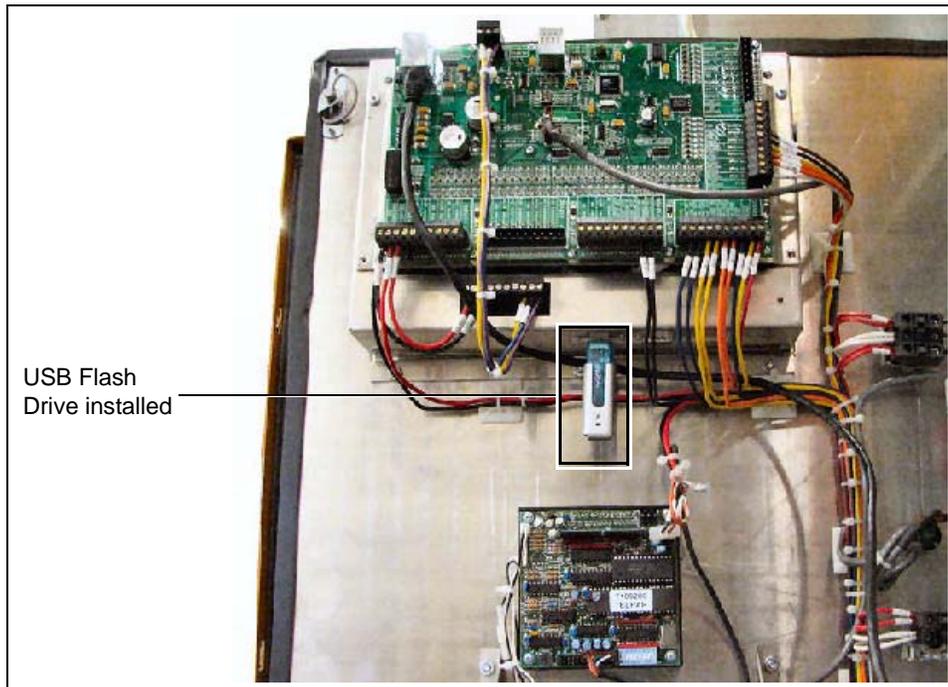


Figure 2 USB Flash Drive Inserted in the USB Port



Vision Software Update Programming Instructions

3. When the “Boot Screen” appears, select the “Get Software” button. (See Figure 3.)

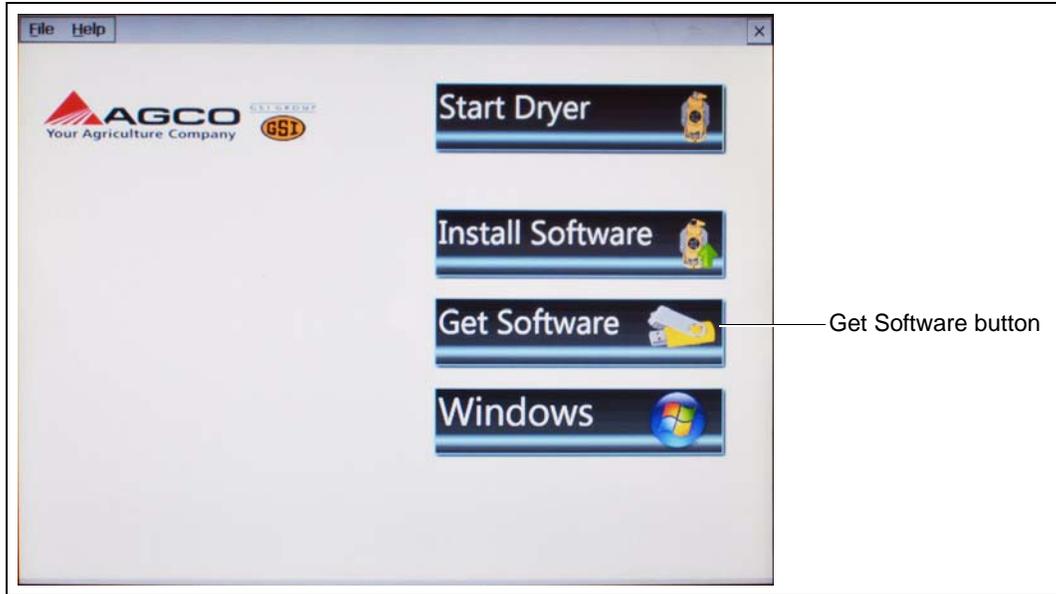


Figure 3

4. The display will now confirm that program files were found. (See Figure 4.)



Figure 4

Select “YES” to load the most recent program.

Select “NO” to choose the program from a list.

Vision Software Update Programming Instructions

5. After the program files are transferred, the “Boot Loader” screen will appear. (See Figure 5.)


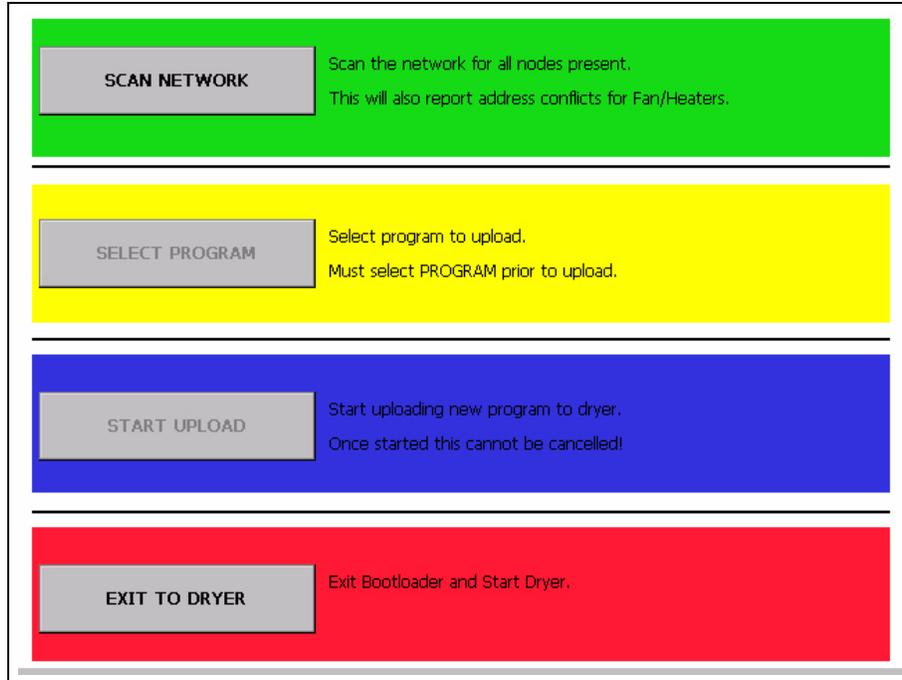


Figure 5

Select the “Scan Network” button. This scan will check the dryer to make sure all parts of the control system are communicating correctly.

6. After the scan is complete, the Display I/O, Main I/O, Moisture Control and the Fan/Heater(s) should be shown as “Nothing to Report”. (See Figure 6.)

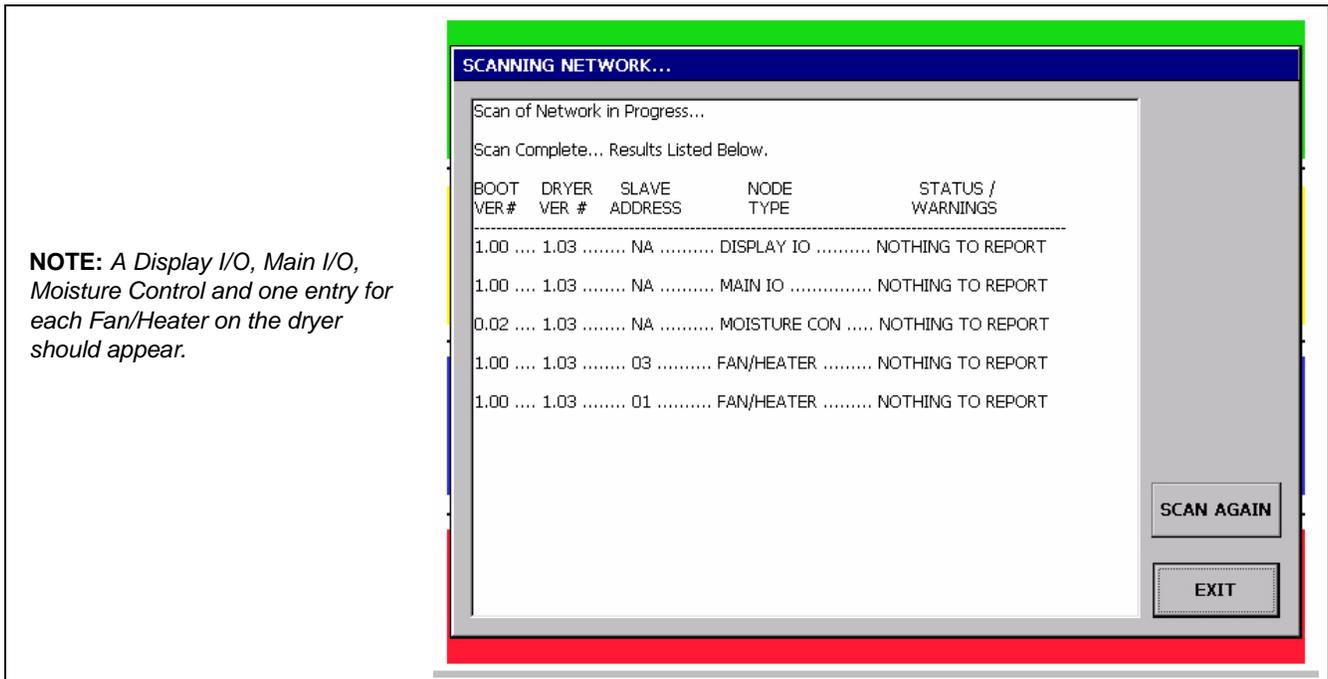

NOTE: A Display I/O, Main I/O, Moisture Control and one entry for each Fan/Heater on the dryer should appear.

Figure 6

Select the “Exit” button.

Vision Software Update Programming Instructions

7. Choose the “Select Program” button from the “Boot Loader” screen. (See Figure 7.)
8. Select the program file you wish to upload by pressing the “Move Up” and “Move Down” buttons until the desired program file is highlighted. Then, choose the “Accept/Exit” button.

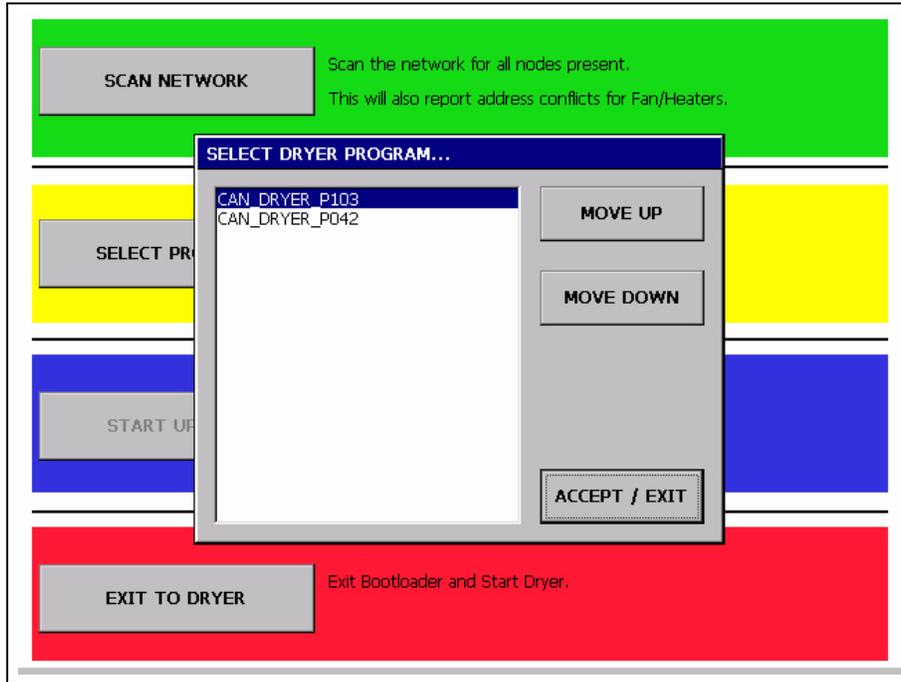


Figure 7

9. Select the “Start Upload” button from the boot loader screen.
10. When the “Upload Progress” screen appears, select the “Start Upload” button. (See Figure 8.)

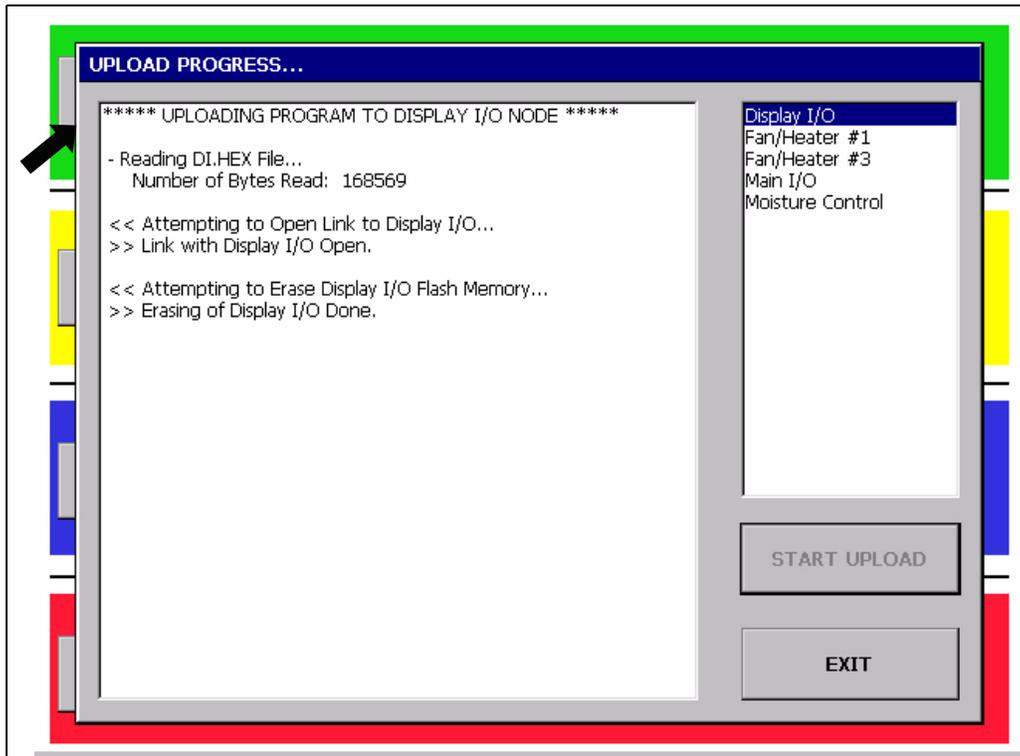


Figure 8

Vision Software Update Programming Instructions

11. The Vision computer will now begin programming each of the network circuit boards on the dryer.
The box on the right of the screen lists the network circuit boards detected in the scan. Each circuit board listed will have to be reprogrammed, so this may take a few minutes. File upload progress for the circuit board that is highlighted is displayed in the box on the left. *(See Figure 8 on Page 4.)*
12. Once the upload is complete, choose the “Exit to Dryer” button to leave the “Boot Loader” screen and start the dryer.
13. The dryer will begin running the program that was just installed.
14. The dryer control is now ready to operate the dryer.
15. In the event it is determined that reversion to the previous software version is necessary, go back to the Boot Screen and select “Install Software” and follow the instructions above to re-install the previous software.