

Metric Enclosed Belt Conveyor

Installation and Operation Manual

PNEG-2033CE

Version: 3.0

Date: 04-01-21



PNEG-2033CE

Use of the equipment information page will help you identify the equipment in the case that you need to call your dealer or installer. This information should be filled out and kept on record.

Equipment Information

Model #: _____

Serial #: _____

Date Purchased: _____

Dealer/Distributor Name and Phone #: _____

AGCO Grain and Protein

A/S Cimbria, Faartoftvej 22

P.O. Box 40

7700, Thisted

DENMARK

All information, illustrations, photos, and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Contents

Chapter 1 Introduction	4
Chapter 2 Safety	5
Safety Guidelines	5
Cautionary Symbols Definitions	6
Safety Cautions	7
Safety Sign-Off Sheet	10
Chapter 3 Decals	11
Head Section Decal Locations	11
Tail Section Decal Locations	12
Loader Section Decal Locations	13
Intermediate Section Decal Locations	14
Chapter 4 Conveyor Assembly	15
Conveyor Assembly Overview	15
Intermediate Section Installation	16
Cover Installation	19
Loader Installation	21
Chapter 5 Motor Assembly	23
Motor and Shaft Torque Arm II Installation	23
Motor and Torque Arm II Reducer Installation	24
Chapter 6 Belting Assembly	27
Finding Belt Centerline	27
Squaring the Belt End	28
Check the Squareness of the Belt Cut	29
Installation of Belt	30
Splicing the Belt	31
Belt Tension	35
Belt Tracking	36
Chapter 7 Loading	39
Spouting	39
Spouting Location	40
Belt Conveyor Loading	41
Chapter 8 Options	42
Motion Sensor Option (Whirligig - WG1-4B)	42
Pressure Plug Switch Option	43
Chapter 9 Start-Up	44
Starting Conveyor	44
Secure Shroud During Maintenance	44
Chapter 10 Care and Maintenance	45
Bearings	45
Welding	45
Motor	45
Support	45
Storage	45
Chapter 11 Troubleshooting	46
Chapter 12 Appendix 1 - Reference Information	47
Chapter 13 Warranty	49

1. Introduction

READ THIS MANUAL carefully to learn how to properly use and install equipment. Failure to do so could result in personal injury or equipment damage.

INSPECT the shipment immediately upon arrival. The customer is responsible for ensuring that all quantities are correct. The customer should report and note any damage or shortage on the bill of lading to justify their claim to the transport company.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your equipment and should be easily accessible when needed.

This warranty provides you the assurance that the company will back its products when defects appear within the warranty period. In some circumstances, the company also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused or modified to change its performance beyond the factory specifications, the warranty will become void and field improvements may be denied.

Safety Guidelines

Safety guidelines are general-to-specific safety rules that must be followed at all times. This manual is written to help you understand safe operating procedures and problems that can be encountered by the operator and other personnel when using this equipment. Read and save these instructions.

As owner or operator, you are responsible for understanding the requirements, hazards, and precautions that exist and to inform others as required. Unqualified persons must stay out of the work area at all times.

Alterations must not be made to the equipment. Alterations can produce dangerous situations resulting in **SERIOUS INJURY** or **DEATH**.

This equipment must be installed in accordance with the current installation codes and applicable regulations, which must be carefully followed in all cases. Authorities having jurisdiction must be consulted before installations are made.

When necessary, you must consider the installation location relative to electrical, fuel and water utilities.

Personnel operating or working around equipment must read this manual. This manual must be delivered with equipment to its owner. Failure to read this manual and its safety instructions is a misuse of the equipment.

ST-0001-4

Cautionary Symbols Definitions

Cautionary symbols appear in this manual and on product decals. The symbols alert the user of potential safety hazards, prohibited activities and mandatory actions. To help you recognize this information, we use the symbols that are defined below.



This symbol indicates an imminently hazardous situation which, if not avoided, **will result in serious injury or death.**



This symbol indicates a potentially hazardous situation which, if not avoided, **can result in serious injury or death.**



This symbol indicates a potentially hazardous situation which, if not avoided, **can result in minor or moderate injury.**



This symbol is used to address practices not related to personal injury.



This symbol indicates a general hazard.



This symbol indicates a prohibited activity.



This symbol indicates a mandatory action.

ST-0005-2

Safety Cautions

Use Personal Protective Equipment

- Use appropriate personal protective equipment:

Eye Protection



Respiratory Protection



Foot Protection



Hearing Protection



Head Protection



Fall Protection



Hand Protection



- Wear clothing appropriate to the job.
- Remove all jewelry.
- Tie long hair up and back.

ST-0004-1

Follow Safety Instructions

- Carefully read all safety messages in this manual and safety signs on your machine. Keep signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from the manufacturer.
- Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.
- If you do not understand any part of this manual or need assistance, contact your dealer.



ST-0002-1

2. Safety

Sharp Edge Hazard

- This product has sharp edges, which can cause serious injury.
- To avoid injury, handle sharp edges with caution and always use proper protective clothing and equipment.



ST-0036-2

Maintain Equipment and Work Area

- Understand service procedures before doing work. Keep area clean and dry.
- Never service equipment while it is operating. Keep hands, feet, and clothing away from moving parts.
- Keep your equipment in proper working condition. Replace worn or broken parts immediately.



ST-0003-1

Install and Operate Electrical Equipment Properly

- Electrical controls must be installed by a qualified electrician and must meet the standards set by applicable local codes (National Electrical Code for the US, Canadian Electric Code, or EN60204 along with applicable European Directives for Europe).
- Lock-out power source before making adjustments, cleaning, or maintaining equipment.
- Make sure all equipment and bins are properly grounded.



ST-0075-1

Stay Clear of Hoisted Equipment

- Always use proper lifting or hoisting equipment when assembling or disassembling equipment.
- Do not walk or stand under hoisted equipment.
- Always use sturdy and stable supports when needed for installation. Not following these safety precautions creates the risk of falling equipment, which can crush personnel and cause serious injury or death.



ST-0047-1

Stay Clear of Slide Gate

- Keep hands away from slide gate opening. Slide gates can crush and dismember. Motor can start at any time.
- Lock-out power source before making adjustments, cleaning, or maintaining equipment.



ST-0049-1

Toxic Fume and Dust Hazard


- Do all work outside or in a well-ventilated area. Dispose of paint and solvent properly.
- Remove paint before welding or heating:
 - Avoid potentially toxic fumes and dust. Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.
 - If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
 - If you use solvent or paint-stripper, remove stripper with soap and water before welding.
 - Remove solvent or stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.



ST-0043-2

Stay Clear of Rotating Parts

- Do not service equipment while the equipment is in operation.
- Entanglement in rotating shafts or exposed conveyor belts will cause serious injury or death.
- Keep all guards and covers in place at all times.
- Lock-out power source before making adjustments, cleaning, or maintaining equipment.

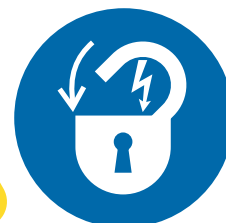

ST-0092-1

Stay Clear of Tail Shroud

- Improperly secured tail shroud can fall and impact user, causing serious injury or death.
- Always secure tail shroud properly during maintenance activities.



ST-0093-1

Head Section Decal Locations

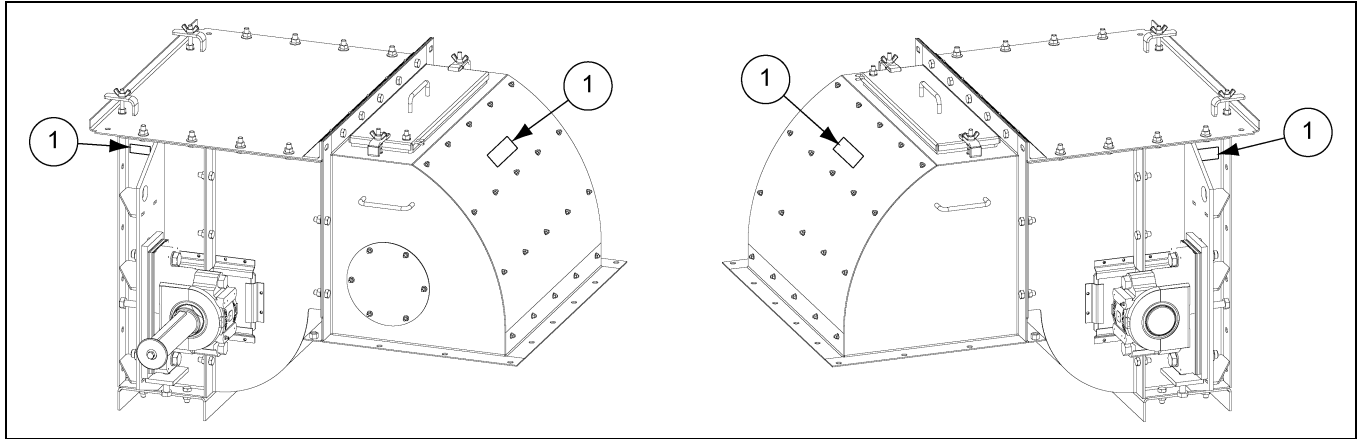


Figure 3A Standard Head Section

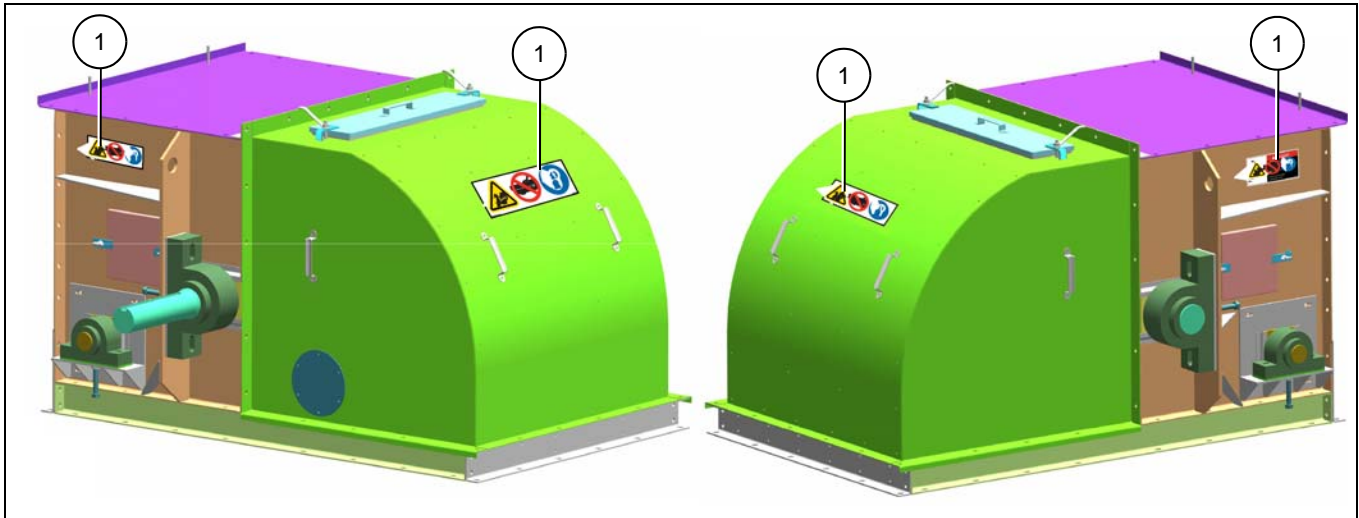


Figure 3B Snub Head Section

Ref #	Decal #	Decal	Location
1	DC-2477		Standard and Snub Head Section

Tail Section Decal Locations

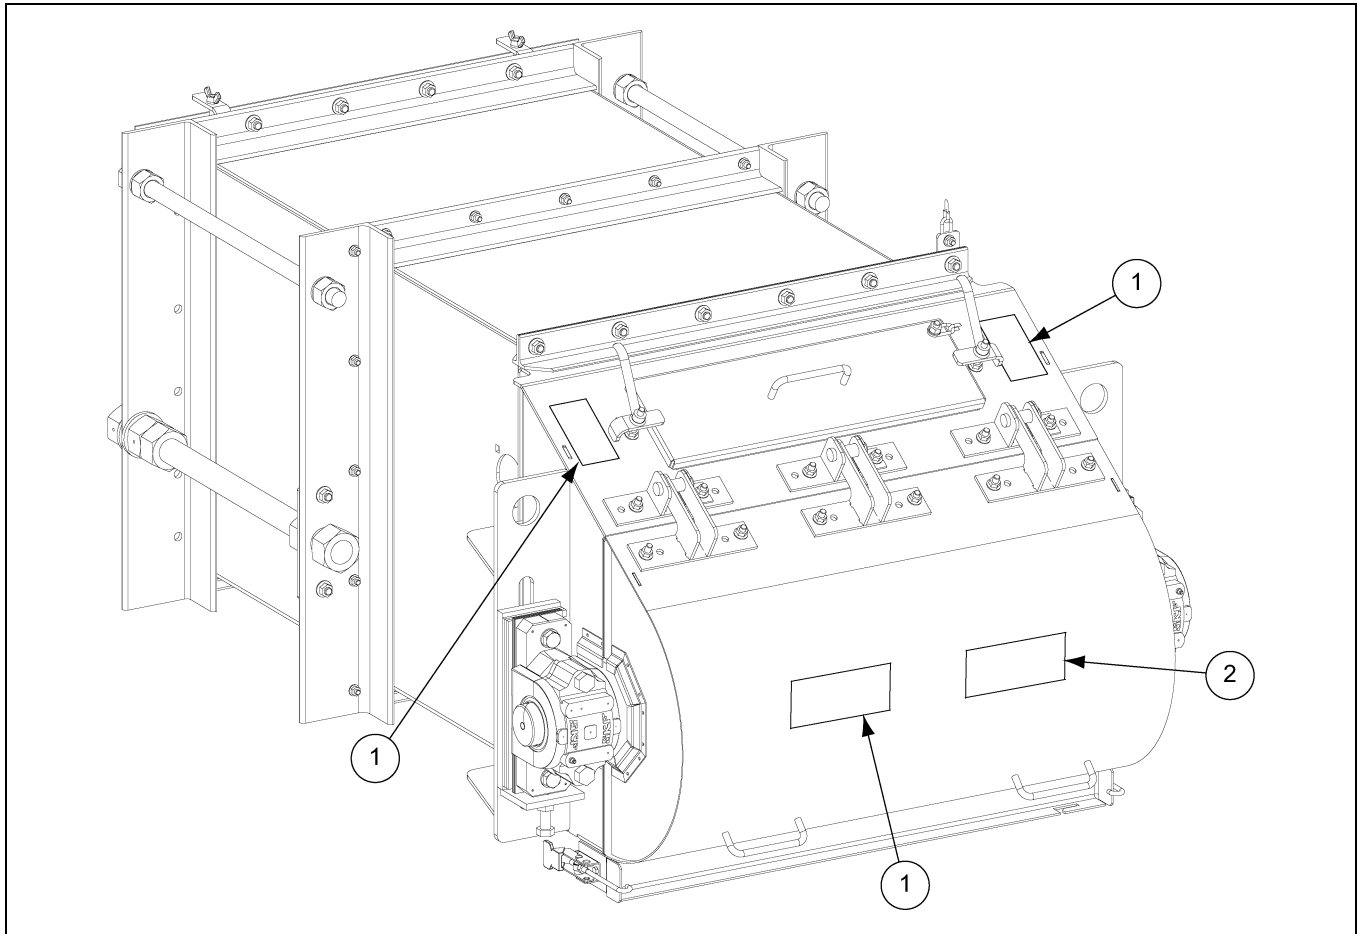


Figure 3C Belt Conveyor Tail Section

Ref #	Decal #	Decals	Location
1	DC-2476	<p>Three safety decals are shown: a yellow triangular warning sign with a hand being struck by a moving part, a red circular prohibition sign with a hand and a diagonal line, and a blue circular sign with a padlock and a lightning bolt, indicating a lockout/tagout procedure.</p>	Belt Conveyor Tail Section
2	DC-2478	<p>Two safety decals are shown: a yellow triangular warning sign with a person's head and neck caught in machinery, and a blue circular sign with a gear and a lightning bolt, indicating a machinery hazard.</p>	Belt Conveyor Tail Section

Loader Section Decal Locations

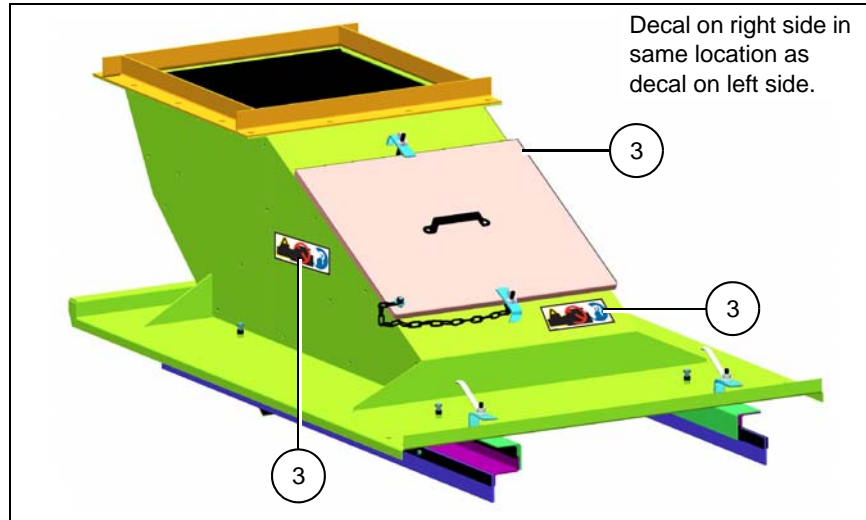


Figure 3D Fixed Skirt Loader

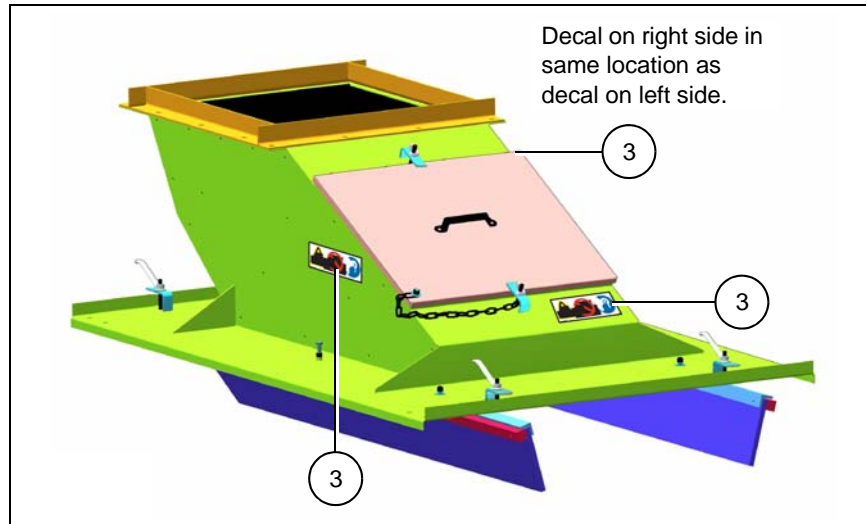


Figure 3E Swing-Up Skirt Loader

Ref #	Decal #	Decal	Location
3	DC-2476		Fixed and Swing-Up Skirt Loader Section

Intermediate Section Decal Locations

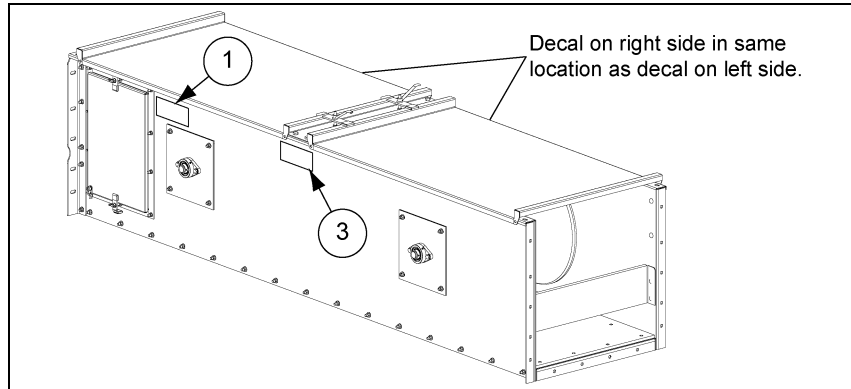


Figure 3F Intermediate Inspection Section

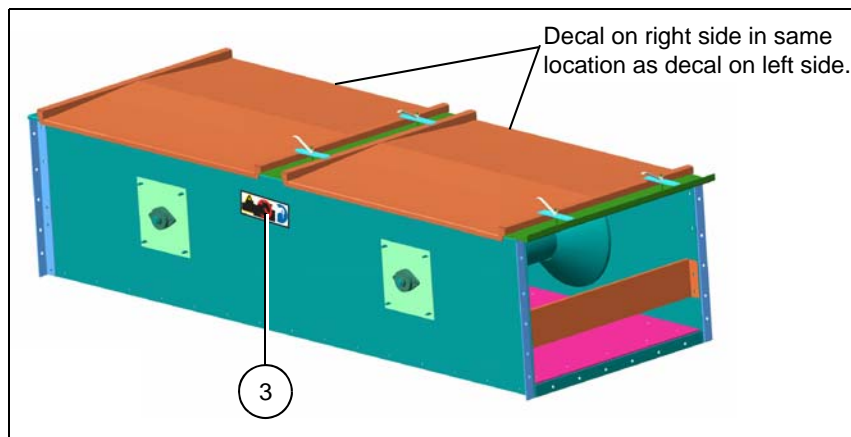


Figure 3G Standard Intermediate Section

Ref #	Decal #	Decals	Location
1	DC-2477		Intermediate and Standard Inspection Section
3	DC-2476		Intermediate and Standard Inspection Section

Conveyor Assembly Overview

1. Remove any banding and crating material. Arrange all the conveyor components in such a fashion that all are easily accessible.
2. Locate sturdy items to serve as blocking (i.e. wood blocks, saw horses, etc.). Blocking is used to support the conveyor sections above the ground to help in assembly. Locate and place the conveyor sections on the blocking in order, starting with the head section and concluding with the tail section.
3. A clearance of at least the width of the conveyor is recommended on all sides of the unit. Less clearance may be acceptable however, serious consideration must be given to methods of maintenance, removal and replacement of the conveyor and/or its parts.
4. The standard conveyor is constructed with one discharge located at the drive end. If tripper discharge sections are to be used, the location(s) must be determined before continuing with the conveyor assembly. It may be necessary to position a shorter intermediate section to serve as a spacer in order to accommodate the placement of the tripper discharge(s) where required.
5. Always consult with the approval prints for exact conveyor layout. Maintain adequate clearance for tail extension.
6. During installation of the conveyor, string a chalk line along the conveyor sides to assure that the conveyor is being assembled in a straight line. All hardware should be included with your conveyor. It is recommended that all flanges be caulked to seal the conveyor to keep the dust in and the weather out.
7. After all sections are caulked and bolted, the loader(s) is/are ready to be installed. Loaders must be installed with the grain stream moving in the same direction and same speed as the conveyor belt. ([See Page 39](#) for recommended spout loading.)
8. After location of the loader(s) (as to spouts, gates and valves) has been established, the loader(s) are bolted to the conveyor. Do not weld loader(s) to the conveyor. ([See Page 21](#) for loader installation.)
9. Belt may now be hand fed through the conveyor. Make sure when splicing belt that each cut is clean, square and straight. Detailed belt assembly instructions are listed [on Pages 27-38](#). These instructions should be followed closely and read thoroughly before starting this step.
10. Check drive belts for tension. Also check the oil level in the speed reducer dodge. **Reducers are shipped without oil.** Refer to [Page 47](#) for the type and quantity of oil. (DO NOT overfill reducer.)

4. Conveyor Assembly

Intermediate Section Installation

NOTE: Make sure to read assembly overview [on Page 15](#).

1. Intermediate sections are supplied in standard 3048 mm lengths. Depending on your application and individual specifications however, shorter sections may be required to accommodate a desired overall length.
2. After making sure the flanges are aligned, tighten all hardware on the trough section. (It is recommended that the flanges are caulked to ensure sealing from dust and outside moisture.)
3. During assembly of the intermediate sections, carefully inspect each flange joint to ensure that the inside bottom and side surfaces of the intermediates are flush. A chalk line is helpful during this phase of the assembly to ensure the proper alignment of the intermediate section surfaces. The maximum run-out in any direction should be ± 6 mm. Make sure the conveyor is level in horizontal applications.
4. Proceed by attaching the head and tail assemblies using the same alignment procedures and precautions noted in the preceding paragraph.

NOTE: It is critical for straightness of the conveyor that the sides and bottom flanges are aligned flush. Also, it is important that the inside dimensions of the box measure equidistant from side-to-side both top and bottom of the intermediate section (Dimension A = Dimension B). (See [Figure 4A](#).)

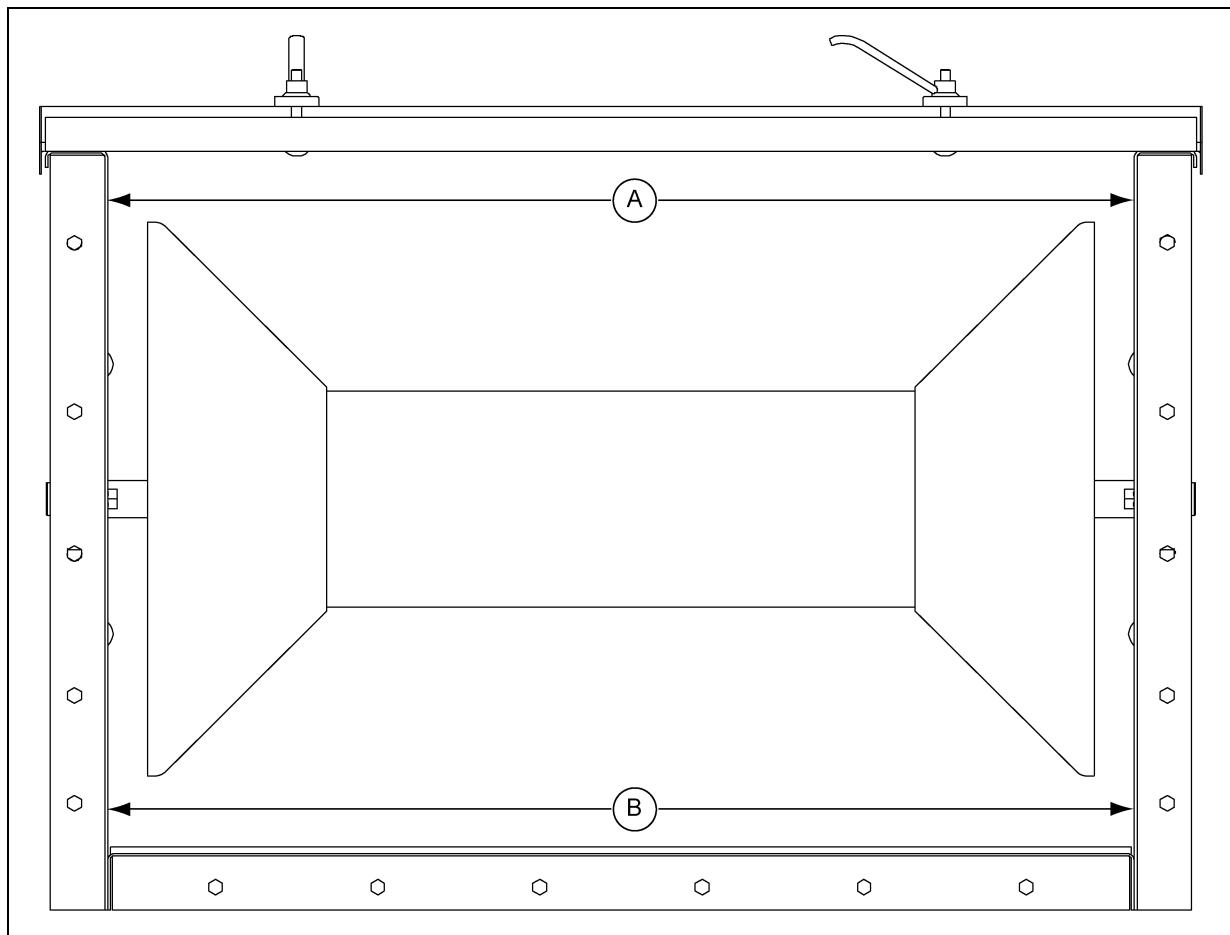


Figure 4A End View of Intermediate Section (Liners not shown for clarity.)

Intermediate Section Installation (Continued)

1. Intermediate sections bolt together along the side and bottom flanges. The covers (A) are fastened to the cover channels (C) by flat clips (B) and easy grip handles (D). (See Figure 4B.)

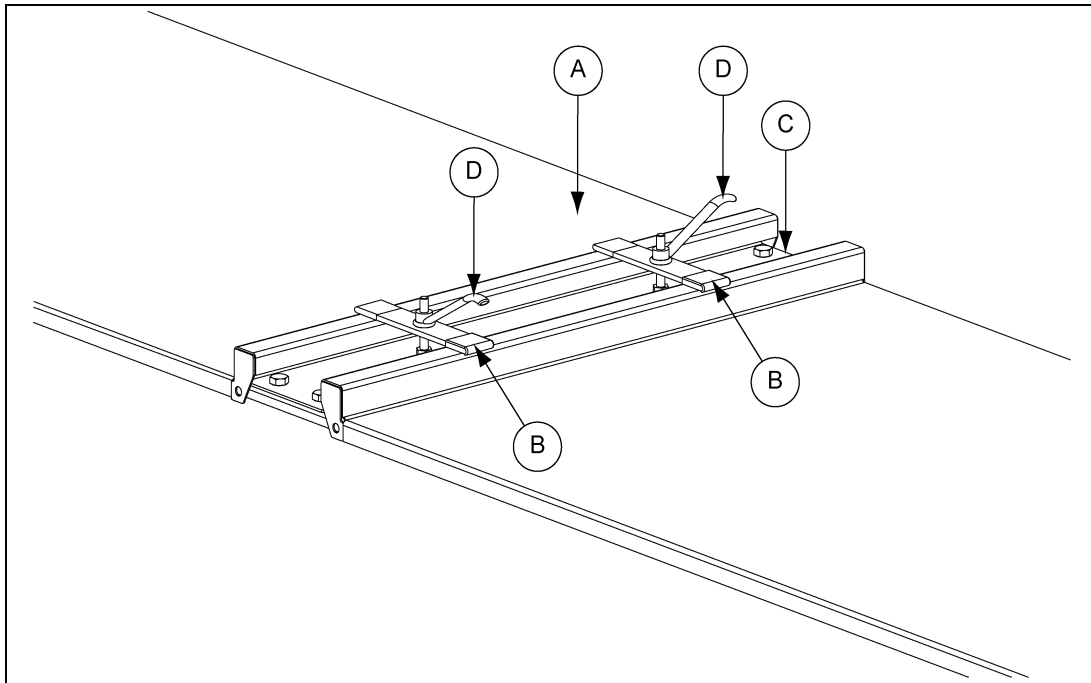


Figure 4B

Ref #	Description
A	Cover
B	Flat Clips

Ref #	Description
C	Cover Channel
D	Easy Grip Handles

2. Standard intermediate sections do not have a direction in which they bolt to other intermediate sections. The cover channels (C) connect intermediate sections on both ends.
3. Two (2) inspection intermediate sections (F) are included on each installation. They should be assembled at the head and tail. The inspection holes should be oriented closest to the head or tail. (See Figure 4C.)

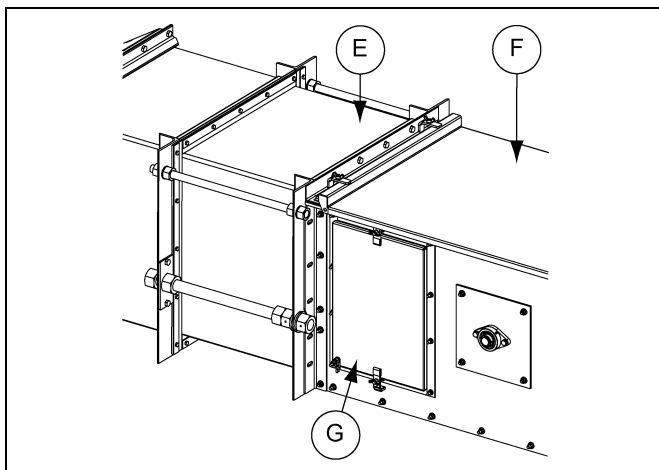


Figure 4C

Ref #	Description
E	Tail Section
F	Intermediate Inspection Section
G	Inspection Door

Intermediate Section Installation (Continued)

4. The inspection door end of each intermediate section has adapter angles with slotted holes (H) for bolting to head or tail sections. (See Figure 4D.)

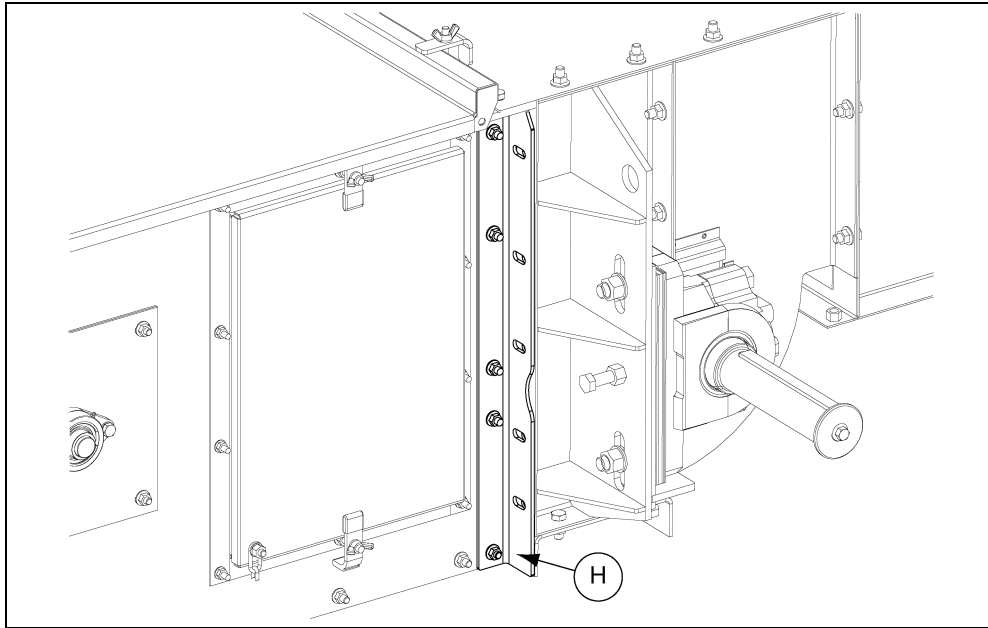


Figure 4D

Ref #	Description
H	Adapter Angle with Slotted Holes

5. A special cover channel (I) is provided with the tail as shown in Figure 4E.

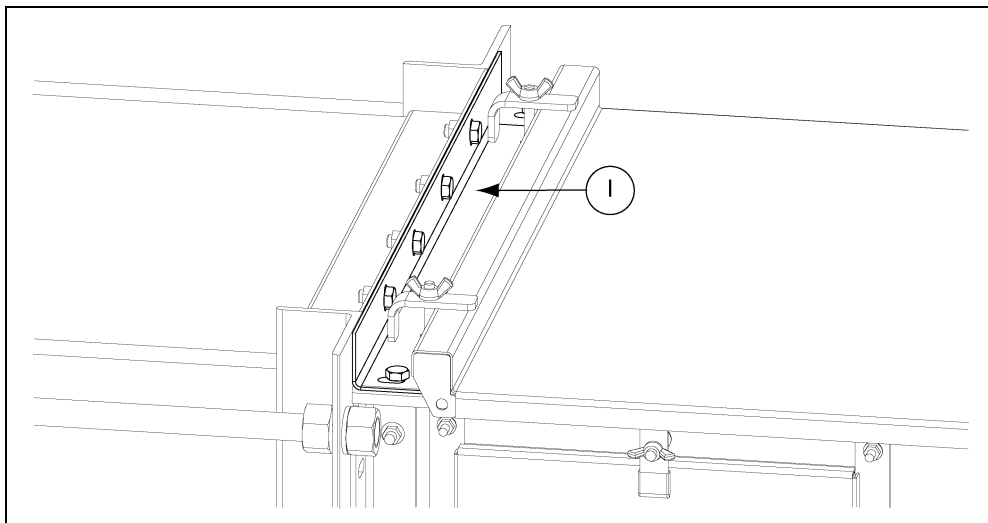


Figure 4E

Ref #	Description
I	Tail Cover Channel

Cover Installation

1. Fasten covers to the belt conveyor with the M10 easy grip handles provided. Adequately tighten the M10 handles so that the covers are in tight contact with conveyor cross channels. (See [Figure 4F.](#))

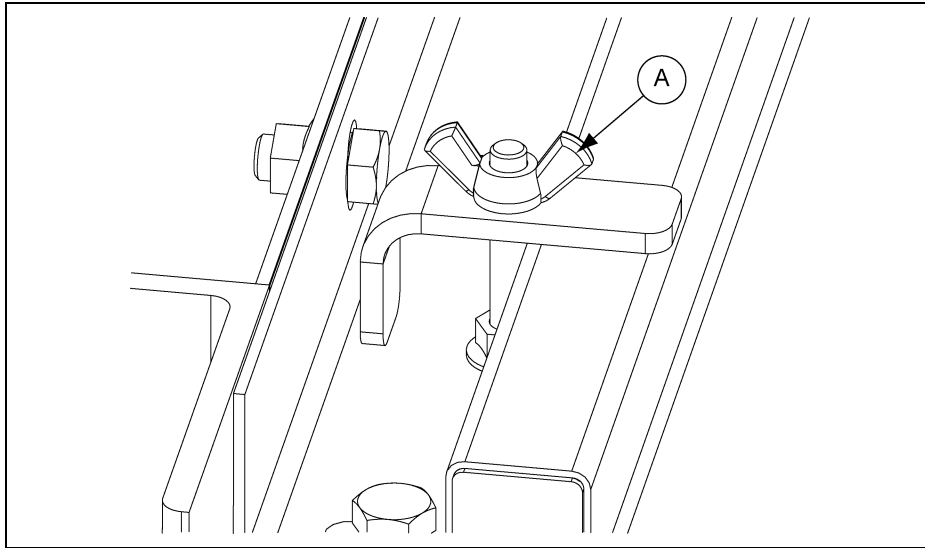


Figure 4F

Ref #	Description
A	M10 Wing nut on tail section to secure cover

2. When a loader is on the conveyor, the cover section may have to be cut accordingly to accommodate the loader. (See [Figure 4G.](#)) For installation of a loader, see loader installation [on Page 21.](#)

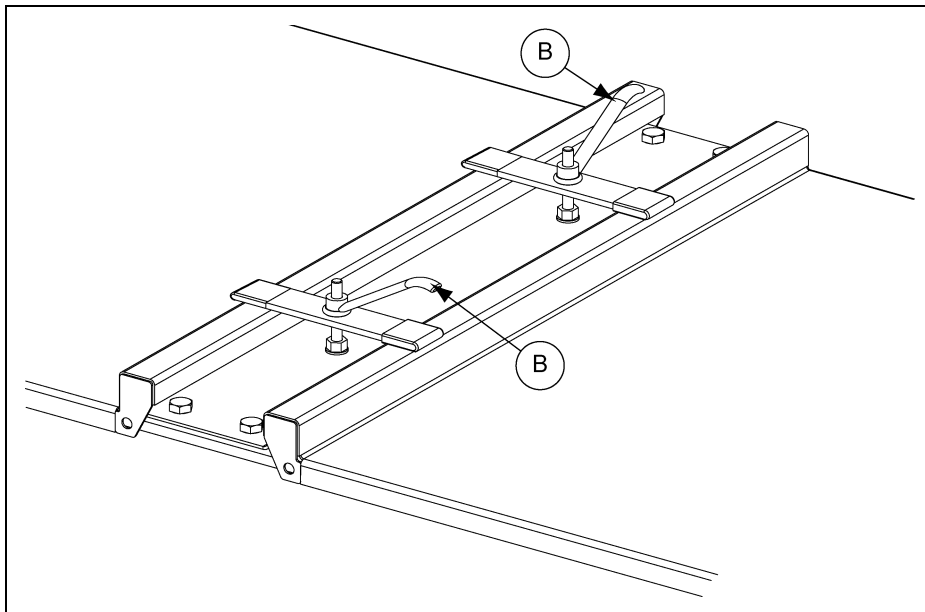


Figure 4G

Ref #	Description
B	Easy Grip Handles

4. Conveyor Assembly

Cover Installation (Continued)

3. Conveyor covers are made to fit over the entire width and half the length of a conveyor intermediate section. Standard covers measure approximately 1397 mm in length. When a loader is ordered, the cover may be measured and cut to take up the displacement of the loader housing. This depends on the position of the loader. (See [Figure 4H.](#))

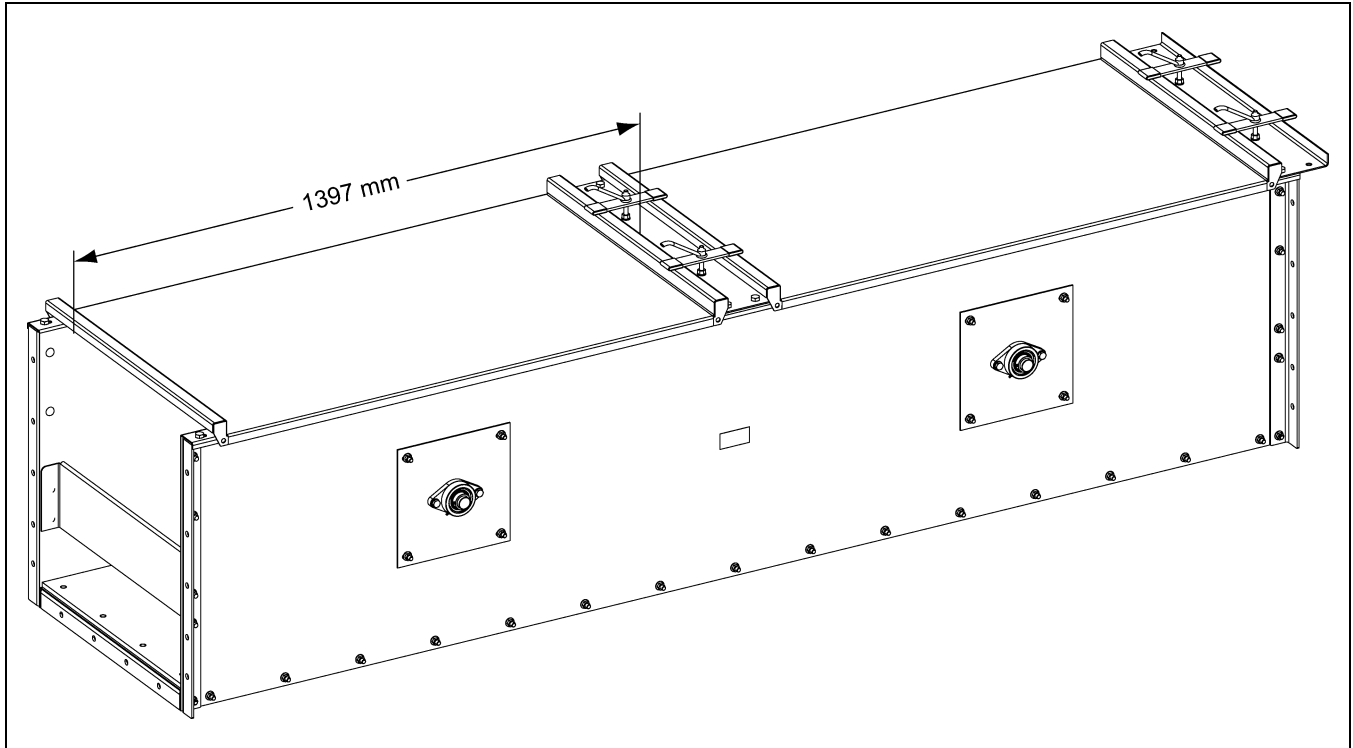


Figure 4H Standard Cover Length

NOTE: *DO NOT* walk on conveyor covers.

Loader Installation

Fixed Skirt Loader

1. The fixed skirt loader always attaches at the tail end so no cover modifications should be necessary. The soft rubber skirts are adjustable and can be set to lightly touch the conveyor belt. (See Figure 4I.)

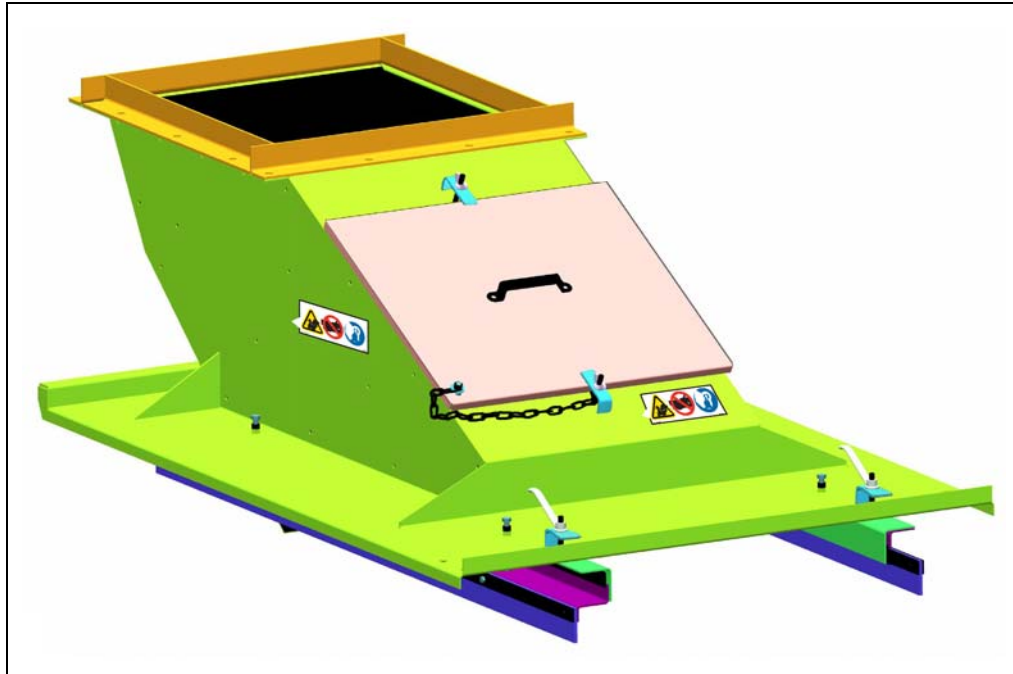


Figure 4I Fixed Skirt Loader

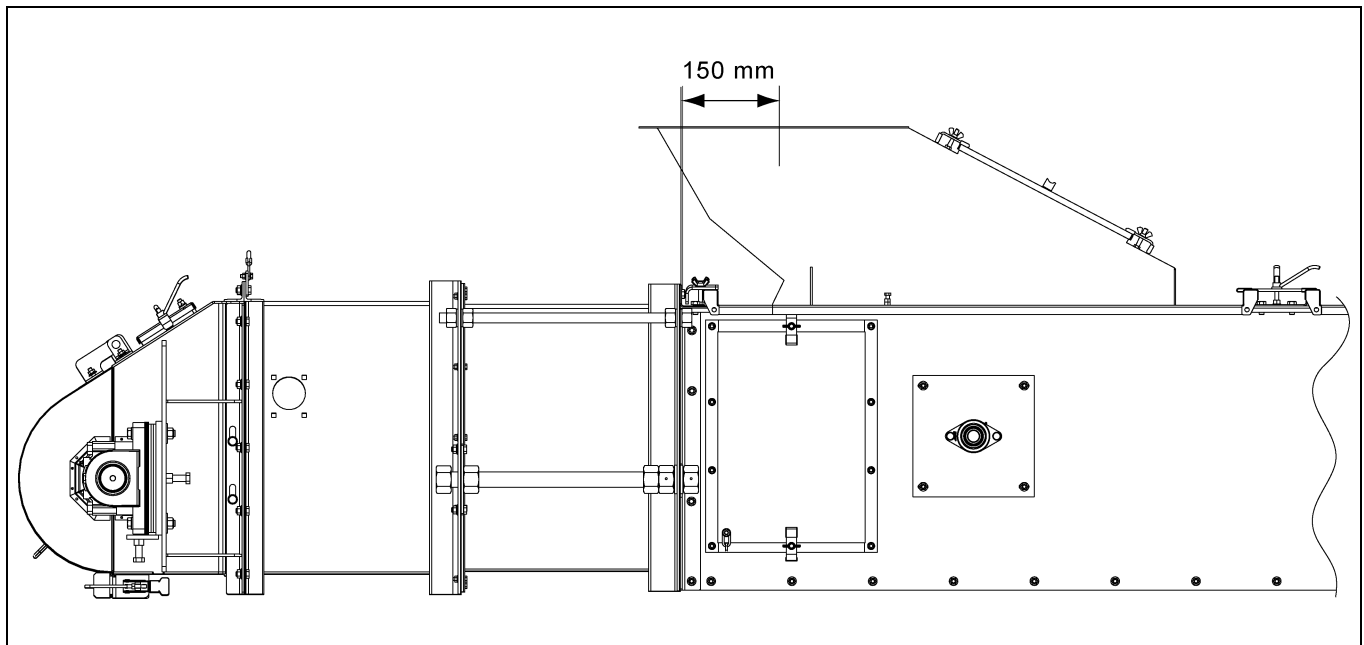


Figure 4J

NOTE: GSI's recommendation for loader installation includes a minimum distance of no less than 150 mm between the center of loader inlet and the tail assembly. (See Figure 4J.)

Loader Installation (Continued)

Swing-Up Skirt Loader

1. If the loader does not line up exactly with an intermediate cover, the intermediate covers will need to be cut to fit. If this is necessary, properly position loader and cut a section from the covers so they will fit between the cover channel bolted to next section and the loader flange. Weld cover back together to achieve required length. Repaint welded area to prevent rusting. (See Figure 4K.)

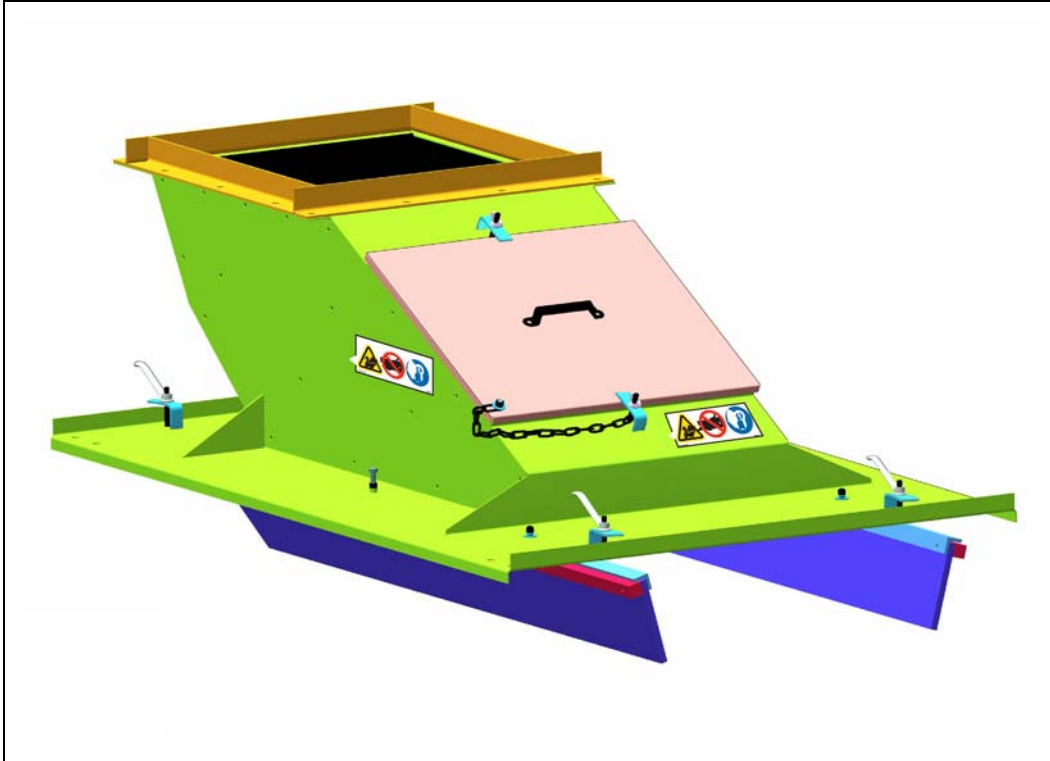


Figure 4K Swing-Up Skirt Loader

2. The UHMW swing-up skirts should not touch the conveyor belt as they can cause wear to the belt. Use the adjustable set screws to locate the position of the skirts.



REMOVE PAINT BEFORE WELDING OR CUTTING.

Avoid hazardous fumes that can be generated when paint is heated by welding or torching. Do all work outside or in a well-ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- **If you use sand or grind paint, avoid breathing the dust. Wear an approved respirator.**
- **If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or stripper containers and other flammable material from area. Allow fumes to disperse for at least 15 minutes before welding or heating.**

Motor and Shaft Torque Arm II Installation

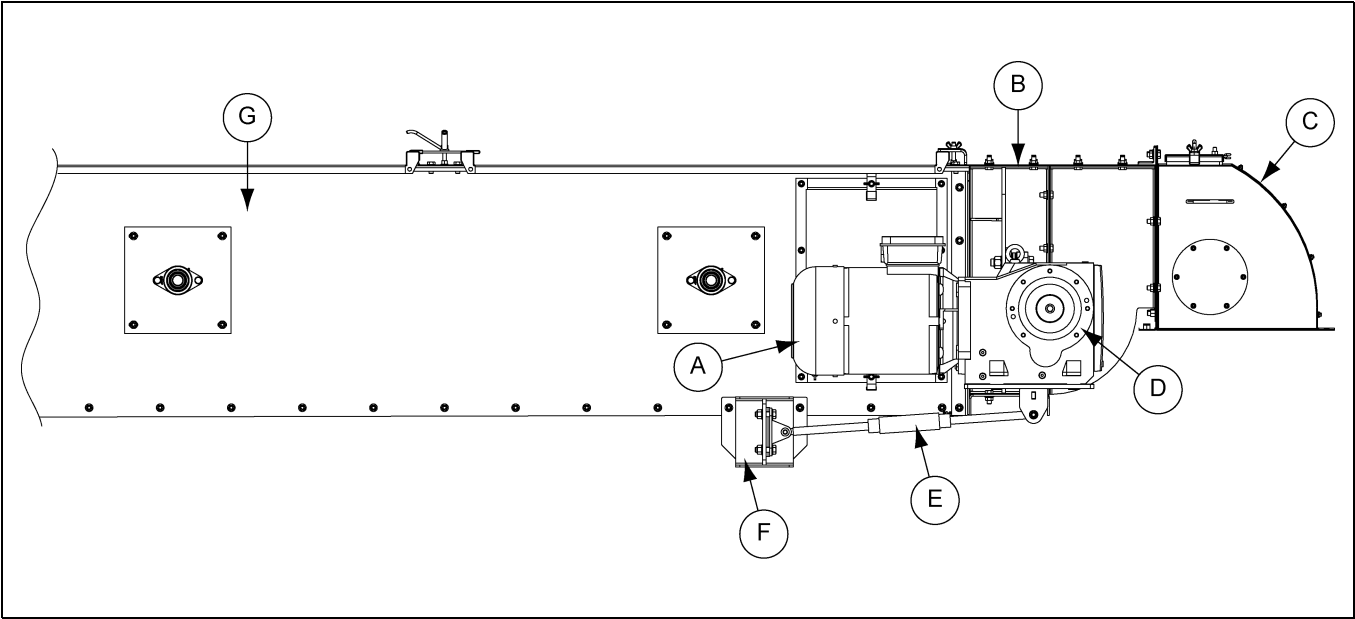


Figure 5A

Ref #	Description
A	Motor
B	Head Section
C	Hood
D	Reducer Drive
E	Torque Arm Turnbuckle Assembly
F	Torque Arm Bracket
G	Intermediate Inspection Section

Motor and Torque Arm II Reducer Installation

Reducer

1. To aid in the installation of the reducer onto the shaft (A), remove any protective coating film from the shaft (A). *(See Figure 5B.)*
2. Place key (B) in the keyway on the drive shaft (A).
3. Line up the keyway on reducer (E) with key (B) on shaft and slide the reducer drive onto the drive shaft (A).
4. Slide the washer (D) onto shaft and secure using the bolt (C). Once reducer drive is in place, fully tighten the bolt (C). *(See Page 47 for more details.)*

NOTE: For more detailed motor mounting details specific to the installation, refer to the manual provided with the motor.

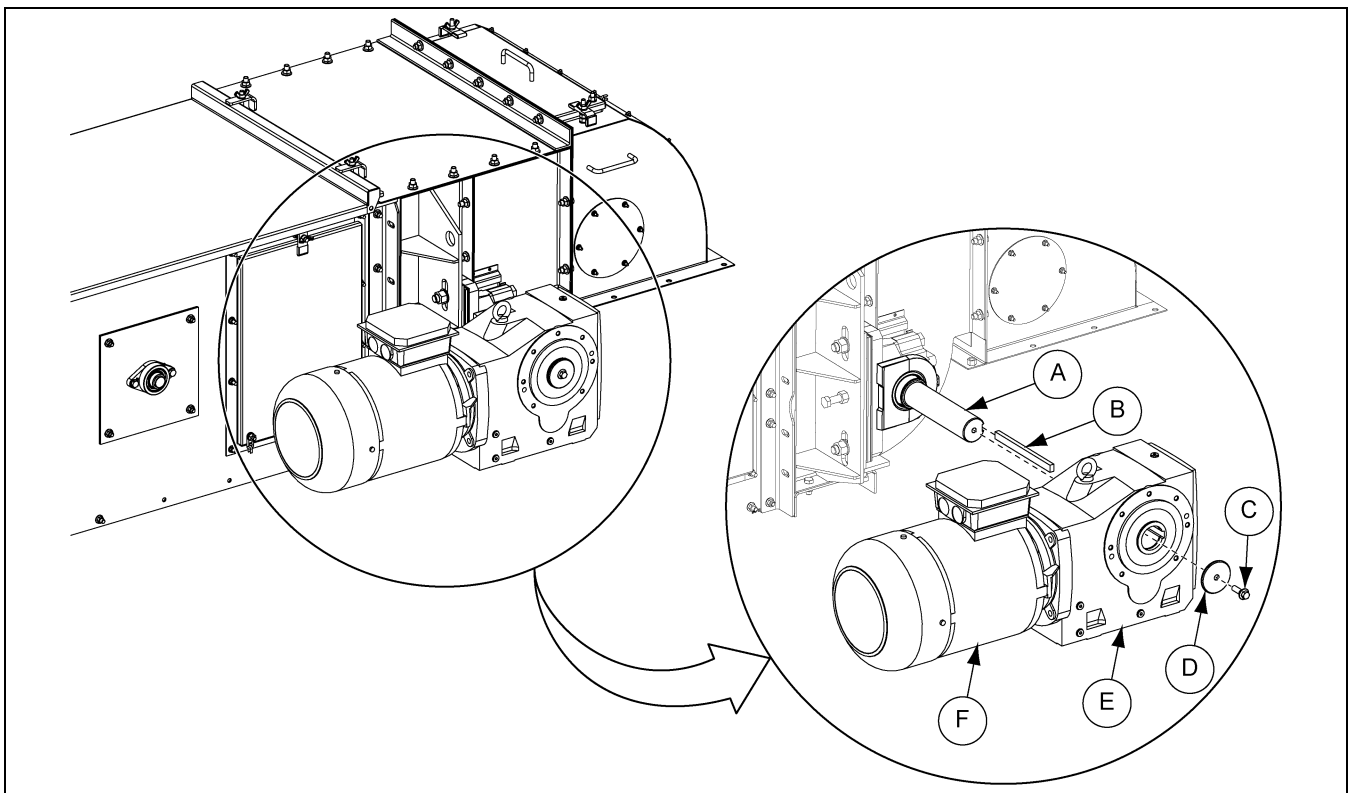


Figure 5B *Installing the Reducer to the Drive Shaft*

Ref #	Description
A	Conveyor Drive Shaft
B	Key
C	Bolt
D	Washer
E	Shaft Mount Reducer
F	Motor

Motor and Torque Arm II Reducer Installation (Continued)

Torque Arm Assembly

6. Install the torque arm (G) between the two (2) plates (H) that are located on the bottom of the reducer drive. Secure using bolt with washers and lock nuts. Attach the other end to the torque arm bracket (I) on the conveyor using two bolts, washers and lock nuts. Tighten the torque arm by turning the turnbuckle (E). Adjust the position of the reducer. (See Figure 5C.)

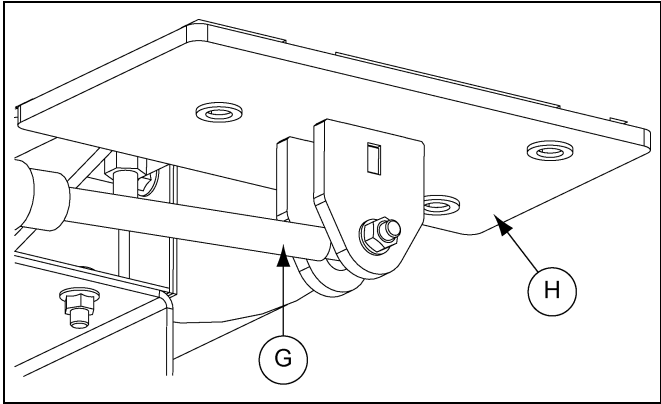


Figure 5C Torque Arm Plate

Ref #	Description
G	Torque Arm
H	Plates on Reducer Drive
I	Torque Arm Bracket
J	Torque Arm Assembly
K	Turnbuckle

Torque Arm Turnbuckle Assembly

7. The torque arm bracket (I) is mounted under the first intermediate section. Locate bracket by matching an existing set of holes in the intermediate side that allows the turnbuckle assembly to be as short as possible with the reducer in a vertical position. (See Figure 5D, Figure 5E and Figure 5F.)

NOTE: The holes in the intermediate side must be drilled out to 14.3 mm diameter. Attach with provided hardware.

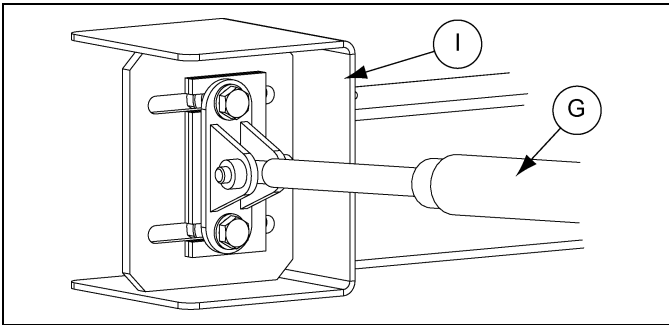


Figure 5D Torque Arm Bracket

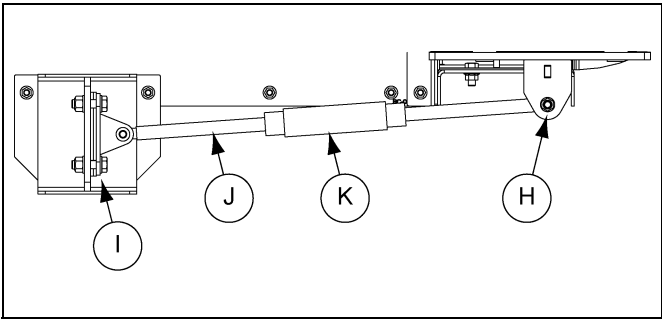


Figure 5E Torque Arm Assembly

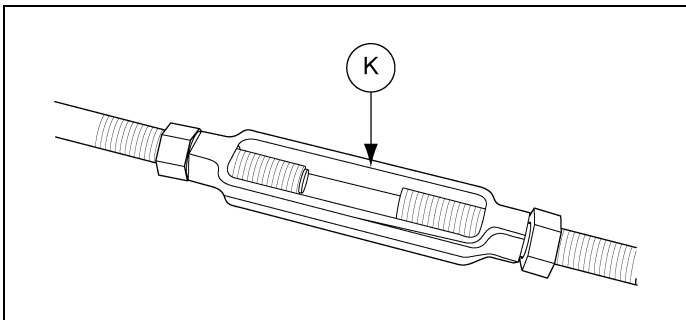


Figure 5F Turnbuckle

5. Motor Assembly

Lubricate Reducer Drive

8. Fill the shaft mount reducer with the manufacturer's recommended oil. ([See Page 47.](#))

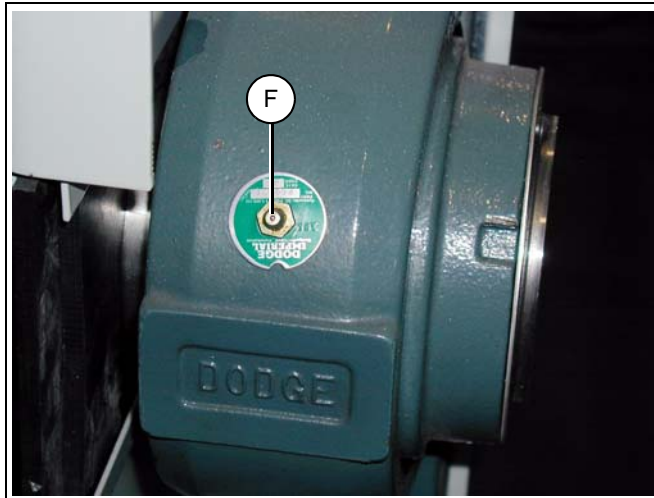


Figure 5G

Ref #	Description
F	Grease Bearing Housing

Lubricate Bearings

9. Grease bearings on head, tail and idlers. Lubricate bearings according to bearing manufacturer's recommendations. ([See Page 47.](#))

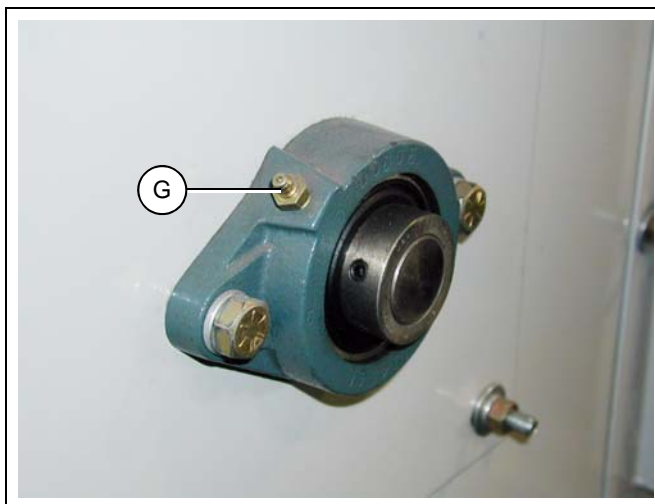


Figure 5H

Ref #	Description
G	Grease Idler Bearings

Finding Belt Centerline

- To find the belt centerline, measure the belt width at five (5) points. Starting near the end of the belt, measure the belt width in 250 mm intervals, marking them as you measure. Each measurement shall then be divided in two (2) and marked. Using a straight edge, draw a centerline using the points as a guide. (See [Figure 6A.](#))

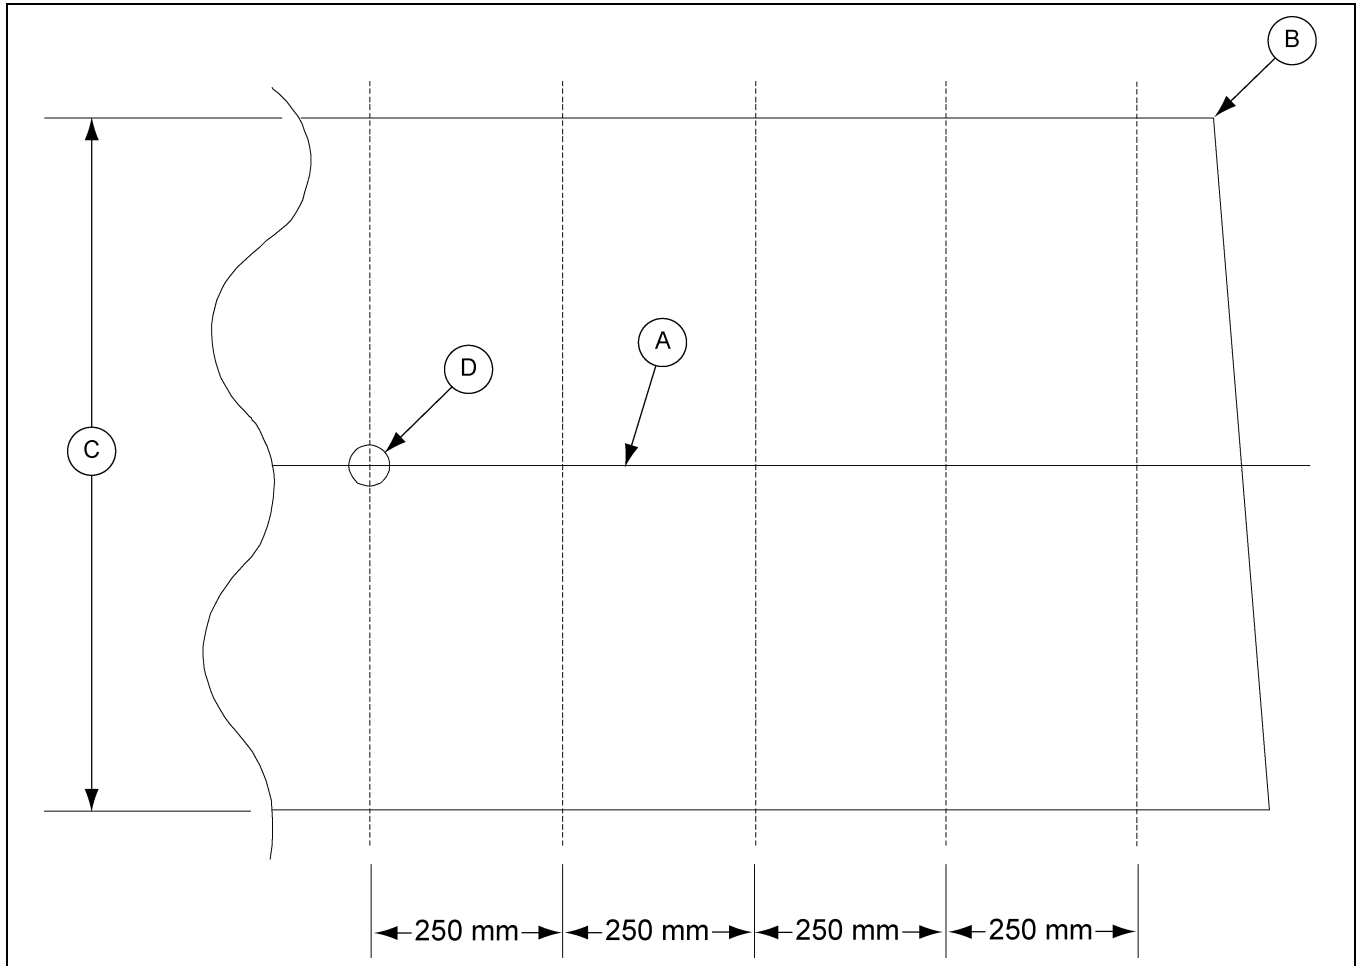


Figure 6A

Ref #	Description
A	Centerline
B	Belt End
C	Belt Width
D	Center Point of Width Measurements

6. Belting Assembly

Squaring the Belt End

1. A double arc method is used on establishing a cut line on the belt. After a centerline has been drawn, pick a point on the centerline about two (2) times the belt width. From this point, strike an arc across the width of the belt end. A nail may be used as a pivot point with twine used as the arm of the arc. Tie a marking tool (chalk, for example) to the end of the twine.
2. A second set of arcs is struck with the pivot point of the arc on centerline and close to the belt end. Where the two (2) arcs intersect each other are points on which a cut line is drawn. (See Figure 6B.)

NOTE: The second arc should be slightly less than half of the width of the belt.

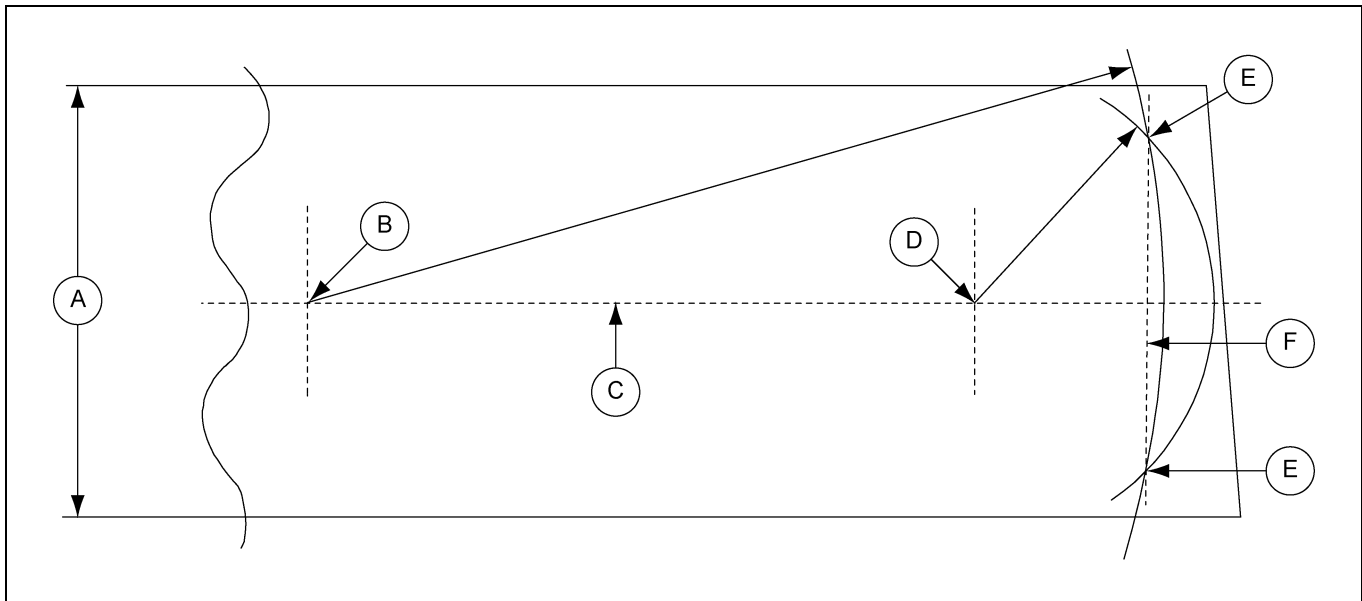


Figure 6B

Ref #	Description
A	Belt Width
B	Pivot Point of First Arc
C	Centerline
D	Pivot Point of Second Arc
E	Intersection Point
F	Cut Line

Check the Squareness of the Belt Cut

- To check for the accuracy of the cut made, measure lengthwise 1300 mm from each edge of the belt. Using a straight edge, draw a line diagonally across the belt. This should be done from the 1300 mm point to the end corner on the opposite side of the belt. Do the same procedure in reverse to form an "X". The intersection point of the two (2) lines of the "X" should be in line with the centerline of the belt. (See Figure 6C.)

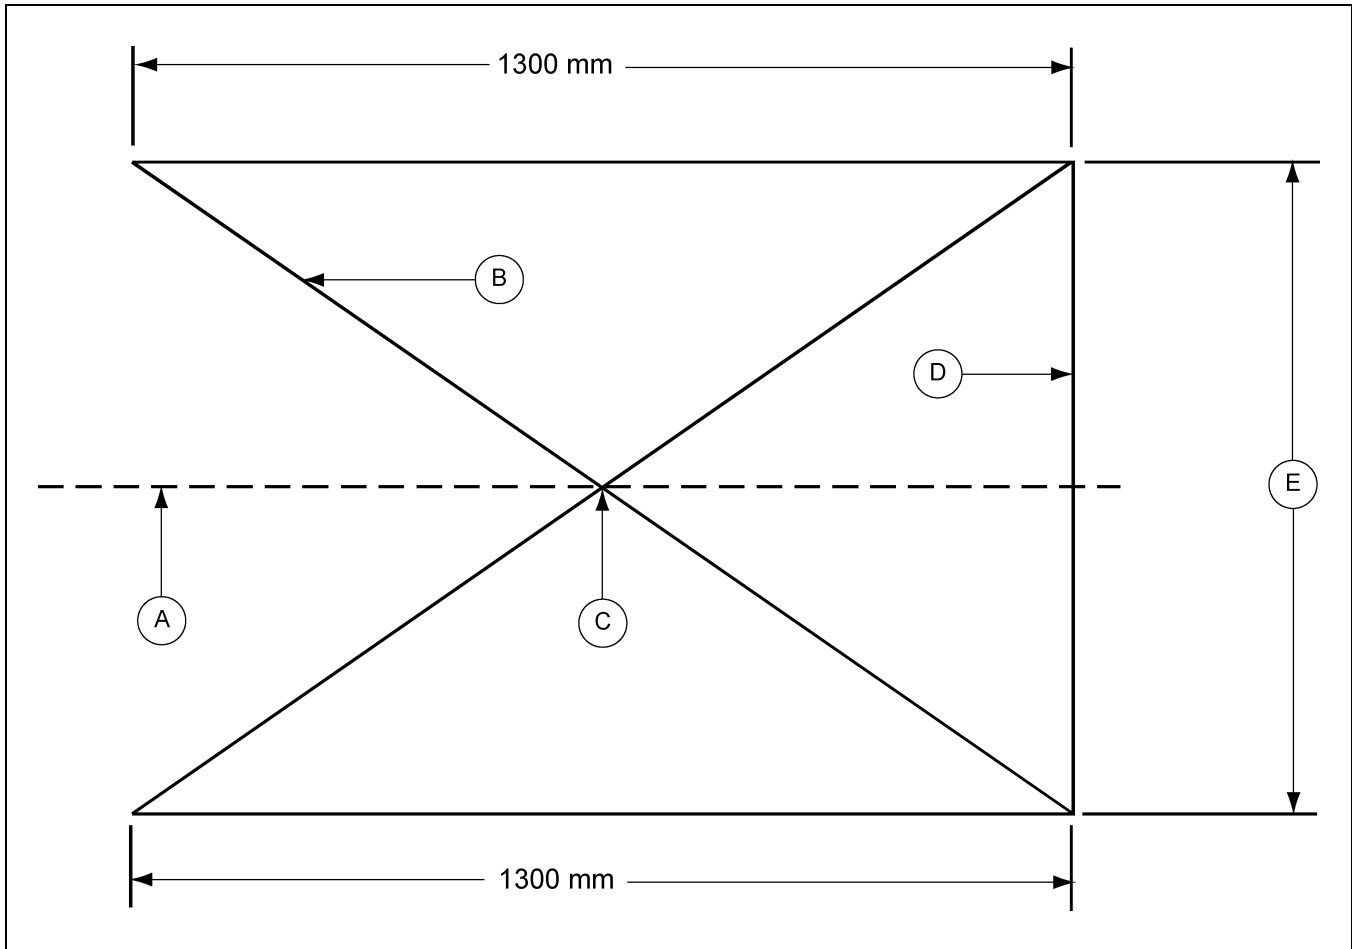


Figure 6C

Ref #	Description
A	Belt Centerline
B	Diagonal Line
C	Intersection Point
D	Cut Edge of Belt
E	Belt Width

6. Belting Assembly

Installation of Belt

1. Hand thread the belt through the conveyor with the tail section in a retracted position. Attach a tightening device to each end of the belt to prevent damage to the belt. Place a 50 mm x 300 mm piece of wood width wise on top of an intermediate section where the belt ends are to be brought together. Bring the belt seam together over the 50 mm x 300 mm piece of wood for a working surface to be used for splicing. (See [Figure 6D](#) and [Figure 6E.](#)) The belt splice can now be installed following step-by-step directions on [Pages 31-34.](#)

IMPORTANT: Install belting into tail end. Note the direction of the flippers on belt. Flippers are installed to aid in cleanout of tail shroud. (See [Figure 6E.](#))

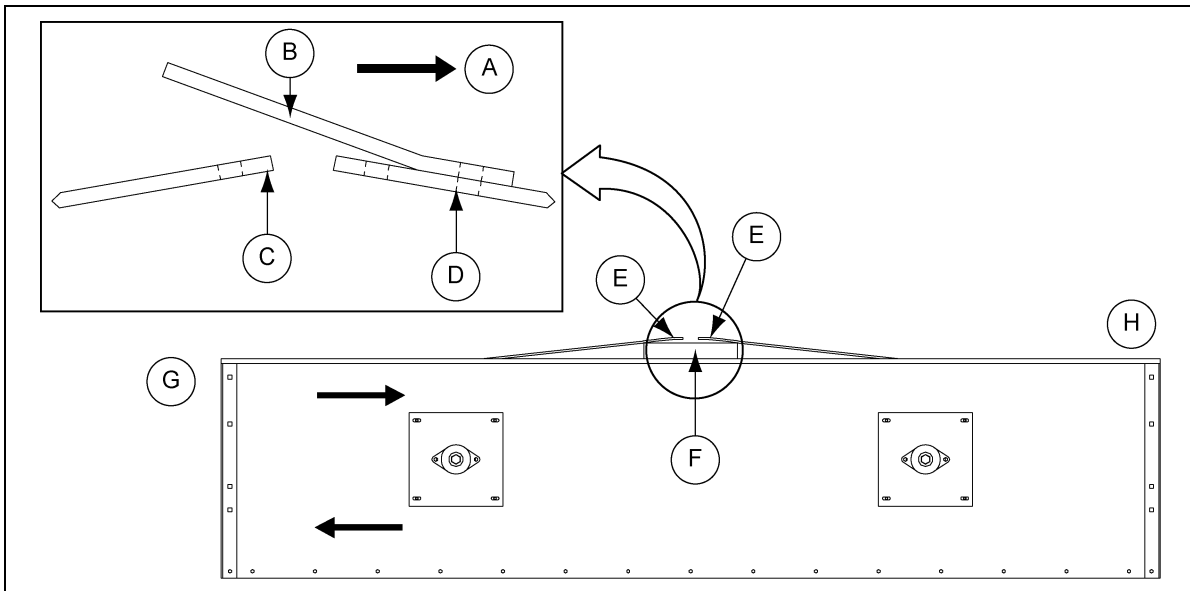


Figure 6D Intermediate Section with Covers Removed

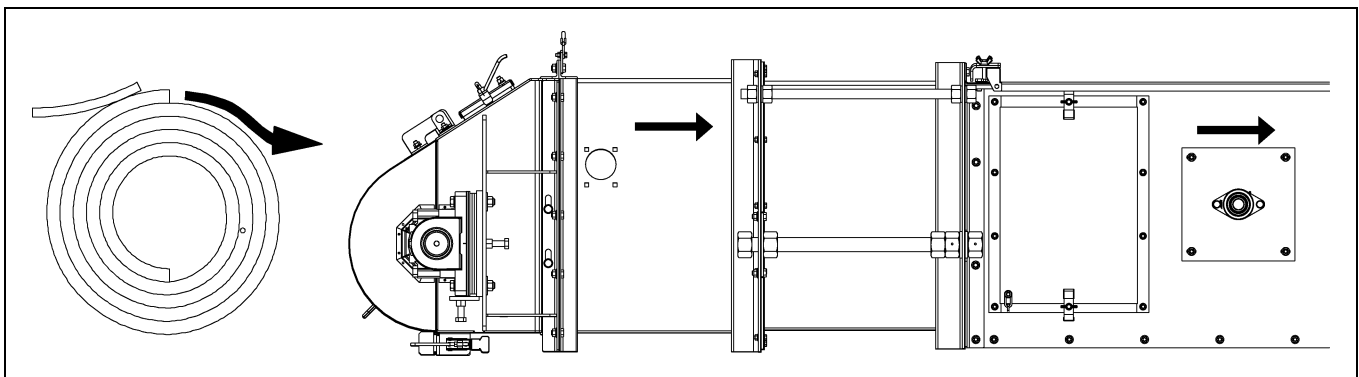


Figure 6E Detail Installation of Belting into Conveyor

Ref #	Description
A	Direction of Belt Travel
B	Factory Supplied Splice Protector (Flipper)
C	Field cut, square and punch holes in field this end of belt.
D	Install flippers on end belt that has been pre-punched and cut by factory.

Ref #	Description
E	Conveyor Belt Ends
F	50 mm x 300 mm Block of Wood
G	Tail End
H	Head End

Splicing the Belt

1. Support belt ends with wood plank. Nail Flexco Template in position with belt ends tight against lugs.
(See [Figure 6F](#).)

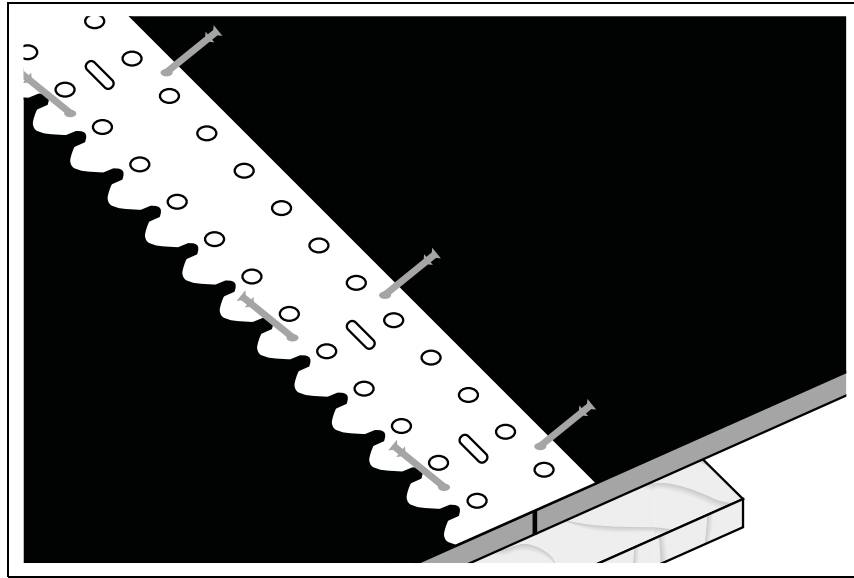


Figure 6F

2. Spray template holes with Flexco Silicone Lubricant. Punch or bore bolt holes. Remove template.
(See [Figure 6G](#) and [Figure 6H](#).)

NOTE: Splice protector design may vary due to type of conveyor. I.E. - Reversible conveyors and conveyors with low profile head discharges do not have splice protectors with tails (flippers).

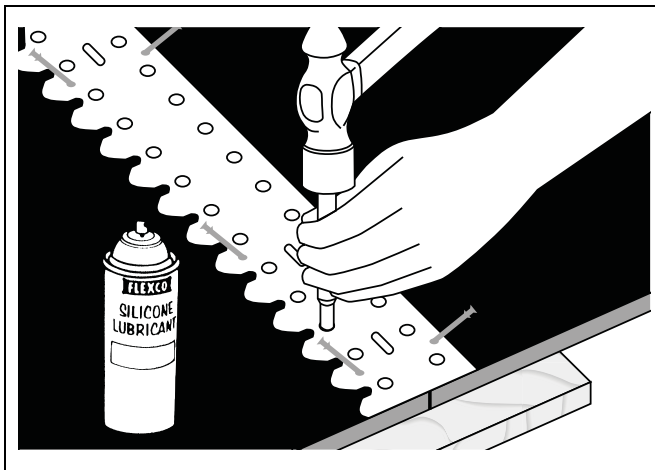


Figure 6G

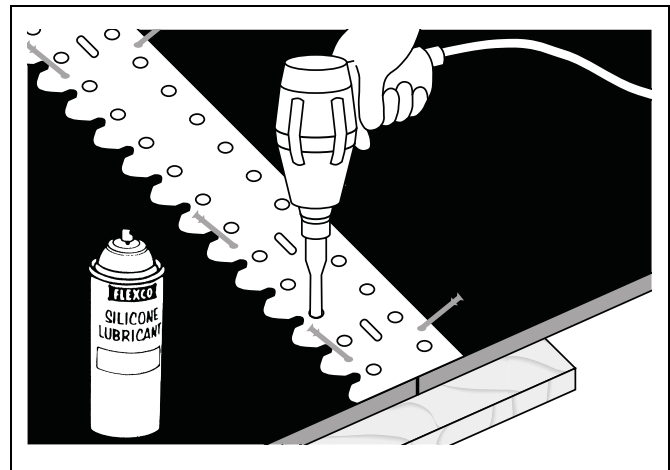


Figure 6H

6. Belting Assembly

Splicing the Belt (Continued)

3. To assemble bottom plate insert two (2) bolts and attach clip. *(See Figure 6I.)*
4. Fold one belt end back and insert bolts in one row of holes. *(See Figure 6J.)*
5. Align bolts with template teeth and place the other belt end over bolts. Remove template. *(See Figure 6K.)*
6. Place top plates over bolts using bolt horn. *(See Figure 6L.)*

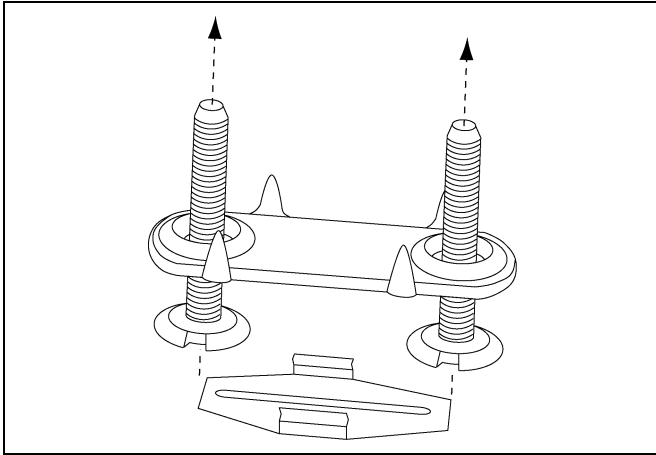


Figure 6I

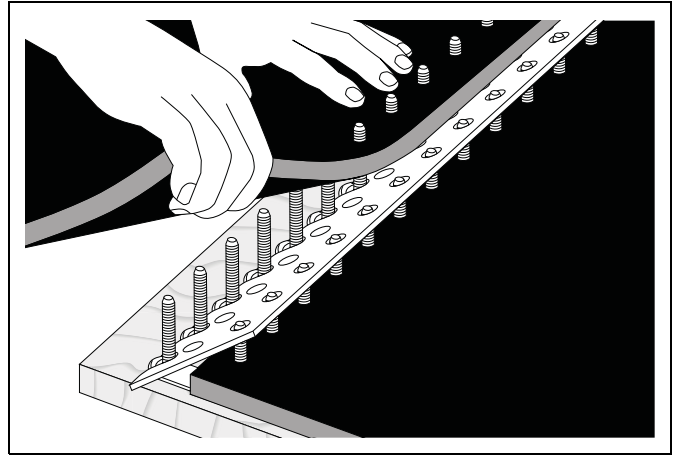


Figure 6K

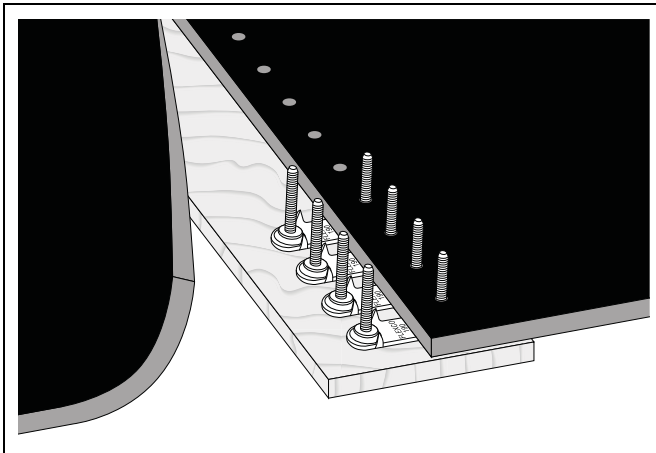


Figure 6J

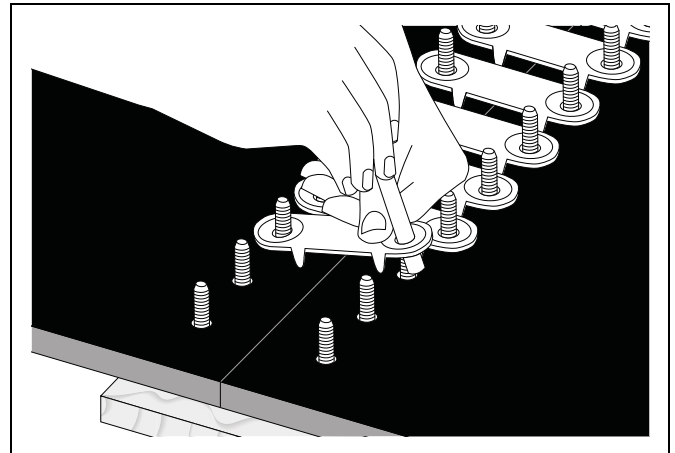


Figure 6L

Splicing the Belt (Continued)

7. Start nuts on bolts by hand. (See Figure 6M.)
8. Cut Flexco-Lok Tape 3-1/2 times the belt width and feed tape under top plates, under the bottom plates, then back under top plates. (See Figure 6N.)
9. Pull tape tight and hold in position by tightening a fastener at each end. Then tighten all other plates. (See Figure 6O.)
10. Tighten all nuts uniformly. **NOTE:** A Flexco Power Wrench used with an impact tool will speed this step considerably. (See Figure 6P.)

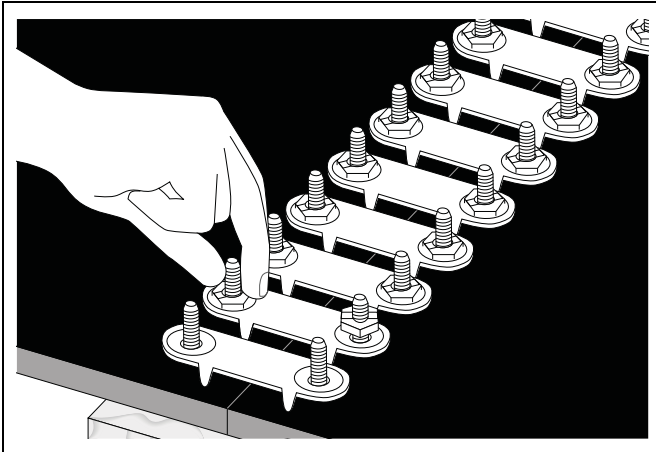


Figure 6M

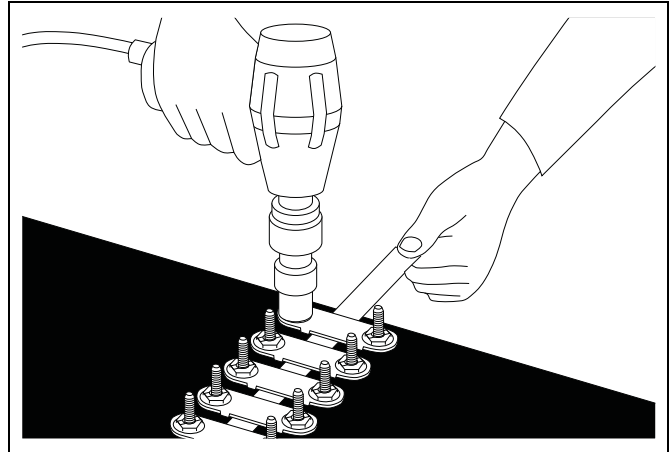


Figure 6O

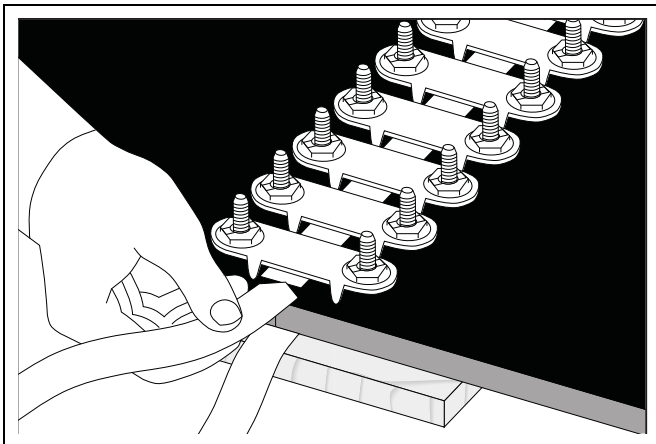


Figure 6N

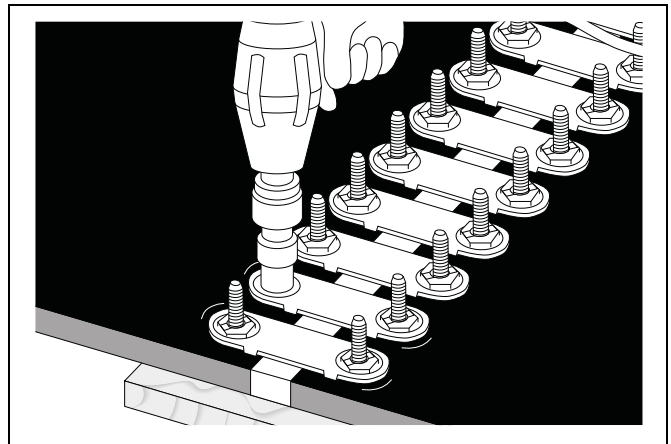


Figure 6P

6. Belting Assembly

Splicing the Belt (Continued)

11. Hammer plates in belt with wood block. Retighten nuts. (See Figure 6Q.)
12. Break off excess bolt ends using two (2) bolt breakers. Peen or grind bolts to finish. (See Figure 6R.)
13. Place flippers on belt. The flipper should be located so the tail of the flipper covers the splice. **Note direction of belt travel.** The flippers are evenly spaced across the belt with a 6.35 mm gap between them. There will be a larger gap between the outside flipper and the edge of the belt. (See Figure 6S.)
14. Punch or bore holes. Attach flippers using same connectors as splice. Repeat [Steps 10 on Page 33-12 above](#).
15. Finished splice.

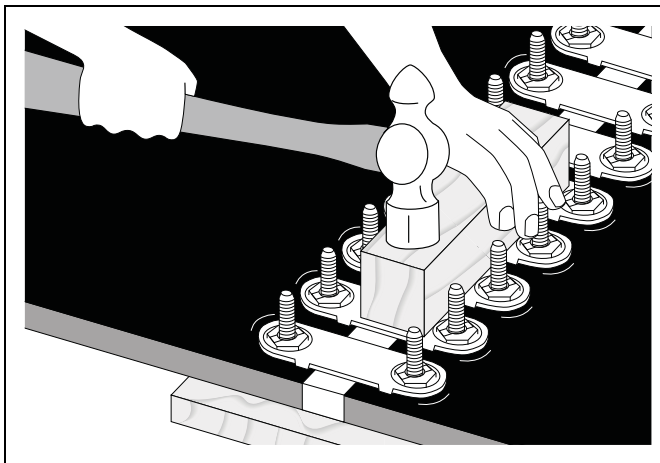


Figure 6Q

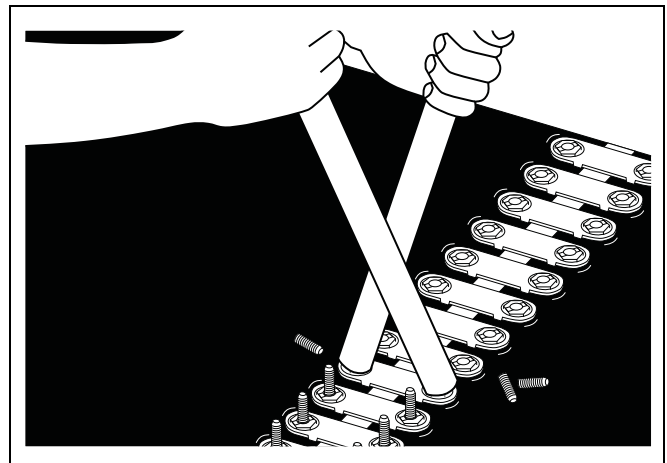


Figure 6R

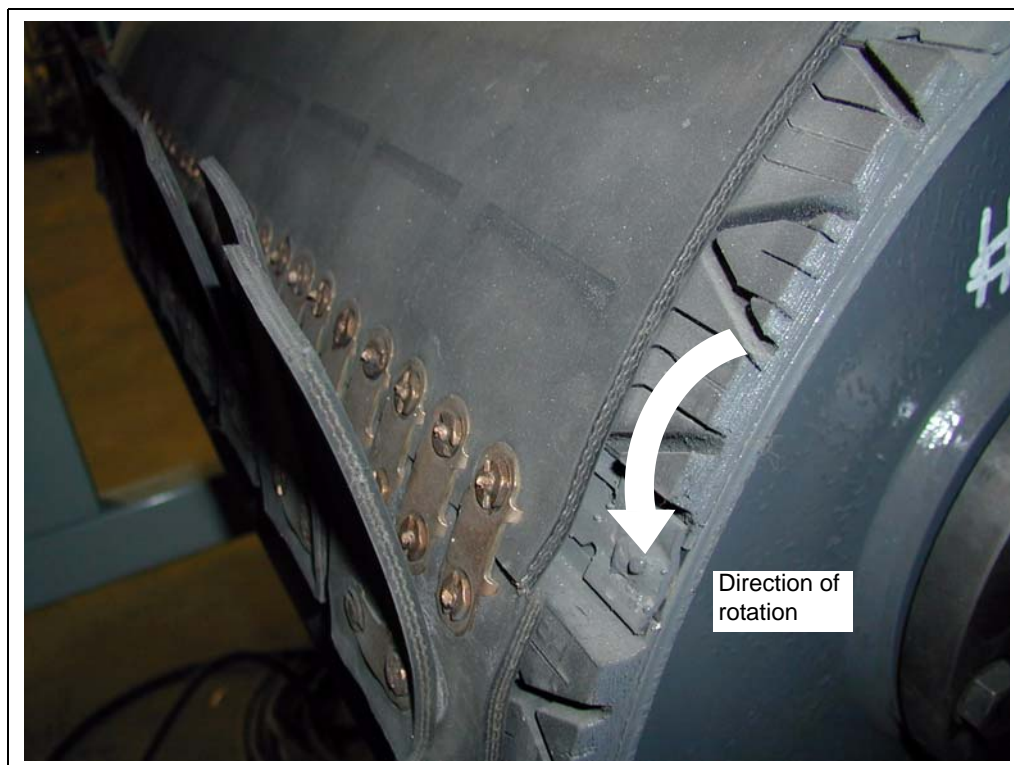


Figure 6S

Belt Tension

IMPORTANT: The belt tension should be checked every day of use for the first few days.

NOTE: After an hour of running, the belt should be retightened and thereafter checked at regular intervals. **Take-up rods are for tightening belt only. They are not to be used to adjust belt tracking.**

1. Conveyor belts stretch when new and must be checked at regular intervals. After approximately two (2) weeks of usage, checks of belt tension may be done at less frequent intervals.
2. After splice has been installed and 50 mm x 300 mm piece of wood is removed, belt is ready to be tightened.
3. The belt is tightened by turning the take-up rods located on the tail section. Make sure that they are adjusted equally to prevent misalignment. The conveyor belt should be tightened enough to prevent the belt from slipping on the drive pulley. When done adjusting take-up rods, tighten nuts against flanges to lock in place. (See Figure 6T and Figure 6U.)

NOTE: Do not over tighten belt. Over tightening can cause premature wear of bearings and shafts.

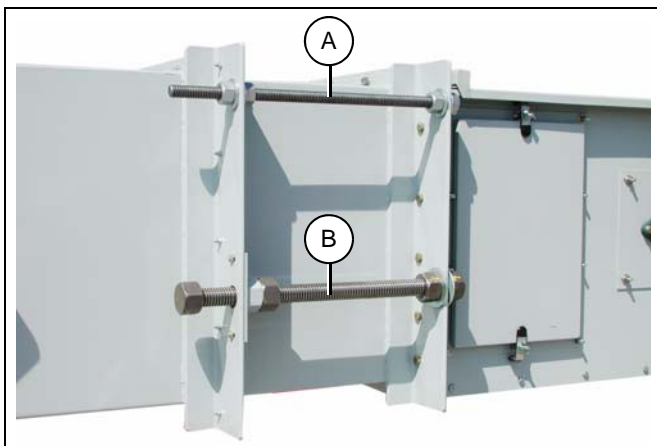


Figure 6T

Ref #	Description
A	Leveling Rod
B	Take-Up Rod
C	Nuts
D	Flanges
E	To tighten belt tension, adjust tail section in this direction.

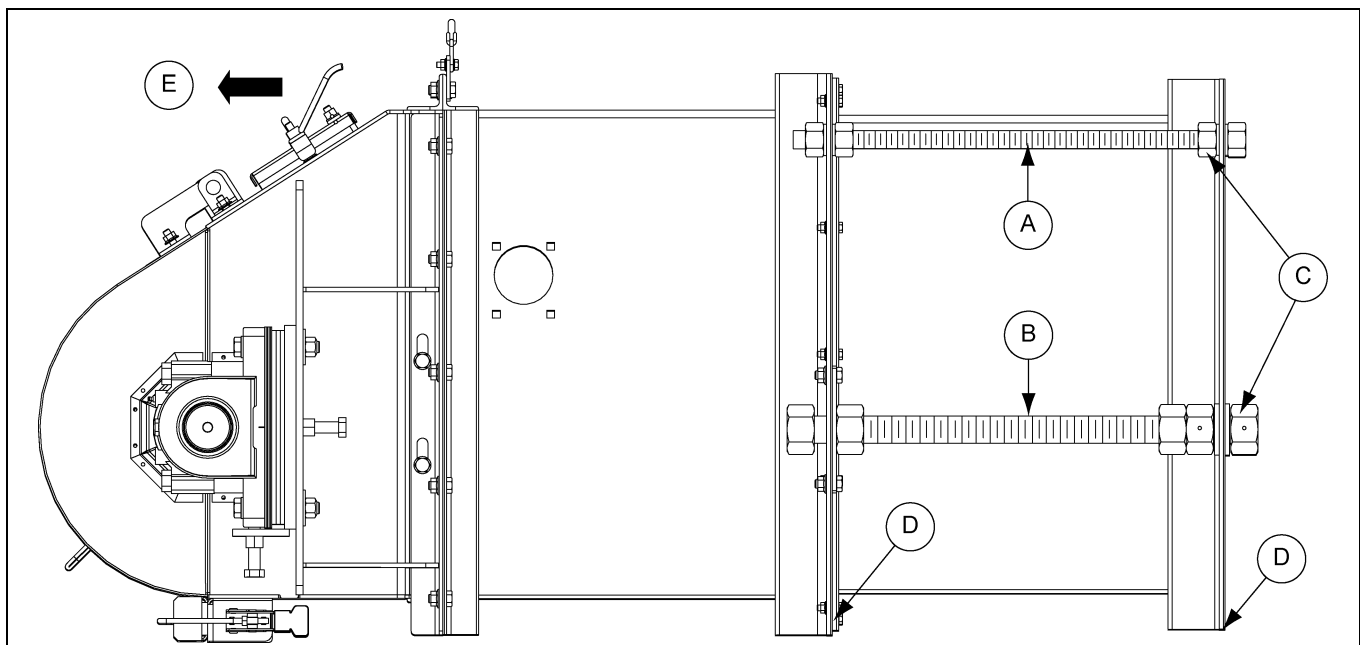


Figure 6U Tail Section

6. Belting Assembly

Belt Tracking

Squareness of the Conveyor

1. Before tracking procedure is begun, each section should be square and straight so there is no unequal weight distribution. Check conveyor intermediate sections for any extensive damage such as cave-in sides, etc. Idlers should be checked for looseness. If idlers are loose, re-center and tighten set screws on bearing lock collar.
2. After intermediate sections are bolted together, a chalk line should be strung along the sides of the conveyor, making sure that it is in a straight line. Loosening bolts on the intermediate frames will permit slight adjustment of the intermediate sections.
3. After conveyor has been installed, check to see if the unit is level (width wise). The conveyor must be level for proper belt tracking. (See Figure 6V.)

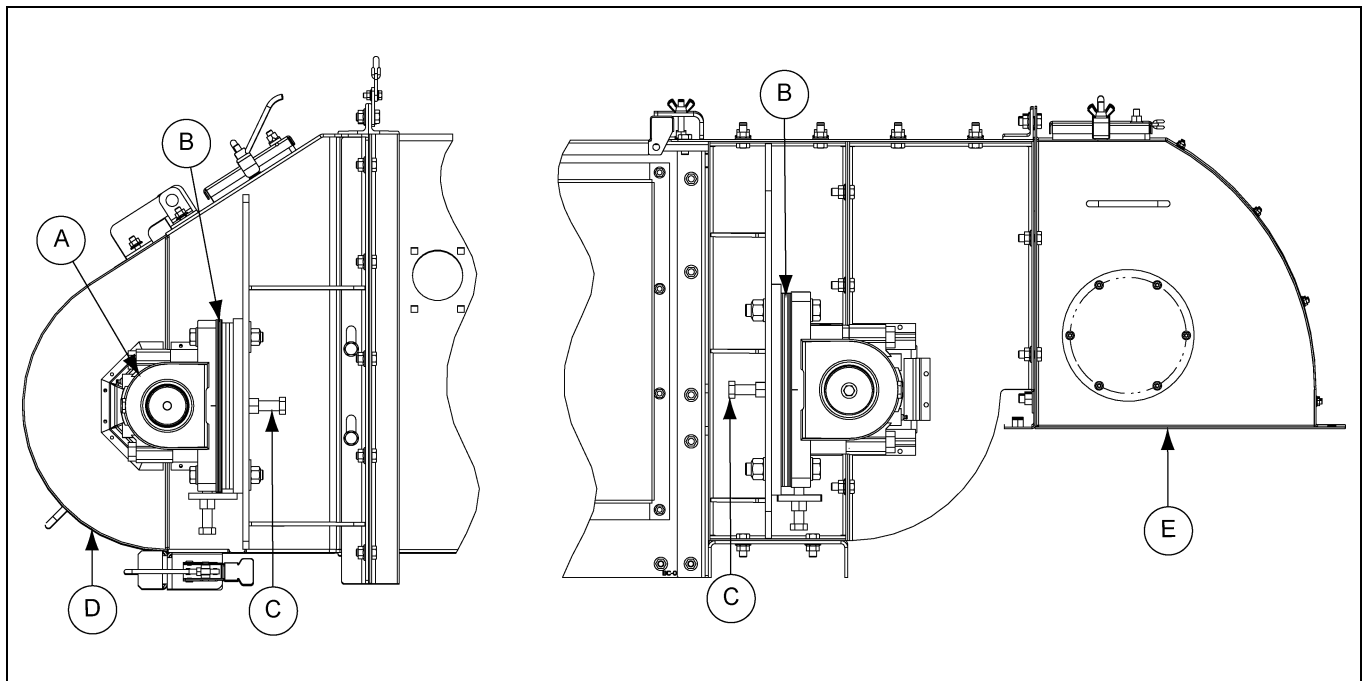


Figure 6V

Ref #	Description
A	Bearing
B	Shims
C	Bearing Adjustment Bolts
D	Tail Section
E	Head Section

Belt Tracking (Continued)

Tracking Adjustment

4. Belt tracking adjustment is initiated by moving the bearing adjustment bolts. These are located on both sides of the head and tail sections. Belt tracking adjustments are made by adding or removing shims under bearing as necessary. **DO NOT** use take-up rods to correct belt tracking. (See [Figure 6W](#) and [Figure 6X](#).)

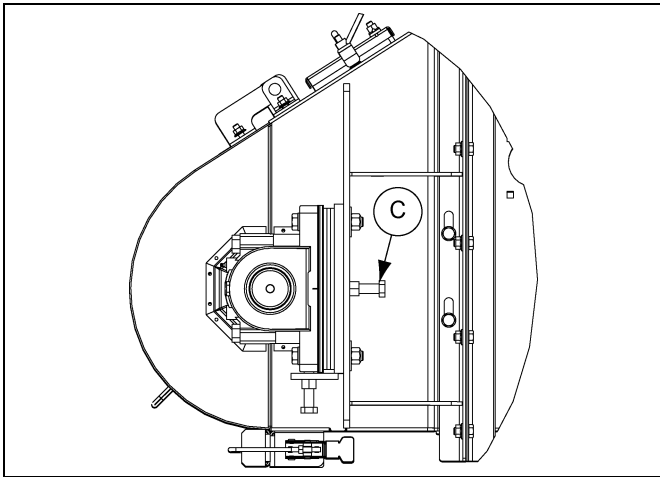


Figure 6W

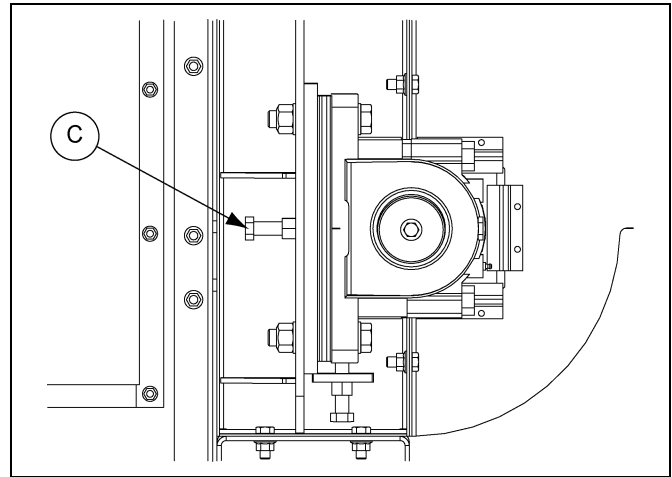


Figure 6X

5. Adjustment of the idlers is done by loosening eight (8) bolts. These bolts hold the bearings in place and are located on both sides of the conveyor sections (four (4) on each side). After loosening these bolts, the end of the idler can shift either forward or backward. (See [Figure 6Y](#).)

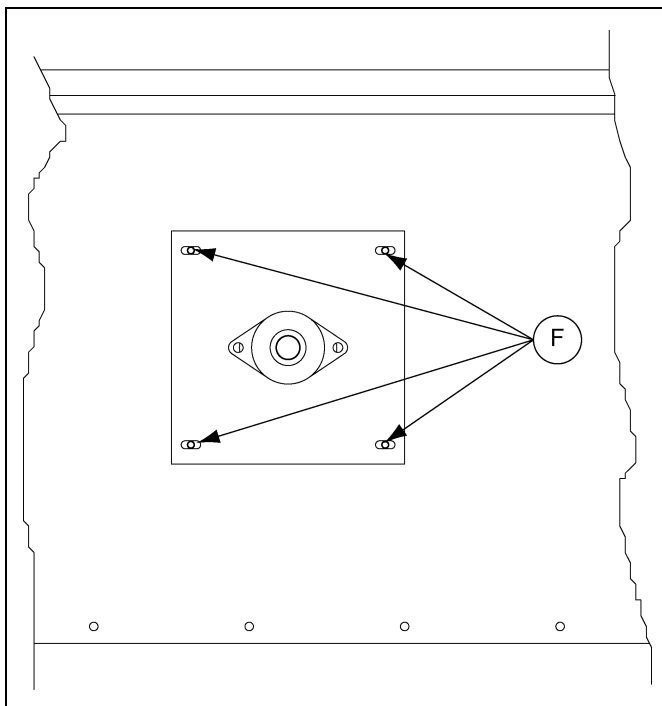


Figure 6Y

Ref #	Description
C	Bearing Adjustment Bolts
F	Loosen these four (4) nuts on both sides for adjustment.

Belt Tracking (Continued)

General Tracking/Training Procedures

6. Tracking the belt is a process of adjusting idlers, pulleys and loading conditions in a manner that will correct any tendencies of the belt to run other than true.
7. A normal sequence of training is to start with the top pulleys in the direction of belt travel. Start with the belt empty. After tracking is completed, run the belt with a full load and recheck tracking.
8. Tracking adjustment is done while the belt is running and should be spread over some length of the conveyor preceding the region of trouble. The adjustment may not be immediately apparent, so permit the belt to run for several minutes and at least three (3) full belt revolutions after each idler adjustment to determine if additional “tracking” is required.
9. After adjustment, if the belt has overcorrected, it should be restored by moving back the same idler and not by shifting additional idlers or rollers.
10. If the belt runs to one side at a particular point or points on the conveyor structure, the cause will probably be due to the alignment or leveling of the structure or to the idlers and pulleys immediately preceding that particular area or a combination of these factors.
11. If a section or sections of the belt run off at all points along the conveyor, the cause is possibly in the belt itself, in the belt not being joined squarely or in the loading of the belt. With regard to the belt, this will be due to camber. Its condition should improve after it is operated under full load tension. It is a rare occasion when a cambered belt (less than 1/2%) needs to be replaced.
12. When replacing a used belt, go through the system and square and level all rollers, idlers, pulleys and bed before training a new belt.
13. The basic and primary rule which must be kept in mind when tracking a conveyor belt is simple, “**THE BELT MOVES TOWARD THAT END OF THE ROLL/IDLER IT CONTACTS FIRST**”.
14. The reader can demonstrate this for himself very simply by laying a small dowel rod or round pencil on a flat surface in a skewed orientation. If a book is now laid across the dowel rod and gently pushed by one’s finger in a line directly away from the experimenter, the book will tend to shift to the left or right depending upon which end of that dowel rod the moving book contacts first. (See Figure 6Z.)

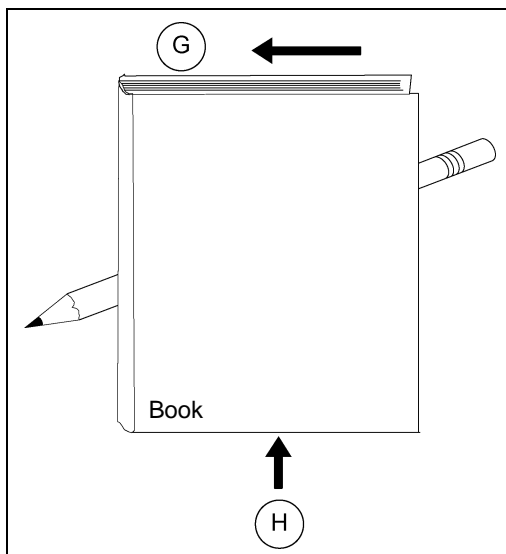


Figure 6Z

Ref #	Description
G	Book moves like this direction
H	Push

Spouting

- Below are the recommended and incorrect ways to attach spouting to load the conveyor. Contact the GSI Material Handling Department if there are any questions about loading conditions.

Grain stream centered on the belt. Grain moving in the same direction and at the same speed as the belt. (See Figure 7A.)

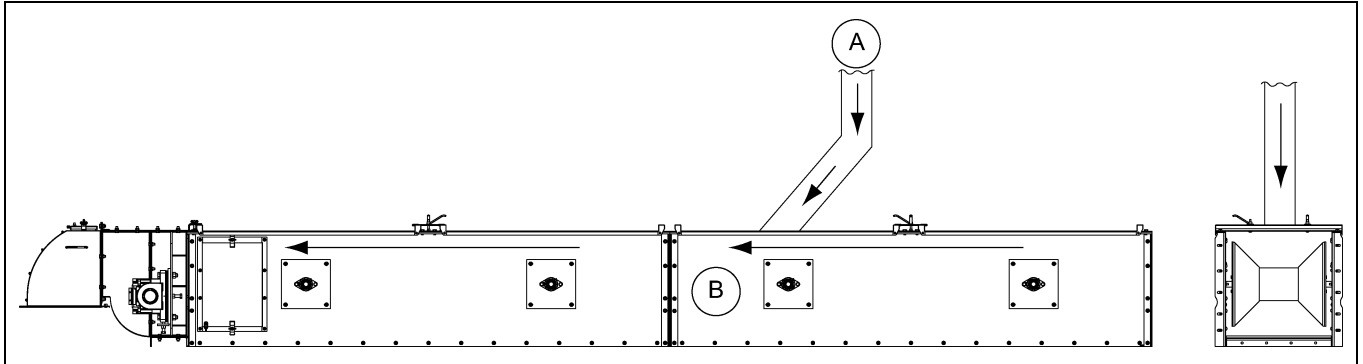


Figure 7A Recommended

This causes excessive wear of belting and off center loading on belt which causes spillage. This method of loading results in grain tumbling on belt. (See Figure 7B.)

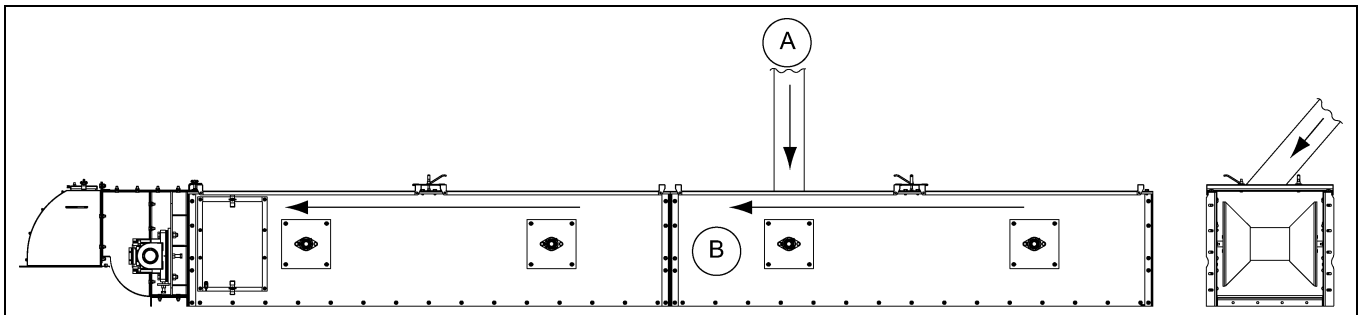


Figure 7B Avoid

Grain should be loaded in the same direction of belt travel and at the same speed. (See Figure 7C.)

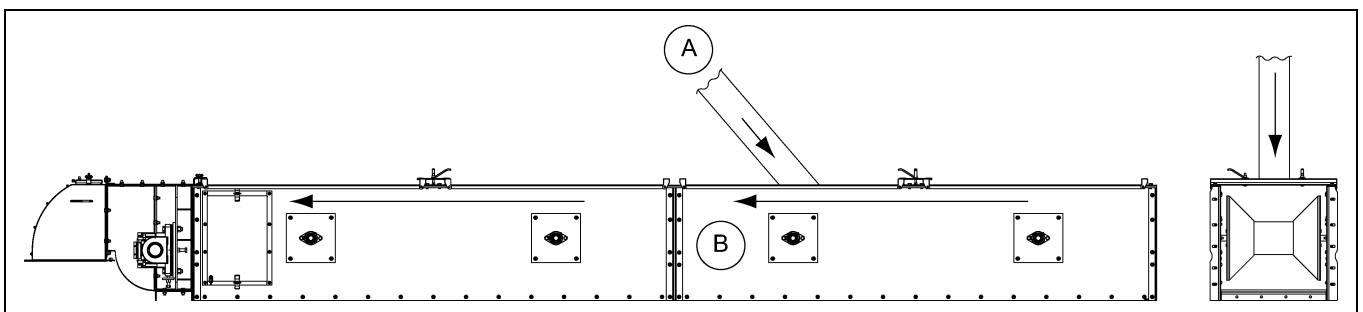


Figure 7C Incorrect

Ref #	Description
A	Grain Flow
B	Belt Direction

Spouting Location

1. Grain should come out from storage and make a 90° turn by use of baffles and load straight into the conveyor at approximately a 45° angle. (See Figure 7D.)

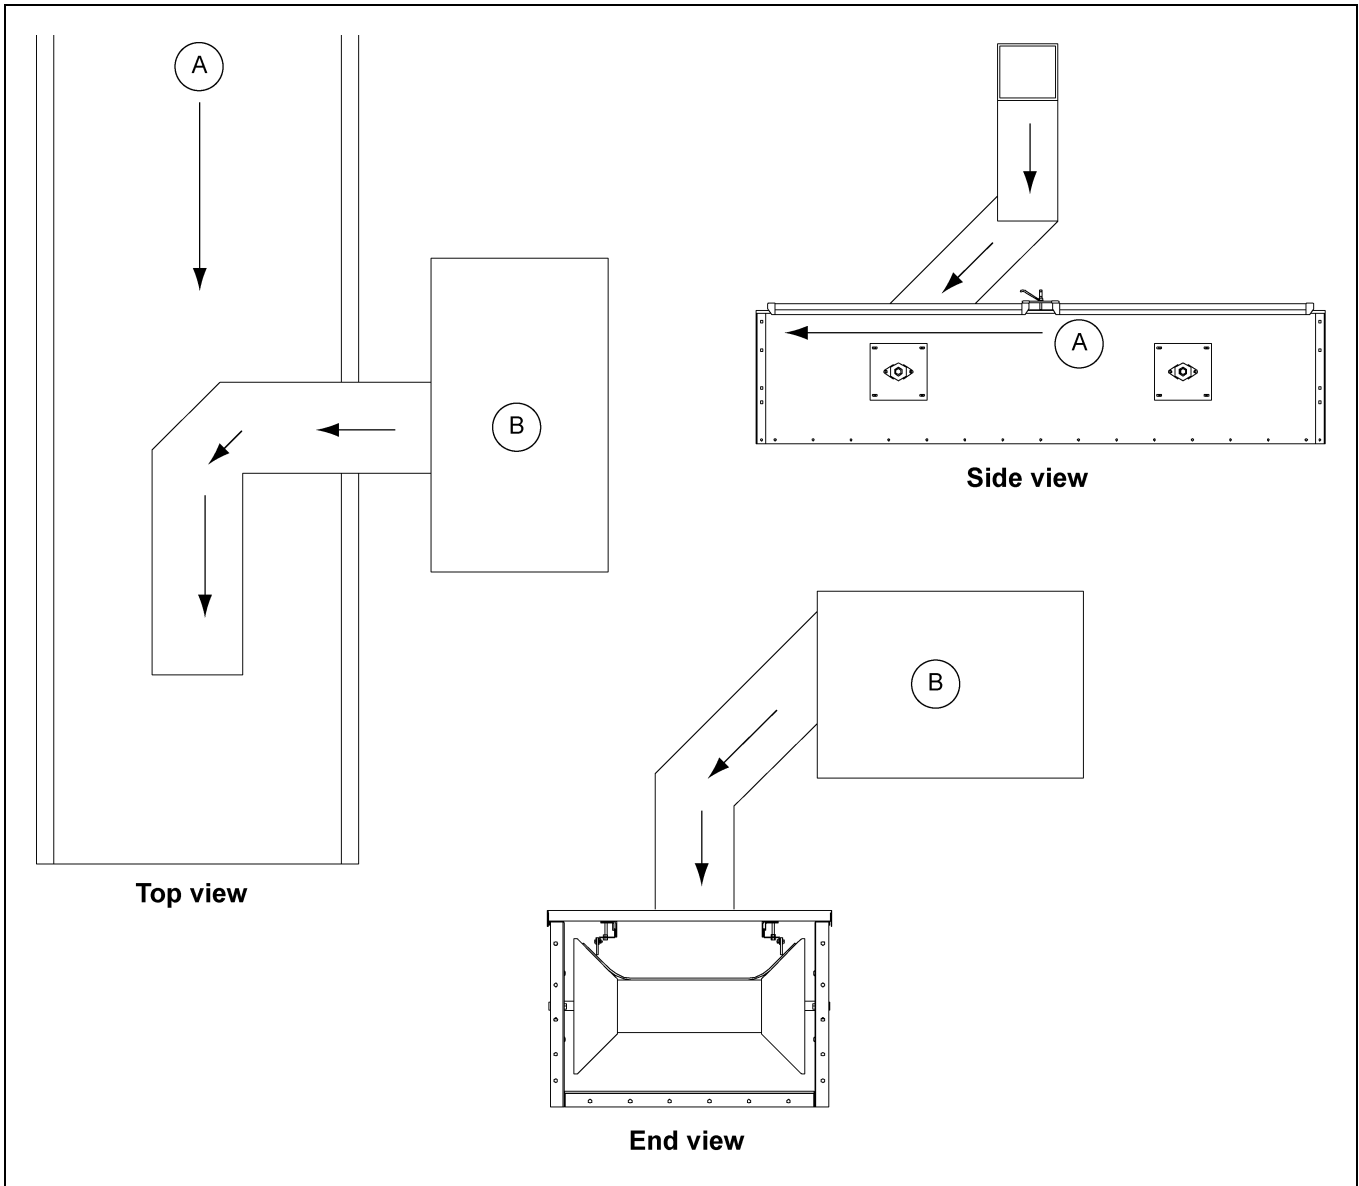


Figure 7D

Ref #	Description
A	Belt Direction
B	Pit or Bin

Belt Conveyor Loading

1. Start with a light load and gradually work up to the load that the conveyor was designed to handle. Check chutes to see that the material is being directed onto the center of the belt. Off-center load will affect belt alignment in that the belt will run off center. A central load will maintain belt alignment.
2. The loading point of a belt conveyor is the critical point. Here the conveyor receives its major abrasion and practically all of its impact. The ideal condition is to have the material flow onto the belt at the same speed and direction of travel as the belt, with a minimum amount of impact and to load the belt on center.
3. Adjust the skirts to prevent side spillage of material and to keep the load central on the belt. The maximum distance between skirt boards customarily is two thirds the width of a trough belt.
4. The skirt lengths are designed to stop side spillage. The material should also be at rest on the belt before it reaches the end of the skirt. If the material is still tumbling as it passes the skirt end, the skirts should be lengthened.

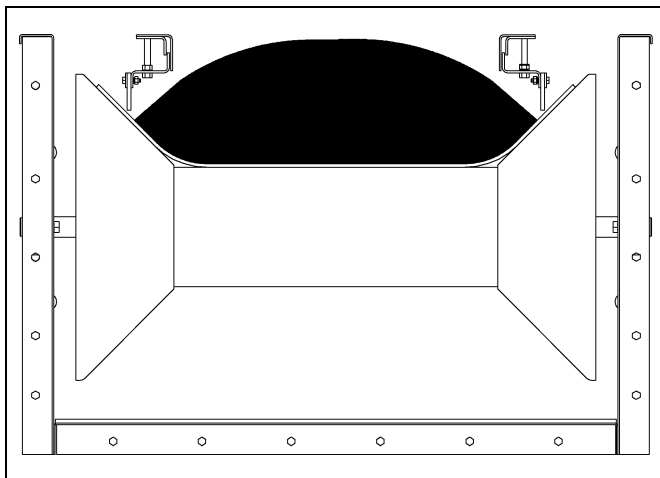


Figure 7E CORRECT - Evenly Loaded

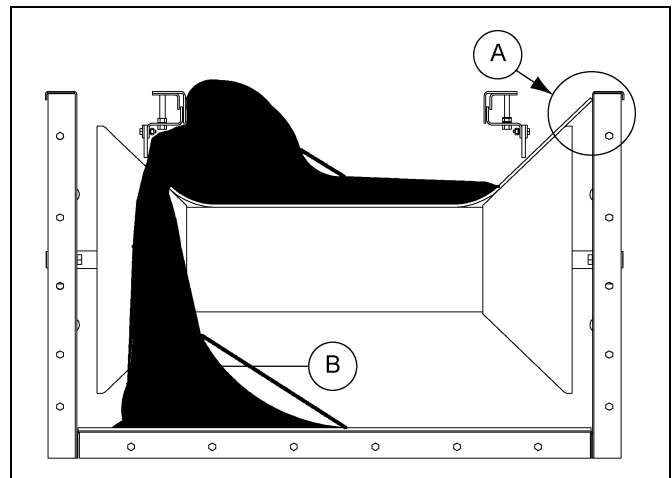


Figure 7G Effect of Improper Loading

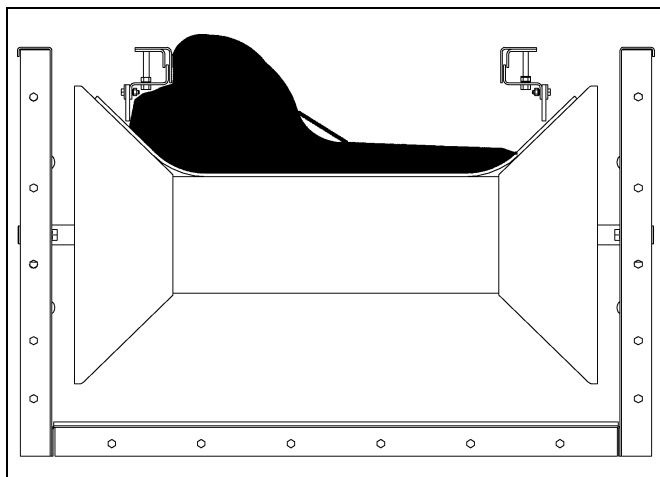


Figure 7F INCORRECT - Loaded to One Side

Ref #	Description
A	Belt Shift
B	Spill

Motion Sensor Option (Whirligig - WG1-4B)

Installation Instructions



Always observe lock out and tag out procedures before, during and after installation.

Do not remove the Whirligig cover. The rotating components under the cover could cause serious injury.

1. Shaft ends are pre-drilled and tapped from the factory.
2. Thread the Whirligig onto the machine shaft using 19 mm (M12) open ended wrench and suitable thread locking adhesive (loctite or similar). (See Figure 8A.)
3. Install the sensor to the Whirligig base plate. Two (2) sets of pre-drilled holes are provided for M800 sensor. Fit the sensor to leave an approximate 2 mm gap between sensor face and cover. A universal bracket (WGB18/30) is supplied for fitting 18 mm or 30 mm sensors.
4. Connect the sensor in accordance with manufacturer's instructions and observe all relevant electrical and safety regulations.
5. Fix the flexible strap securely to the static structure (if required).

TIP: The M800 speed switch and system function can be tested by placing a thin metal plate between the sensor and the cover of the Whirligig. When installing other industry standard sensors, leave a small gap between the sensor and the Whirligig cover for this purpose.

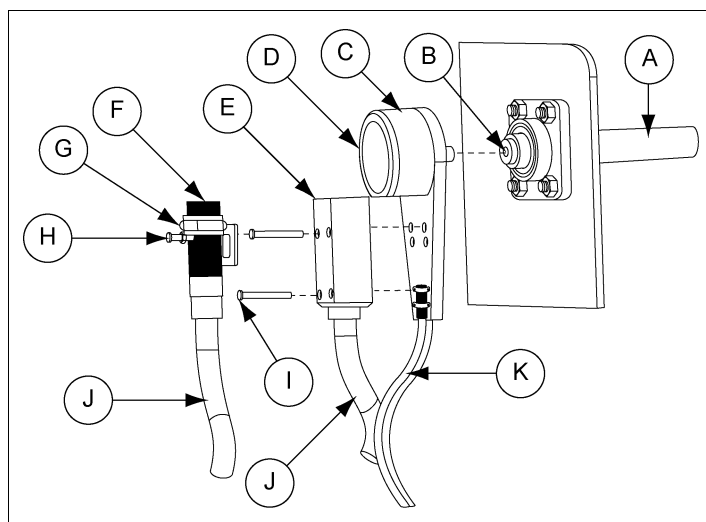


Figure 8A

Ref #	Description
A	Monitored Shaft
B	Tap Shaft for M12 UNC Centered
C	Cover
D	Whirligig
E	M800 Sensor
F	Cylindrical Sensor

Ref #	Description
G	18/30 mm Bracket (Supplied)
H	10 mm Screws Four (4) (Supplied)
I	50 mm Screws Four (4) (Supplied)
J	Flexible Conduit
K	Flexible Strap

Pressure Plug Switch Option

Monitor MODEL MFB, Part # 7-8150 - Neoprene diaphragm, standard switch.

Electrical Installation

- Hazardous Location Precautions:** Observe the regulations listed in the National Electrical Code regarding equipment in hazardous locations. In particular, ensure power is disconnected whenever the cover is removed, ensure the cover and case mating surfaces are not damaged and upon completion, ensure cover screws are secure and that no gaskets or sealer has been used between the cover and case surfaces.
- Output Contacts:** Route wires through the conduit entrance. No power is required to operate the diaphragm bin monitors. All electrical installation is done directly to the terminals of the output switch. The switch terminals are designated with "1" (COM - common), "2" (N.C. - normally closed) and "3/4" (N.O. - normally open). When the diaphragm is not sensing material, the switch is in the normal condition (i.e. N.C. contact is closed to COM and N.O. contact is open to COM). However, when the diaphragm senses material, the switch is opposite from normal condition (i.e. N.C. contact is open to COM and N.O. contact is closed to COM). Be sure to comply with all electrical specifications listed within this bulletin.

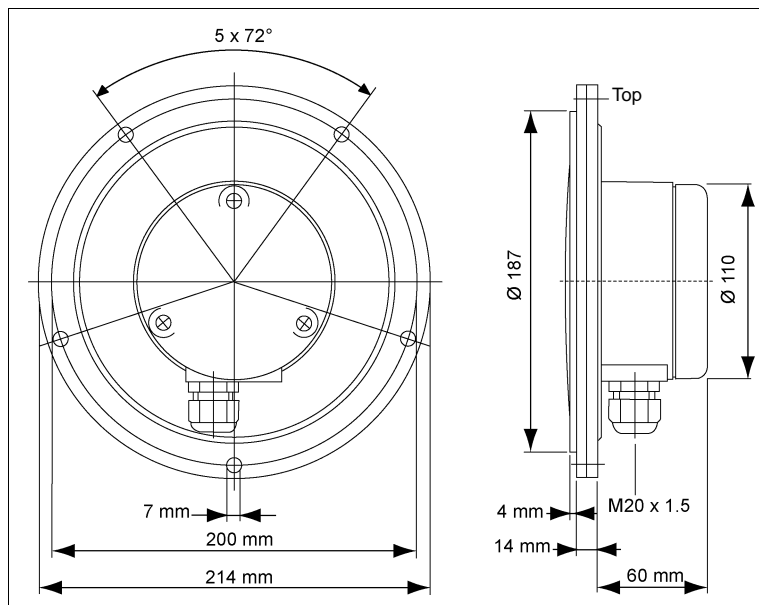


Figure 8B Model MFB



Figure 8C Wiring Diagrams

9. Start-Up

Starting Conveyor

1. Check for and remove any tools or debris that may have been left in the conveyor during installation.
2. Tighten the take-up rods on the tail section equally. The belt should be tightened sufficiently to prevent slippage between the drive pulley and belt and to conform to the crown on the crowned head pulley.
3. Install covers after belt has been trained.

Secure Shroud During Maintenance

NOTE: While accessing the tail pulley, the tail shroud may either be removed or pivoted in an upright position. If pivoted upright, then secure the shroud by placing the chain in the slot as shown in Figure 9A.

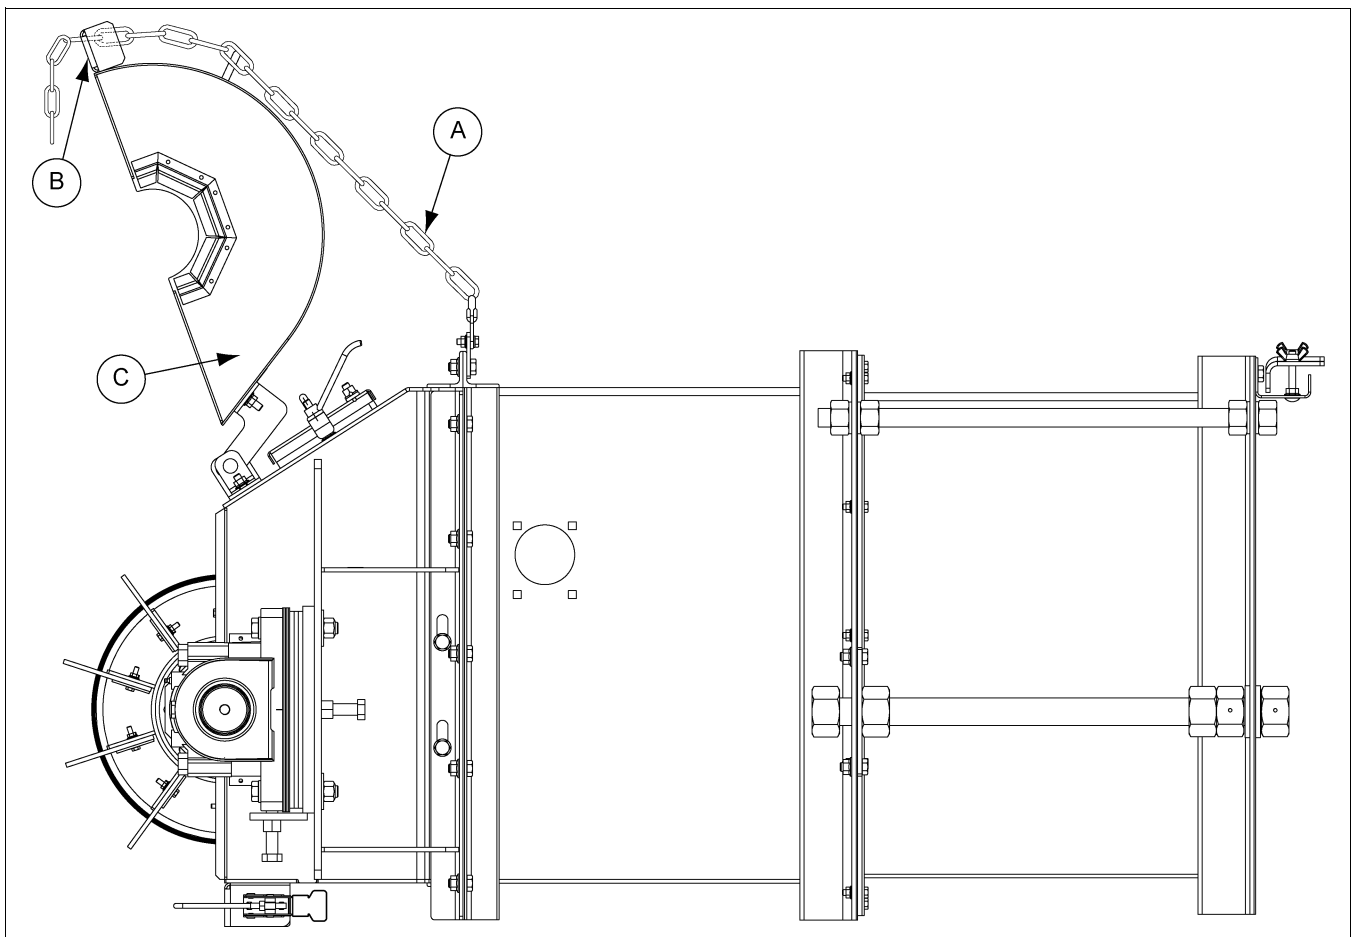


Figure 9A

Ref #	Description
A	Chain
B	Slot
C	Shroud



Before any maintenance is performed on the conveyor, power must be shut OFF and locked out to prevent accidental start-up.

The care and maintenance section is provided with the intention of helping to extend the useful life of the unit. Like all equipment, the useful life of the conveyor is greatly reduced if not used wisely and well-maintained.

Please follow the next few simple steps to ensure the safety and longevity of the equipment.

1. Check all bearings and moving parts daily during use.
2. Lubricate bearings according to bearing manufacturer's recommendations. *(See Page 47.)*
3. Follow manufacturer's recommendations for gear reducer lubrication and maintenance. *(See Page 47.)*
4. Inspect the V-belts periodically for proper tension and wear. V-belts should be replaced as necessary. If replacement or tension adjustment is required, please refer to the shaft mount reducer assembly section *on Page 24.*
5. The belting and belt idlers should be checked periodically for wear and damage. Should replacement of these components be required, contact the manufacturer.

Bearings

Lubricate bearings at regular intervals. If one bearing is re-lubricated, all other bearings should also be lubricated. Do not over lubricate as this will destroy bearing seals.

Welding

Welding on or to the conveyor may cause damage to both the conveyor and its electrical system. If welding is necessary, precautions should be taken to protect the conveyor. Should it be necessary to fasten anything to the conveyor permanently, careful consideration should be given to methods of maintenance, removal and replacement of the conveyor and/or its parts.

Motor

Connect the conveyor motor to a power source according to the motor manufacturer's instructions and recommendations. To avoid injury it is recommended that a certified electrician perform the motor wiring. A shut off switch should be placed near the motor so that the system may easily be shut down to help prevent accidents during maintenance. It is important to check proper motor shaft rotation before installing drive belts.

Support

Include adequate support for the conveyor assembly to be installed at intervals no greater than 3048 mm. It is recommended that supports be installed at vertical portions of flanges leaving bottoms of intermediate sections clear. By attaching supports in this manner, the removable bottoms are unobstructed for ease of replacement. Support legs are available as an option.

Storage

If the unit is to be inactive for an extended period, the following procedures are recommended.

1. Thoroughly clean the unit.
2. Loosen the V-belt tension to relieve the stress placed on the bearings and shafts of the drive and tail sections.
3. Lubricate shafts and drive chain components with a good grade of light machine oil.

11. Troubleshooting

Troubleshooting Guide

Problem	Problem	Solution
Conveying belt drifts sideways.	<ol style="list-style-type: none"> 1. Belt not properly tracked. 2. Belt splice not square. 3. Material not placed on center of belt. 4. Machine is not straight. 5. Machine not level. 6. Material build-up on pulleys. 	<ol style="list-style-type: none"> 1. Track belt over pulleys. 2. Check splice squareness, re-splice. 3. Direct material through loader and spouting. 4. Check machine alignment with chalk line or string. 5. Check and level sections. 6. Clean pulleys, retrack belt.
Material build-up on idler pulley, drive pulley or between sections and belt.	<ol style="list-style-type: none"> 1. Material getting under belt. 2. Loader not being used. 	<ol style="list-style-type: none"> 1. Remove build-up from pulleys and sections. 2. Track conveying belt. 3. Check machine alignment and levelness. 4. Eliminate point(s) where material may be entering under belt. 5. Use loader to position material on center of belt. All material must be directed through hopper.
Lack of capacity.	<ol style="list-style-type: none"> 1. Conveying belt slippage. 	<ol style="list-style-type: none"> 1. Tighten so belt conforms to crowned pulleys.

Information regarding the torque arm, roller bearings and pillow blocks can be downloaded from the Baldor website.

Go to www.baldor.com/support/product_manuals.asp

Enter the required manual number into the search field. See list below.

MN1601 - Dodge Torque-Arm II Speed Reducer Installation

MN3014 - Dodge ISN Spherical Roller Bearing

NOTES

Limited Warranty - EME Grain Products

The GSI Group, LLC. ("GSI") warrants products which it manufactures, to be free of defects in materials and workmanship under normal usage and conditions for a period of 12 months from the date of shipment (or, if shipped by vessel, 14 months from the date of arrival at the port of discharge). If, in GSI's sole judgment, a product is found to have a defect in materials and/or workmanship, GSI will, at its own option and expense, repair or replace the product or refund the purchase price. This Limited Warranty is subject to extension and other terms as set forth below.

Warranty Enhancements:

The warranty period for the following products is enhanced as shown below and is in lieu of (and not in addition to) the above stated warranty period. (Warranty Period is from date of shipment.)

	Product	Warranty Period
Storage	Grain Bin Structural Design <ul style="list-style-type: none"> • Sidewall, roof, doors, platforms and walkarounds • Flooring (when installed using GSI specified floor support system for that floor) • Hopper tanks (BFT, GHT, NCHT, and FCHT) 	5 Years
	Dryer Structural Design - (Tower, Portable and TopDry) <ul style="list-style-type: none"> • Includes (frame, portable dryer screens, ladders, access doors and platforms) 	5 Years
	All other Dryer parts including: <ul style="list-style-type: none"> • Electrical (controls, sensors, switches and internal wiring) 	2 Years
Conditioning	All Non-PTO Driven Centrifugal and Axial Fans	3 Years
	Bullseye Controllers	2 Years
	Bucket Elevators Structural Design	5 Years
	Towers Structural Design	5 Years
Material Handling	Catwalks Structural Design	5 Years
	Accessories (stairs, ladders and platforms) Structural Design	5 Years

Conditions and Limitations:

THERE ARE NO WARRANTIES THAT EXTEND BEYOND THE LIMITED WARRANTY DESCRIPTION SET FORTH HEREIN; SPECIFICALLY, GSI DISCLAIMS ANY AND ALL OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE IN CONNECTION WITH: (I) ANY PRODUCT MANUFACTURED OR SOLD BY GSI, OR (II) ANY ADVICE, INSTRUCTION, RECOMMENDATION OR SUGGESTION PROVIDED BY AN AGENT, REPRESENTATIVE OR EMPLOYEE OF GSI REGARDING OR RELATED TO THE CONFIGURATION, INSTALLATION, LAYOUT, SUITABILITY FOR A PARTICULAR PURPOSE, OR DESIGN OF SUCH PRODUCTS.

The sole and exclusive remedy for any claimant is set forth in this Limited Warranty and shall not exceed the amount paid for the product purchased. This Warranty only covers the value of the warranted parts and equipment, and does not cover labor charges for removing or installing defective parts, shipping charges with respect to such parts, any applicable sales or other taxes, or any other charges or expenses not specified in this Warranty. GSI shall not be liable for any other direct, indirect, incidental or consequential damages, including, without limitation, loss of anticipated profits or benefits. Expenses incurred by or on behalf of a claimant without prior written authorization from the GSI warranty department shall not be reimbursed. This warranty is not transferable and applies only to the original end-user. GSI shall have no obligation or responsibility for any representations or warranties made by or on behalf of any dealer, agent or distributor. Prior to installation, the end-user bears all responsibility to comply with federal, state and local codes which apply to the location and installation of the products.

This Limited Warranty extends solely to products sold by GSI and does not cover any parts, components or materials used in conjunction with the product, that are not sold by GSI. GSI assumes no responsibility for claims resulting from construction defects, unauthorized modifications, corrosion or other cosmetic issues caused by storage, application or environmental conditions. Modifications to products not specifically delineated in the manual accompanying the product at initial sale will void all warranties. This Limited Warranty shall not extend to products or parts which have been damaged by negligent use, misuse, alteration, accident or which have been improperly/inadequately maintained.

Notice Procedure:

In order to make a valid warranty claim a written notice of the claim must be submitted, using the RMA form, within 60 days of discovery of a warrantable nonconformance. The RMA form is found on the OneGSI portal.

Service Parts:

GSI warrants, subject to all other conditions described in this Warranty, Service Parts which it manufactures for a period of 12 months from the date of purchase unless specified in Enhancements above.

(Limited Warranty - EME Grain Products_ revised 01 October 2020)

This equipment shall be installed in accordance with the current installation codes and applicable regulations, which should be carefully followed in all cases. Authorities having jurisdiction should be consulted before installations are made.



1004 E. Illinois St.
Assumption, IL 62510-0020
Phone: 1-217-226-4421
Fax: 1-217-226-4420
www.gsiag.com

