



Fig. 3 - Move J1-06 to J2-08

Fig. 4 - Add jumper from J1-01 to J1-06

Towers only: The load controls have been changed to operate better and to avoid nuisance shutdowns. Load switch wire moved from J1-06 to J2-08 (extra input #2) (see Fig. 1& 3) and J1-06 must be jumped to J1-01 (+12VDC) see Fig. 4.