



## Caulking Instructions for Laminated Sidewall Sheets Only (72'-156')

To help keep the moisture out between the laminated sidewall sheets, it is necessary to apply caulking over each set of stiffener holes and at the ends of laminated sidewall sheet.

1. Apply a piece of caulking (1) over the stiffener holes (4) on the first sidewall sheet (3).
2. Apply caulking (2) around the vertical seam holes at both ends of the sidewall sheet (3) before laminating it together with another sidewall sheet (3).

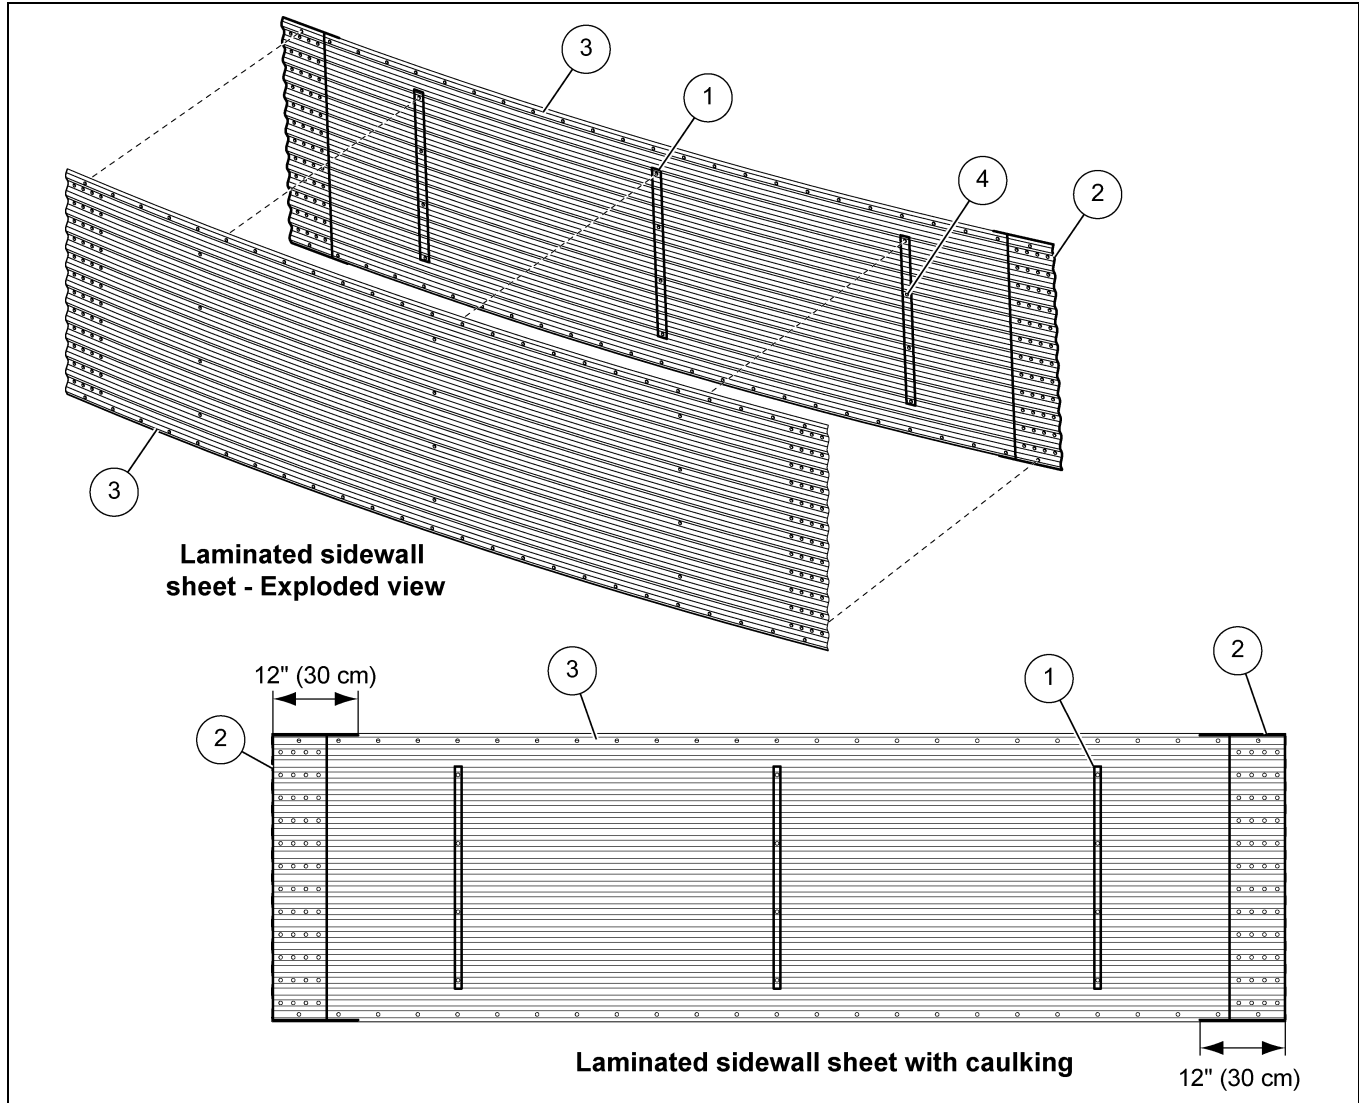


Figure 1 Caulking for Laminated Sidewall Sheets

Ref #	Part #	Description
1	S-10716	Sealant, Caulking 1/8" x 1-1/4"
2	S-4458	Sealant, Caulking 1/8" x 1/4"

Ref #	Description
3	Laminated Sidewall
4	Stiffener Holes

