
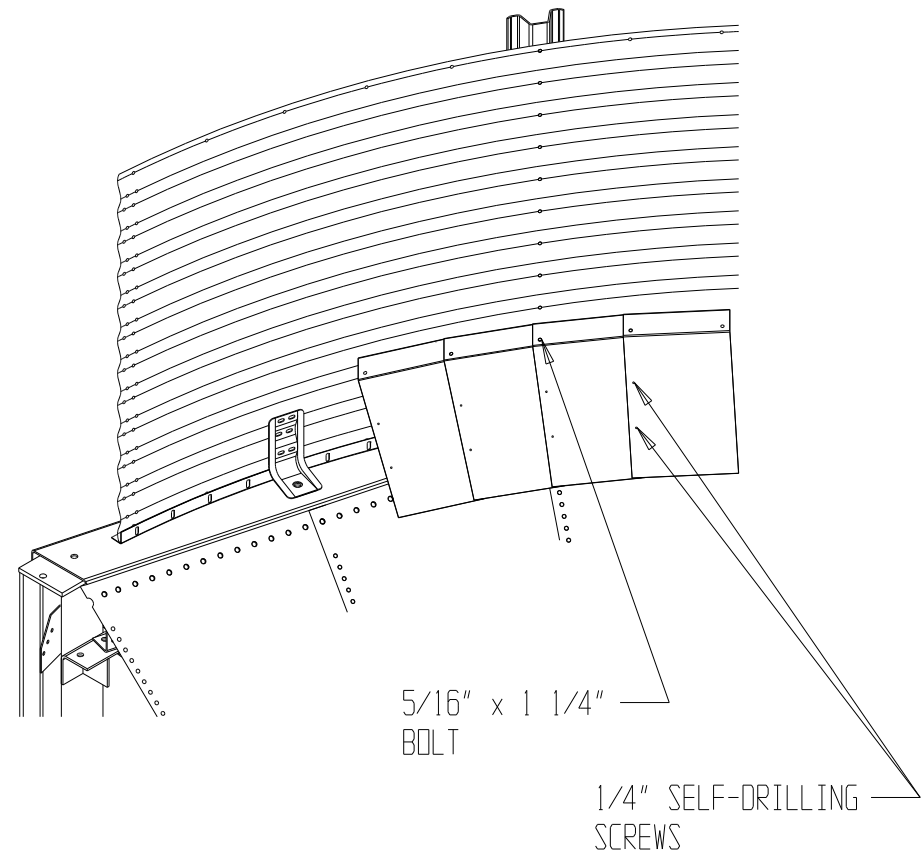


1) FIELD DRILL AND BOLT THROUGH SIDEWALL SHEET WITH 5/16" x 1 1/4" BIN BOLTS. FIELD DRILLED HOLES WILL BE LOCATED EXACTLY 8.00" ABOVE THE BOTTOM HORIZONTAL SEAM. PLACE NEOPRENE WASHER UNDER NUT ON THE INSIDE OF THE TANK AND TIGHTEN.

2) ATTACH FLASHING TO SIDEWALL AS SHOWN BELOW AND FINGER TIGHTEN NUTS

3) USE 1/4" DIA. SELF-DRILLING SCREWS TO SECURE THE FLASHING TOGETHER. PUSH FLASHING DOWN ON HOPPER WHILE INSERTING SELF-DRILLING SCREWS.

4) TIGHTEN ALL FLASHING TO SIDEWALL NUTS.

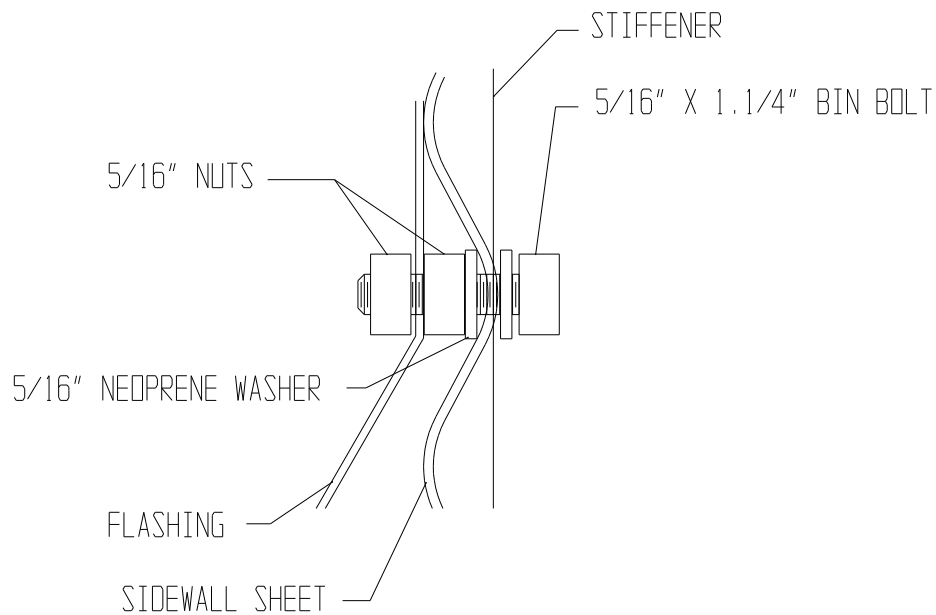

				GSI GRAIN SYSTEMS		45° FCHT FLASHING		TOLERANCES (Unless Noted) Fractions +/- 1/32" Decimals +/- .031" Angles +/-		Quantity		Material	
No.	ECN	Revision Description	Date	By	Assumption, IL. 62510 217/226-4421	INSTALLATION INSTR.		Sq. Ft.	Bin. Wt.	Ship Wt.	Scale	Drawing No.	
1	12743	REMOVED SCREW HOLES	9/17/04	MRH							NTS	PNEG-633	
									Drn. By K. GAMMON	Date 10/10/01	Scale NTS	Work to Dimensions Do Not Scale	
									Chk'd By	Date			

This document was created with Win2PDF available at <http://www.daneprairie.com>.  
The unregistered version of Win2PDF is for evaluation or non-commercial use only.