

Snow Guard Installation Instructions

- 1. Open bin lid to the full open position.
- 2. Install Snow Guard brush (A) around rubber belting (B) and position it down to the top of the clamp band (C).
- 3. Rotate the brush with the loose ends on each side of the striker plate (D). (See Figure 1.)

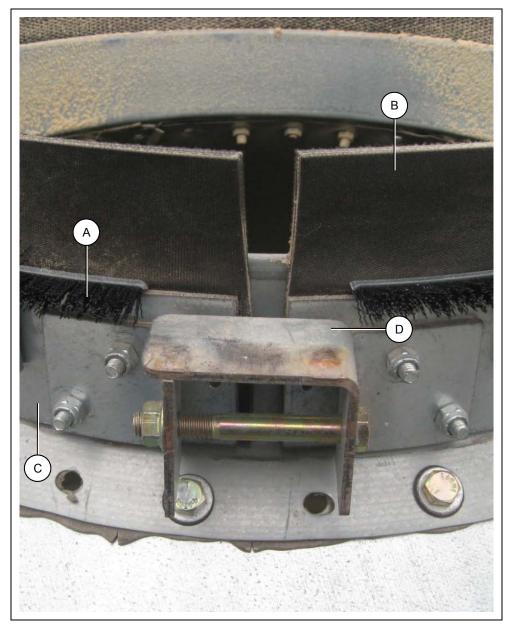


Figure 1

Snow Guard Installation Instructions (Continued)

- 4. Place a clamp (E) on each side of the striker plate (D) with the hook of the clamp positioned on the brush as shown in *Figure 2*.
- 5. Install self-drilling screw (F) through each clamp. (See Figure 2.)

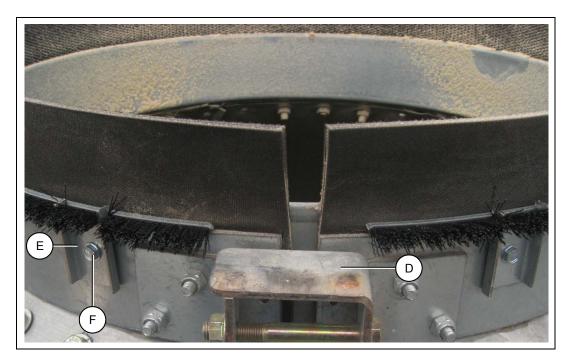


Figure 2

6. With the lid hinge (G) at the 12 o'clock position, place a clamp (E) at the 2 o'clock and 10 o'clock locations. Install a self-drilling screw (F) through each clamp. (See Figure 3.)



Figure 3

Page 2 of 4 PNEG-1944

Snow Guard Installation Instructions (Continued)

7. Close lid and inspect for proper fit. (See Figure 4.)



Figure 4

Ref#	Description	
Α	Snow Guard Brush	
В	Rubber Belt	
С	Clamp Band Bracket	
D	Striker Plate	
Е	Clamp	
F	Self-Drilling Screw	
G	Lid Hinge	

PNEG-1944 Page 3 of 4

BFT Snow Guard Parts List

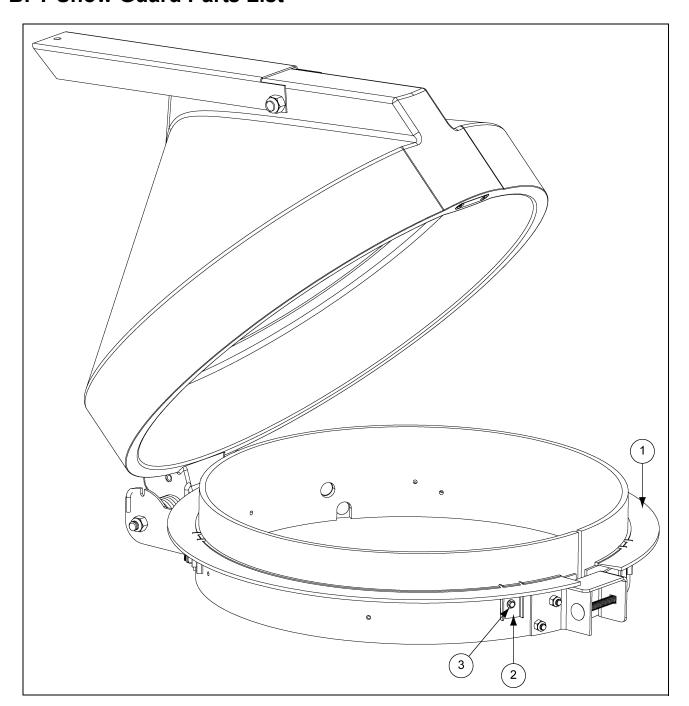


Figure 5

Ref#	Part #	Description	Qty
1	BLK-13450	BFT Lid Snow Guard Brush	1
2	BLK-13129	Clip, Hold Down, Snow Guard	4
3	S-280	Screw, SDS #10-16 x 5/8" HWH ZN	4

Page 4 of 4 PNEG-1944