




Attaching the Collar to the Hopper Panel

1. Install the top of the collar (1) to the hopper panels (2) using 5/16" x 1" truss head bolts (3) and flange nuts (4).

NOTE: Use 5/16" x 1" truss head bolts (3) at the top of the collar (1).

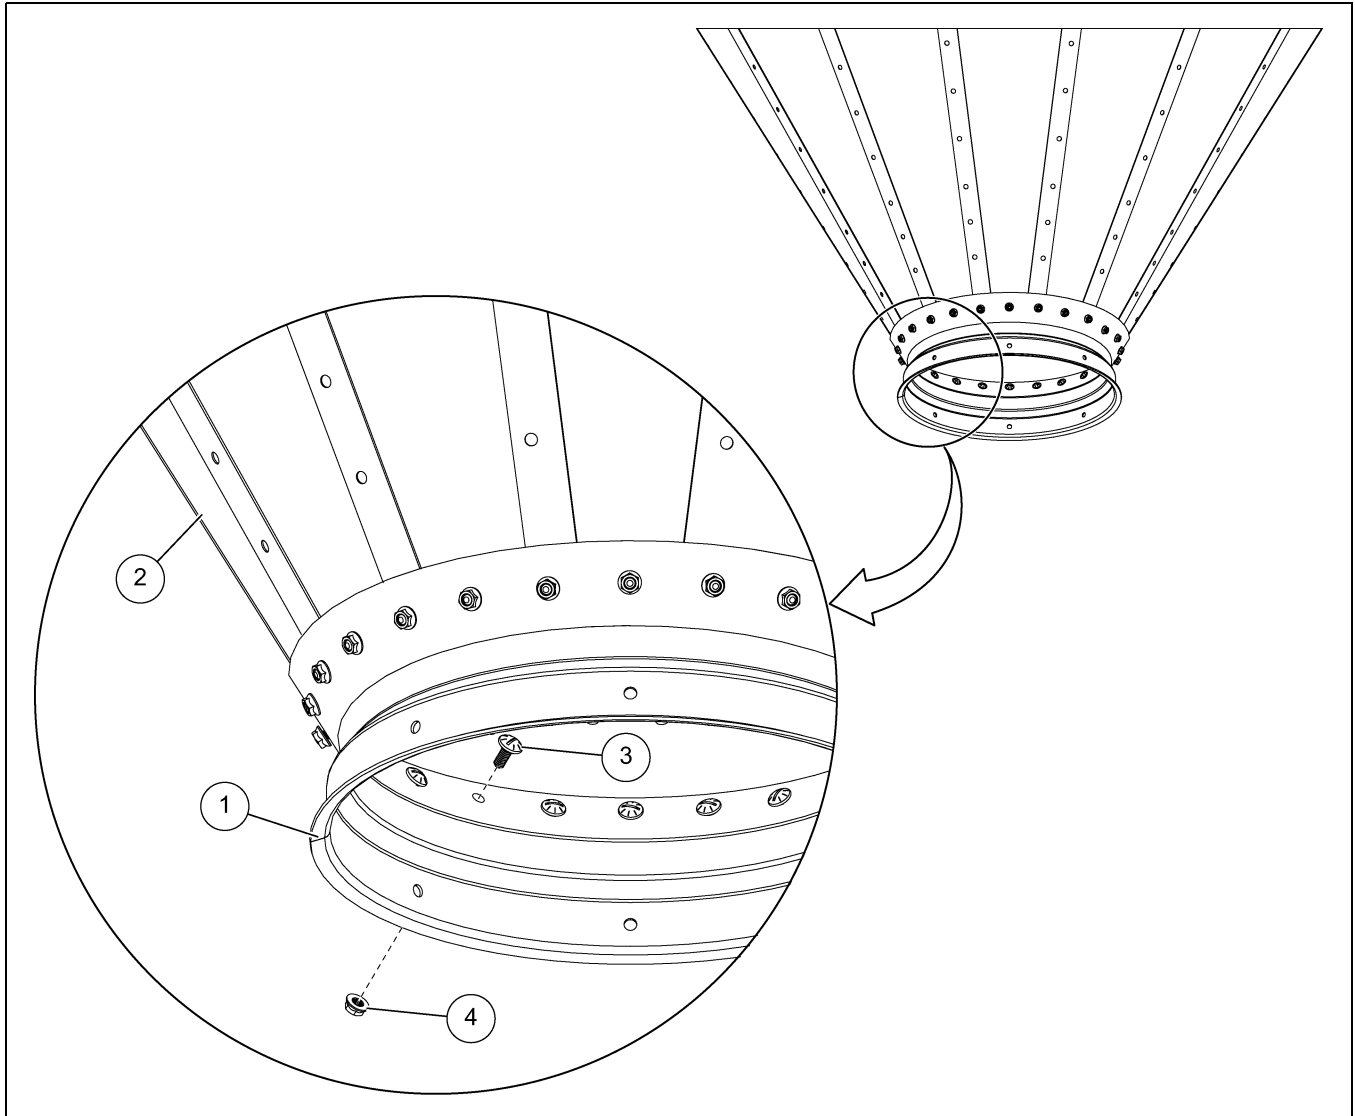

Ref #	Part #	Description
1		Collar
2		Hopper Panels
3	S-10633	5/16"-18 x 1" Truss Head Bolt
4	S-3611	5/16" Flange Nut

