




Attaching the Collar to the Hopper Panel

1. Install the top of the collar (1) to the hopper panels (2) using 5/16" x 1" truss head bolts (3) and flange nuts (4).

NOTE: Use 5/16" x 1" truss head bolts (3) at the top of the collar (1).

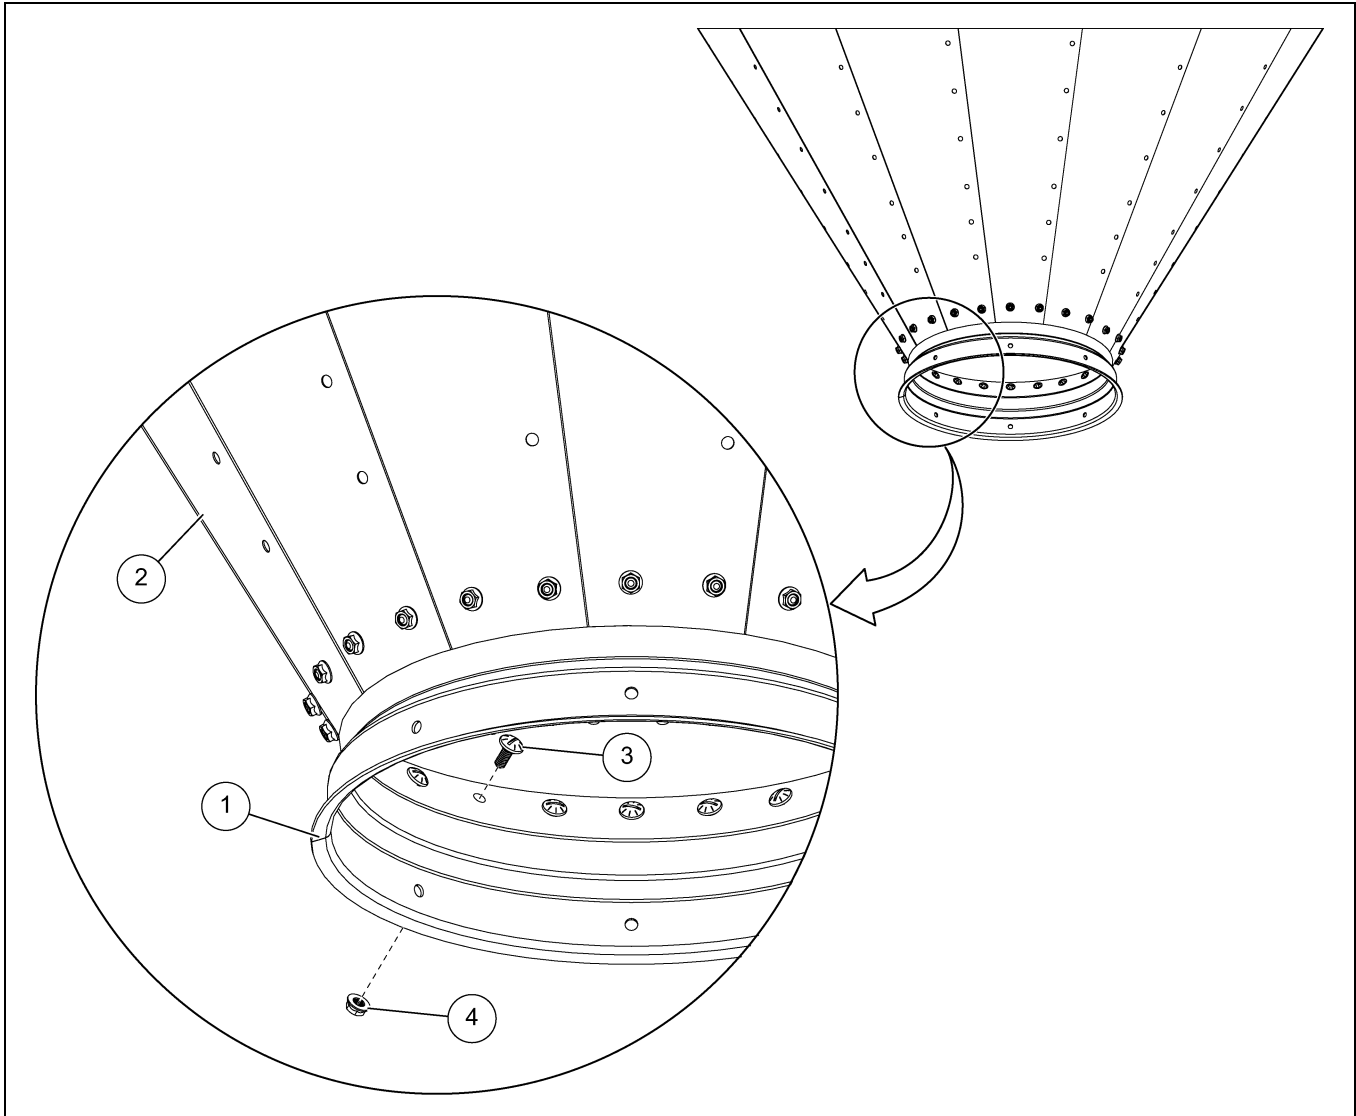

Ref #	Part #	Description
1		Collar
2		Hopper Panels
3	S-10633	Truss Bolt 5/16"-18 x 1" JS500 Grade 8 or Grade 8.2 with Sealing Washer
4	S-10268	Flange Nut 5/16"-18 JS500 Grade 5

