




MANUAL
CONTROL CENTER

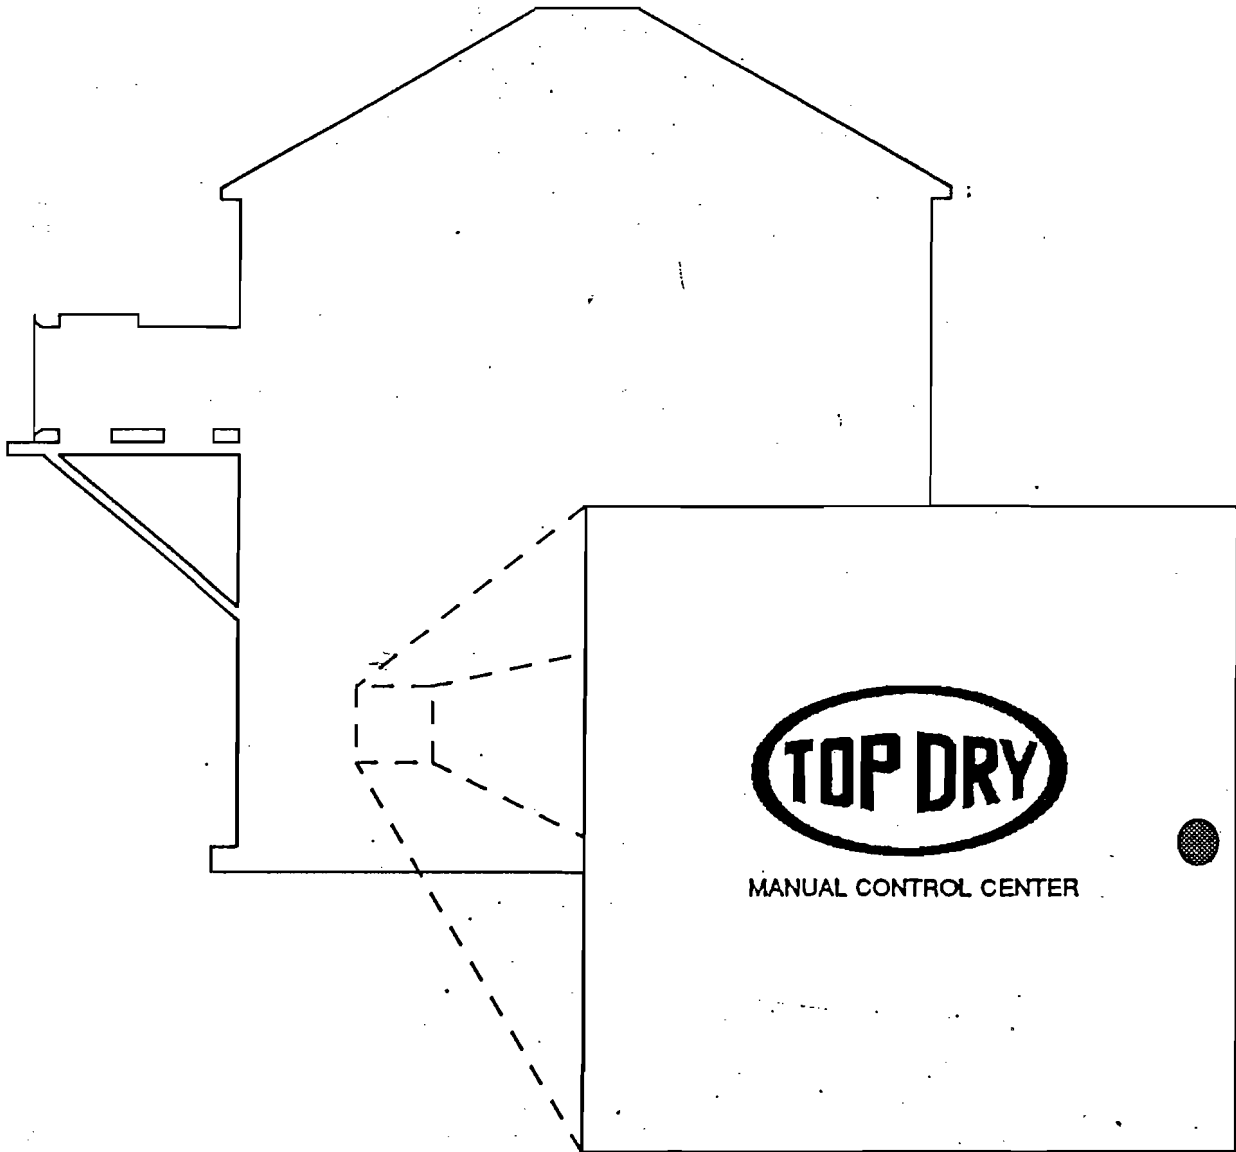

OWNER'S MANUAL
for **CANADIAN MODEL**
MODELS TF-1169

AIRSTREAM WARRANTY

AIRSTREAM warrants all products manufactured by AIRSTREAM to be free of defects in materials and workmanship under usual and customary service. AIRSTREAM's only obligation is to repair or replace products returned on a prepaid basis within 12 months after retail sale, and in our opinion, found to be defective by AIRSTREAM the product will be repaired or replaced without charge, F.O.B. factory, this constituting and fulfilling our warranty obligation. Expenses incurred without written authorization from AIRSTREAM shall be the sole responsibility of the bearer. Under no circumstances will AIRSTREAM be liable for any kind of special or consequential damages, nor shall AIRSTREAM's liability ever exceed the selling price of the product.

This warranty does not cover products or parts which have been damaged by negligent use, misuse, alteration or accident. All products supplied by outside manufacturers are warranted separately by the respective manufacturer. This warranty is exclusive and in lieu of all other warranties, expressed or implied. AIRSTREAM reserves the right to make design or specification changes at any time, without an contingent obligation to purchasers or products already sold.

All instructions shall be construed as recommendations only; because the actual installation may vary according to local conditions and AIRSTREAM assumes no liability for results arising from the use of such recommendations.

GRAIN SYSTEMS, INC. assumes no responsibility for field modifications or erection defects which create structural or storage quality problems. If any field modifications are necessary which are not specifically covered by the contents of this manual, contact GRAIN SYSTEMS, INC. for recommendations and approval. Any unauthorized modification or erection defect which effects the structural integrity of the GSI bin will be cause for immediate nullification of the GSI bin warranty.

ROOF DAMAGE WARNING

AIRSTREAM cannot warrant any roof damages due to excessive vacuum or internal pressure caused by fans or other air moving systems. Adequate ventilation and/or "make-up air" devices should be provided for all powered air handling systems. AIRSTREAM does not recommend the use of downward flow systems (suction). Severe roof structural damage can result from any blockage of air passages. Running of fans during certain high humidity/cold weather conditions can cause freezing over of air exhaust or intake ports.

This equipment shall be installed in accordance with the current installation codes for gas burning appliances and equipment, CAN1-B149.1 and B149.2, or applicable provincial regulations which should be carefully followed in all cases. Authorities having jurisdiction should be consulted before installations are made.

CONTENTS:

	<u>page</u>		<u>page</u>
INTRODUCTION/GENERAL DESCRIPTION	2	THEORY OF OPERATION	5
DETAILED DESCRIPTION	2	SCHEMATIC DIAGRAM	6
INSTALLATION		WIRING DIAGRAM	7
Installation on Single Crop Dryer Unit	2	MULTIPLE CROP DRYER WIRING DIAGRAM	8
Installation on Multiple Crop Dryer Units	3	CONTROL CENTER PARTS	14
OPERATION		DRYING RATES FOR CORN	16
Operation of Single Crop Dryer Unit	4	PERSONAL BATCH DRYING LOG	17
Operation of Multiple Crop Dryer Units	5		

INTRODUCTION/GENERAL DESCRIPTION

The Top Dry Manual Control Center, Model TF-1195, is the modern method of controlling the drying and cooling cycles of the Top Dry dryer. The control center is a very practical and labor-saving device. It not only eases the starting and stopping of the Top Dry fan and heater but it also regulates and monitors the drying and cooling cycles. The control center may be used in several different modes of operation as follows:

- Temperature Drying and Time Cooling
- Temperature/Time Drying and Time Cooling
- Temperature Drying and No Cooling
- Temperature/Time Drying and No Cooling
- Manual Operation

DETAILED DESCRIPTION

THERMOSTAT

The thermostat is used to regulate the drying temperature of the Top Dry system. It operates in the time/temp mode and the temp mode. The thermostat has temperature indicator that is functional in the manual mode as well as in the time/temp and temp modes. The thermostat senses the temperature through the temperature sensor which is mounted inside the grain chamber. The thermostat is located on the upper left hand corner of the subpanel.

DRY TIMER

The dry timer is used to regulate the drying time of the Top Dry system. It operates only in the time/temp mode. The dry timer has a progress indicator that shows the remaining amount of time to dry. The dry timer is located on the lower left hand corner of the subpanel.

COOL TIMER

The cool timer is used to regulate the cooling time of the Top Dry system. It operates only in the dry & cool mode. The cool timer has a progress indicator that shows the remaining amount of time to cool. The cool timer is located immediately to the right of the dry timer.

HOUR METER

The hour meter records the accumulated time the Top Dry system has been operated. It operates in time/temp mode, temp mode, as well as manual mode. The hour meter is located to the immediate right of the thermostat.

START SWITCH

The start switch starts the Top Dry fan/heater from a remote position. It also initiates the Top Dry Manual Control Center's operation. The start switch is located on the upper right hand corner of the subpanel.

INDICATOR LIGHT

The indicator light provides a visual indication when power is being applied to the fan/heater. The light will also illuminate whenever the control center is receiving power. The indicator light is located directly below the start switch.

STOP SWITCH

The stop switch shuts down the Top Dry fan/heater as well as the Top Dry Manual Control Center. The switch allows stop-

ping of the entire system when the control center is used in manual mode or when it is desired to stop the drying process. The stop switch is located in the middle of the right hand side of the control center subpanel.

NOTE: When the system is shut down, the timers in the control center are automatically reset to their set times.

BURNER SWITCH

The burner switch allows the selection of the drying modes. The available modes of drying are time/temperature, temperature and manual. When the switch is in the time/temperature mode, the heater(s) will shut off when the grain chamber has reached the temperature set on the thermostat or when the dry timer has totally timed down. When the switch is in the temperature mode, the heater(s) will shut off when the grain chamber has reached the temperature set on the thermostat. When the switch is in manual mode, the heater(s) must be started and stopped manually. The burner switch is located on the middle left side of the subpanel.

FAN SWITCH

The fan switch allows the grain chamber to be cooled prior to dumping. The options are dry & cool and full heat. When the switch is in the dry & cool position, the fan(s) will continue to run after the thermostat or the dry timer shuts off the heater(s). When the switch is in the full heat position, the fan(s) will shut off with the heater(s). The fan switch is located between the burner switch and the stop switch.

INSTALLATION ON A TOP DRY SYSTEM

NOTE: Read the appropriate instructions entirely prior to installation.

SINGLE CROP DRYER INSTALLATION

1. Mount the Top Dry Manual Control Center on the side of the bin. Position the control center in a location that is approximately eye level and that allows the operator to see the fan and heater unit start. Locate and drill the appropriate holes for mounting the control center. Mount the control center with four (4) 5/16" bin bolts and nuts provided.
2. Run two (2) 16 ga. wires (either use wires in conduit or use a 2 lead power cord) from the Top Dry Manual Control Center to the drying chamber. Connect the temperature probe to the two wires (one wire per probe lead) with the connectors provided. Mount the temperature probe assembly in the drying chamber in the Top Dry bin. See Fig. 1. Connect the wires to the thermostat with the one wire going to terminal 7 on terminal strip and the other wire going to terminal 8.
NOTE: The conduit should be mounted approximately 21" off of drying floor.
3. Remove the jumper wires between terminals 2 and 3, and terminals 4 and 5 on the terminal strip in the Top Dry Crop Dryer box.
4. Run six (6) 16 ga. wires (either in conduit or use a 6 lead power cord) from the Top Dry Manual Control Center to the Top Dry Crop Dryer. Connect the wires so that the terminal numbers 1 thru 6 in the crop dryer box correspond with the terminal numbers 1 thru 6 in the control center.

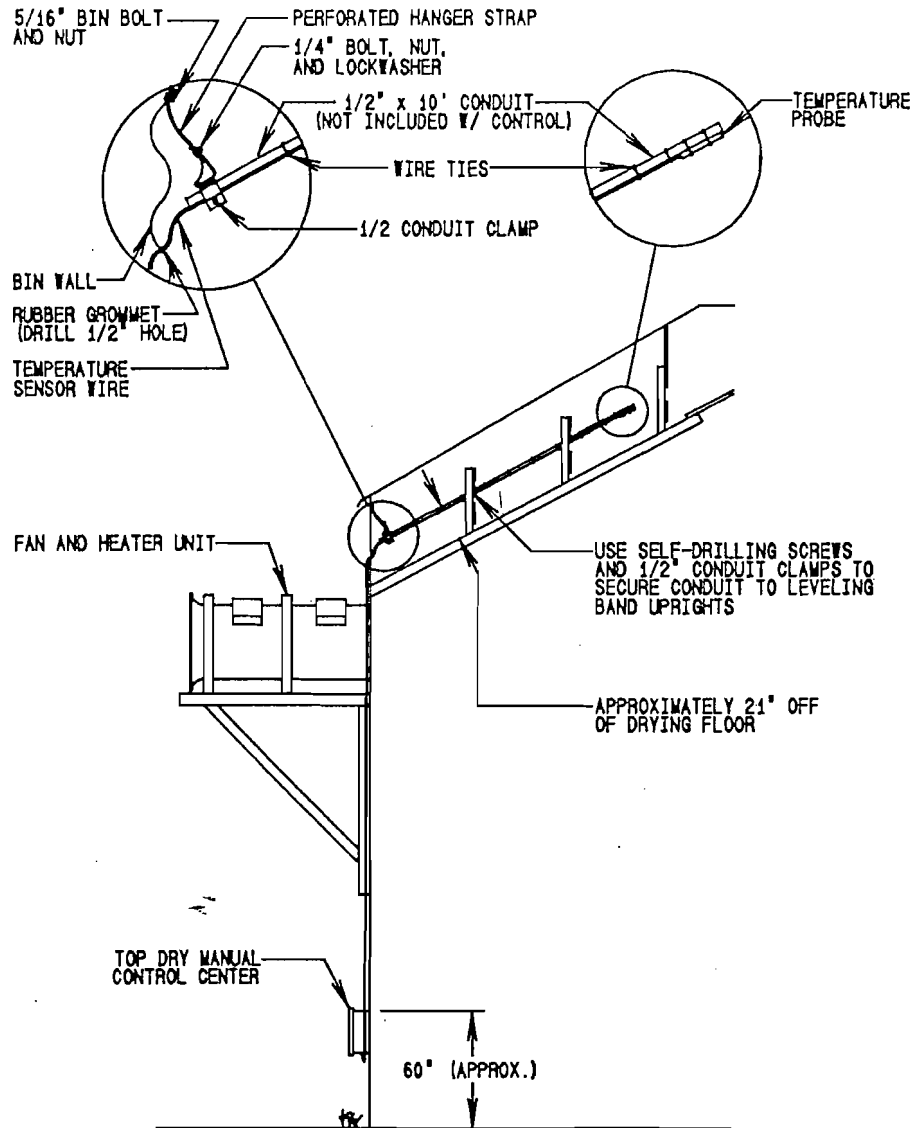


FIG. 1

DUAL CROP DRYER INSTALLATION

NOTE: Multiple Crop Dryer Control kit is required to complete two unit an wiring. See appropriate diagram on pages 9-11 for control kit part number.

1. Mount the Top Dry Manual Control Center on the side of the bin. Position the control center in a location that is approximately eye level and that allows the operator to see the fan and heater unit start. Locate and drill the appropriate holes for mounting the control center. Mount the control center with four (4) 5/16" bin bolts and nuts provided.
2. Run two (2) 16 ga. wires (either use wires in conduit or use a 2 lead power cord) from the Top Dry Manual Control Center to the drying chamber. Connect the temperature probe to the two wires (one wire per probe lead) with the connectors provided. Mount the temperature probe assembly in the drying chamber in the Top Dry bin. See Fig. 1. Connect the wires to the thermostat with one wire going to terminal 7 on terminal strip and the other wire going to terminal 8.
NOTE: The conduit should be mounted approximately 21" off of drying floor.
3. Remove the jumper wires between terminals 2 and 3, and terminals 4 and 5 on the terminal strip in the Top Dry fan box.
4. Run six (6) 16 ga. wires (either in conduit or use a 6 lead power cord) from the Top Dry Manual Control Center to the Top Dry fan. Connect the wires so that the terminal numbers 1 thru 6 in the fan box correspond with the terminal numbers in the control center.
5. Install the toggle switch in the 1/2" hole in the control center subpanel.

6. Drill a 1/8" hole in the back panel of the Top Dry Manual Control Center and use a 8-32 x 1 1/4" self tapping screw to mount the time delay relay. (Careful not to overtighten the screw)
7. Run two (2) 16 ga. wires (either in conduit or use a 2 lead power cord) from the Top Dry Manual Control Center to the second fan/heater.
8. Run a 16 ga. wire from terminal no. 4 in the control center to one side of the toggle switch. On the same side, connect one of the wires coming from the second fan/heater.
9. Connect a 16 ga. wire from the unused side of the toggle switch to the input terminal on the time delay relay. On the load terminal on the time delay relay, connect the other wire coming from the second fan/heater.
10. Connect the wire coming from the time delay relay to terminal no. 1 in second fan box.
11. Remove the wire coming from the safety circuit board in the second unit to the access door switch. Connect the other wire coming from the Top Dry Manual Control Center to the access door switch terminal where the wire was previous removed.
12. Run nine (9) 16 ga. wires (either in conduit or use a 9 lead power cord) from the first fan/heater to the second fan/heater.
13. The crop dryer control circuits should be wired as shown in the wiring diagrams. Note that the overload circuits are wired in series with the contactor coil in unit no. 1. The contactor coil in unit no. 2 should be wired so that it will only get power if unit no. 1 is started. See pages 9 thru 11 for complete wiring diagrams.

OPERATION

SINGLE CROP DRYER

The Top Dry Manual Control Center is very simple to operate. By following some basic rules, the control center will accurately control the Top Dry fan and heater. The following instructions are provided for operation in the time/temperature mode and the temperature mode. In the manual mode, the crop dryer unit(s) are started and stopped either at the control center or at the electrical box on the crop dryer. The following instructions are provided as guidelines only.

Time/Temperature Mode

The Time/Temperature mode of operation is recommended for a wide variety of grain and various moisture contents of grain. The Time/Temperature mode is recommended when the drying time is less than twelve hours. In the time/temperature mode, the grain thermostat as well as the dry timer control the crop dryer unit. Once the grain has reached the desired temperature, the heater shuts off and the fan shuts off after 60 seconds or longer if cooling is desired in the drying chamber. (See the Cooling Mode section for more details about cooling in the drying chamber.) If the time set on the dry timer expires before the temperature in the drying chamber reaches temperature, the dry timer will shut off the heater and the fan, if cooling is not desired in the drying chamber. The Time/Temperature mode allows the thermostat to decrease drying times when the temperature rises rapidly while the dry timer never allows the drying chamber to exceed the maximum drying time. See the cooling mode section for more details about cooling in the drying chamber. Use the following steps to operate the Top Dry system in time/temperature mode.

OPERATING PROCEDURE: TIME/TEMPERATURE MODE

1. Determine the initial moisture content of the first batch to be dried.
2. Find the estimated drying time for the applicable Top Dry system in the Top Dry drying tables and set the dry timer.
NOTE: Ambient conditions will affect these drying times. Refer to the table (on page 14) for the conditions that the drying rates were based upon.
3. Set the burner switch and the fan switch to the desired positions and, if applicable, set the cool timer at the desired cooling time.
4. Set the thermostat to a temperature at a very high setting.
5. Start the crop dryer unit via the start switch in the Top Dry Manual Control Center.
6. Once the crop dryer has been shut off by the dry timer, restart the unit. With burner switch in Time/Temperature mode, slowly turn back the thermostat until the crop dryer, shut off and depress the stop switch to stop entire system if necessary.
7. After the batch has been dumped and cooled, determine the final moisture content. The sample of grain should be taken from the batch after it has been dumped. If the batch is within one percent of desired moisture content, all the controls are set properly. If the moisture content is too high or too low, adjust the dry timer and/or the thermostat accordingly.

Temperature Mode

The temperature mode of operation is recommended for drying grain that has a medium to high (25 to 35%) initial moisture content. Grain that has medium to high moisture content undergoes a temperature change that is easily detected by the grain thermostat. In the temperature mode, the grain thermostat is the only method of shutting the crop dryer off, besides the stop switches. Once the grain has reached the desired temperature, the burner shuts off and the fan shuts off after 60 seconds or longer if cooling is desired in the drying chamber. See the Cooling Mode section for more details about cooling in the drying chamber. Use the following steps to operate the Top Dry system in temperature mode.

OPERATING PROCEDURE: TEMPERATURE MODE

1. Determine the initial moisture content of the first batch to be dried.
2. Find the estimated drying time for the applicable Top Dry system in the Top Dry drying tables.
NOTE: Ambient conditions will affect these drying times. Refer to the table on page 14 for the conditions that the drying rates were based upon.
3. Set the burner switch and the fan switch to the desired positions and, if applicable, set the cool timer at the desired cooling time.
4. Set the thermostat to a temperature at a very high setting.
5. Start the crop dryer via the start switch in the Top Dry Manual Control Center. Allow the batch to dry the estimated drying time found in step 2. It may be desired to reduce the drying time by ten percent if the ambient conditions are not identical as found in the drying tables to ensure the grain is not over dried.
6. Once the time has elapsed, slowly turn back the thermostat until the crop dryer shuts off.
7. After the batch has been dumped and cooled, determine the final moisture content. The sample of grain should be taken from the batch after it has been dumped. If the batch is within one percent of desired moisture content, leave the thermostat at the present setting. If the moisture content is too high or too low, adjust the drying time accordingly and readjust the thermostat.

Cooling Mode

When the fan switch is placed in the dry & cool position, the fan will continue to run after the heater shuts off until the cool timer time expires. Cooling in the drying chamber is normally done only when rapid cooling of the grain is needed. Most cooling is done in the bottom of the Top Dry bin for more efficient drying and higher quality grain. The cooling cycle (when the fan switch is in the dry & cool position) is controlled by the cool timer. When the fan switch is in the full heat position, the fan will shut off 60 seconds after with the burner shuts off allowing the fan to cool the burner prior to total shut down.

DUAL CROP DRYER UNITS

For controlling a dual Crop Dryer system, the Top Dry Manual Control Center operates identically to a single Crop Dryer system except as described as follows.

OPERATING PROCEDURE: DUAL CROP DRYER

1. The second unit toggle switch is placed in the on position.
2. Start the crop dryer unit via the start switch in the Top Dry Manual Control Center. The second unit will start after the first unit has run for a short while. When the second unit toggle switch is in the off position, the second unit may be started after the first unit has started.


! *WARNING: When the second unit toggle switch is in the on position, the stop switch on the second unit is disabled. The second fan must be stopped by stopping the first fan.*

THEORY OF OPERATION


The theory of operation describes the actual operation of components inside the Top Dry Manual Control Center. The following operation will occur provided that the components are set as described in the previous sections. In the following section, the individual component operation is described as they would operate in the various modes.

1. With the burner switch in the time/temp mode and the fan switch in the dry & cool position, the following operations occur:
 - A. When either start switch (in the control center or in the fan box) is depressed, the fan starts. Ten seconds later, the burner ignites. The hour meter, thermostat, and indicator lamp will be energized. The dry timer motor and clutch are energized also.
 - B. The burner will continue burning until either the thermostat has sensed that the grain has reached the preset temperature or the time has expired on the dry timer. The thermostat contacts will close thus applying power to the time delay relay. The time delay relay contacts will close and energize the relay and cool timer motor. The dry timer contacts will open to turn the dry timer motor off and close to energize the relay and cool timer.
 - C. The relay is energized and thus the relay contacts change state. The relay contacts open to de-energize the burner. Another set of contacts will close to allow the relay and cool timer to be energized.
 - D. When the time has expired on the cool timer, the fan will be de-energized. The cool timer contacts will open thus breaking the circuit and de-energizing the fan as well as the Top Dry Manual Control Center.
2. With the burner switch in the temperature mode and the fan switch in the dry & cool position, the following operations occur:
 - A. When either start switch (in the control center or in the fan box), the fan starts. Ten seconds later, the burner ignites. The hour meter, thermostat, and indicator lamp will be energized. The dry timer motor and clutch are energized also.
 - B. The burner will continue burning until either the thermostat has sensed that the grain has reached the preset temperature or the time has expired on the dry timer. The thermostat contacts will close thus applying power to the time delay relay. The time delay relay contacts will close and energize the relay and cool timer motor. The dry timer contacts will open to turn the dry timer motor off and close to energize the relay and cool timer.
 - C. The relay is energized and thus the relay contacts change state. The relay contacts open to de-energize the burner. Another set of contacts will close to allow the relay and cool timer to be energized. The relay and cool timer are temporarily energized.
 - D. The relay contacts open and thus breaking the circuit and shutting off the burner and 60 seconds later the fan as well as the Top Dry Manual Control Center.
3. With the burner switch in the time/temp mode and the fan switch in the full heat position, the following operations occur:
 - A. When either start switch (in the control center or in the fan box), the fan starts. Ten seconds later, the burner ignites. The hour meter, thermostat, and indicator lamp will be energized. The dry timer motor and clutch are energized also.
 - B. The burner will continue burning until either the thermostat has sensed that the grain has reached the preset temperature or the time has expired on the dry timer. The thermostat contacts will close thus applying power to the time delay relay. The time delay relay contacts will close and energize the relay and cool timer motor. The dry timer contacts will open to turn the dry timer motor off and close to energize the relay and cool timer.
 - C. The relay is energized and thus the relay contacts change state. The relay contacts open to de-energize the burner. Another set of contacts will close to allow the relay and cool timer to be energized. The relay and cool timer are temporarily energized.
 - D. The relay contacts open and thus breaking the circuit and shutting off the burner and 60 seconds later the fan as well as the Top Dry Manual Control Center.
4. With the burner switch in the temperature mode and the fan switch in the full heat position, the following operations occur:
 - A. When either start switch (in the control center or in the fan box), the fan starts. Ten seconds later, the burner ignites. The hour meter, thermostat, and indicator lamp will be energized.
 - B. The burner will continue burning until the thermostat has sensed that the grain has reached the preset temperature. The thermostat contacts will close, thus, applying power to the time delay relay. The time delay relay contacts will close and energize the relay and cool timer motor.
 - C. The relay is energized and thus the relay contacts change state. The relay contacts open to de-energize the burner. Another set of contacts will close to allow the relay and cool timer to be energized.
 - D. When the time has expired on the cool timer, the fan will be de-energized. The cool timer contacts will open thus breaking the circuit and de-energizing the fan as well as the Top Dry Manual Control Center.

TOP DRY MANUAL CONTROL CENTER SCHEMATIC DIAGRAM

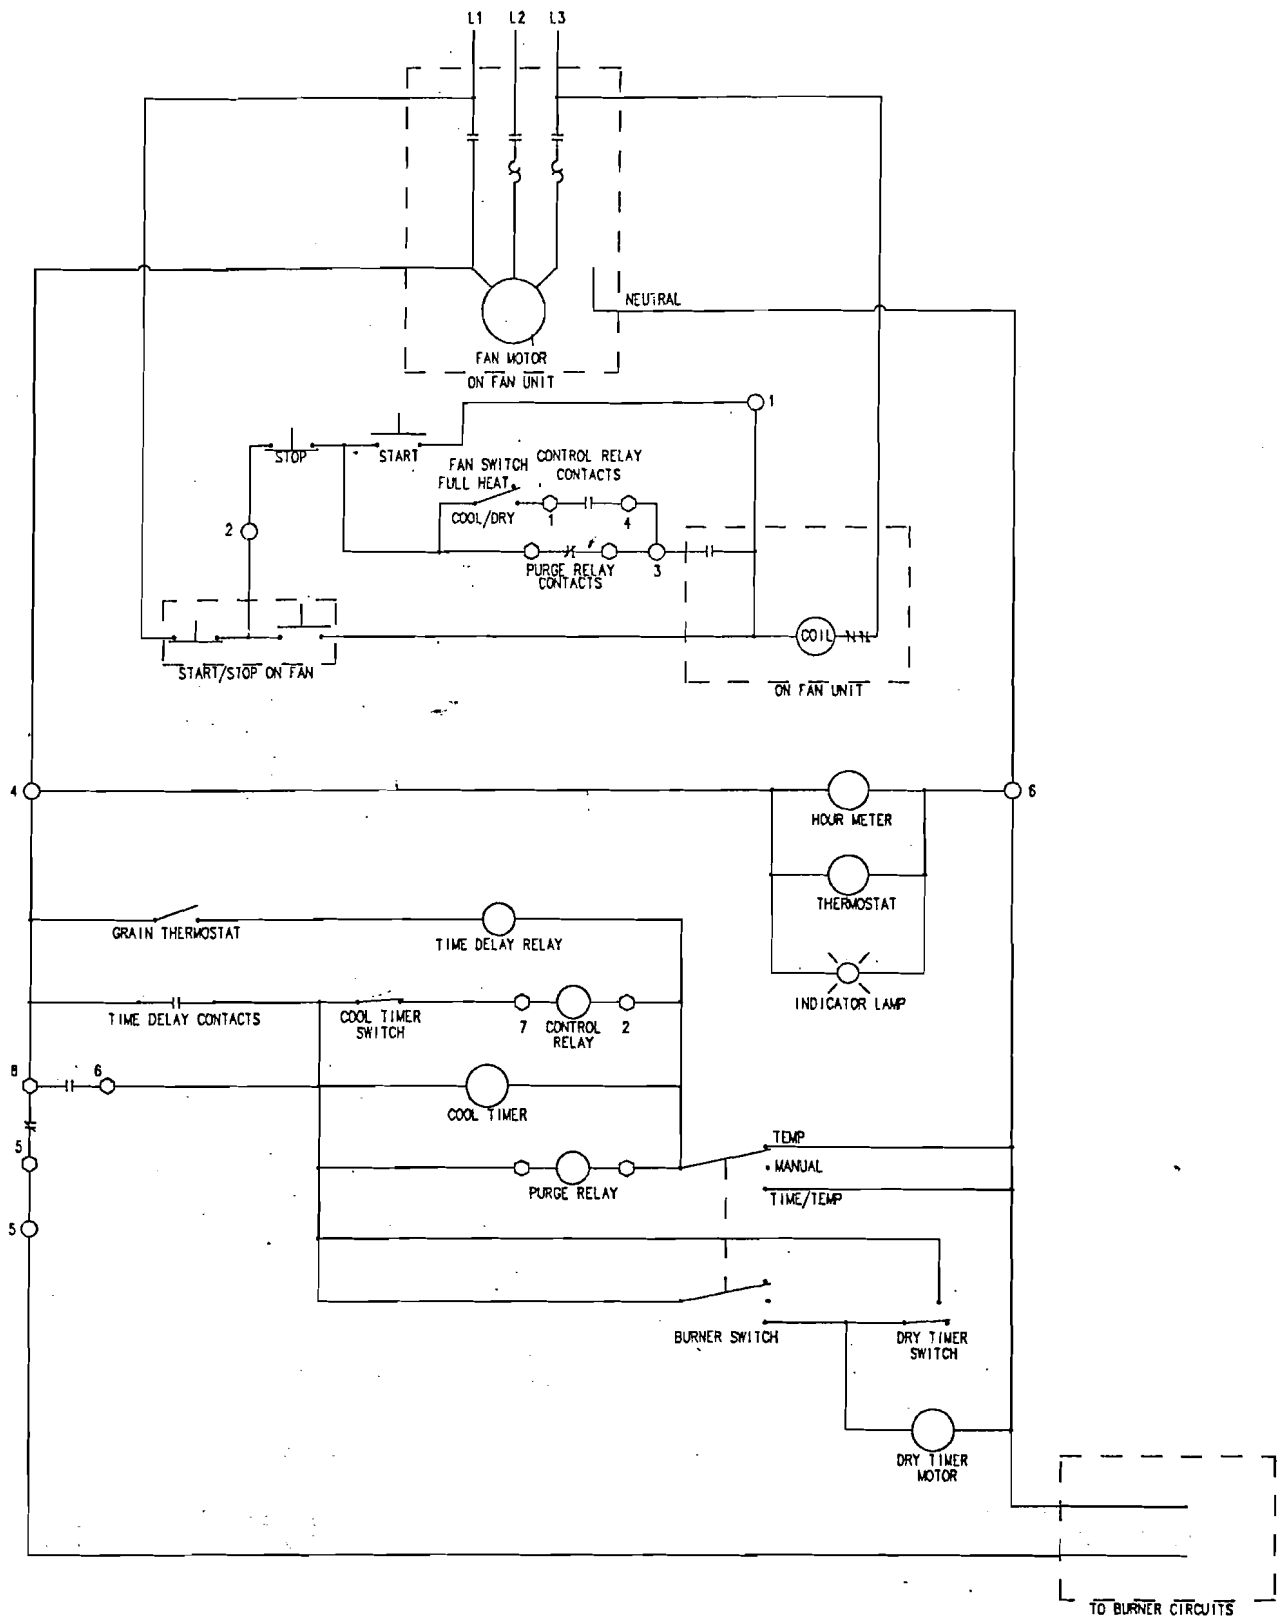


TOP DRY MANUAL CONTROL CENTER WIRING DIAGRAM

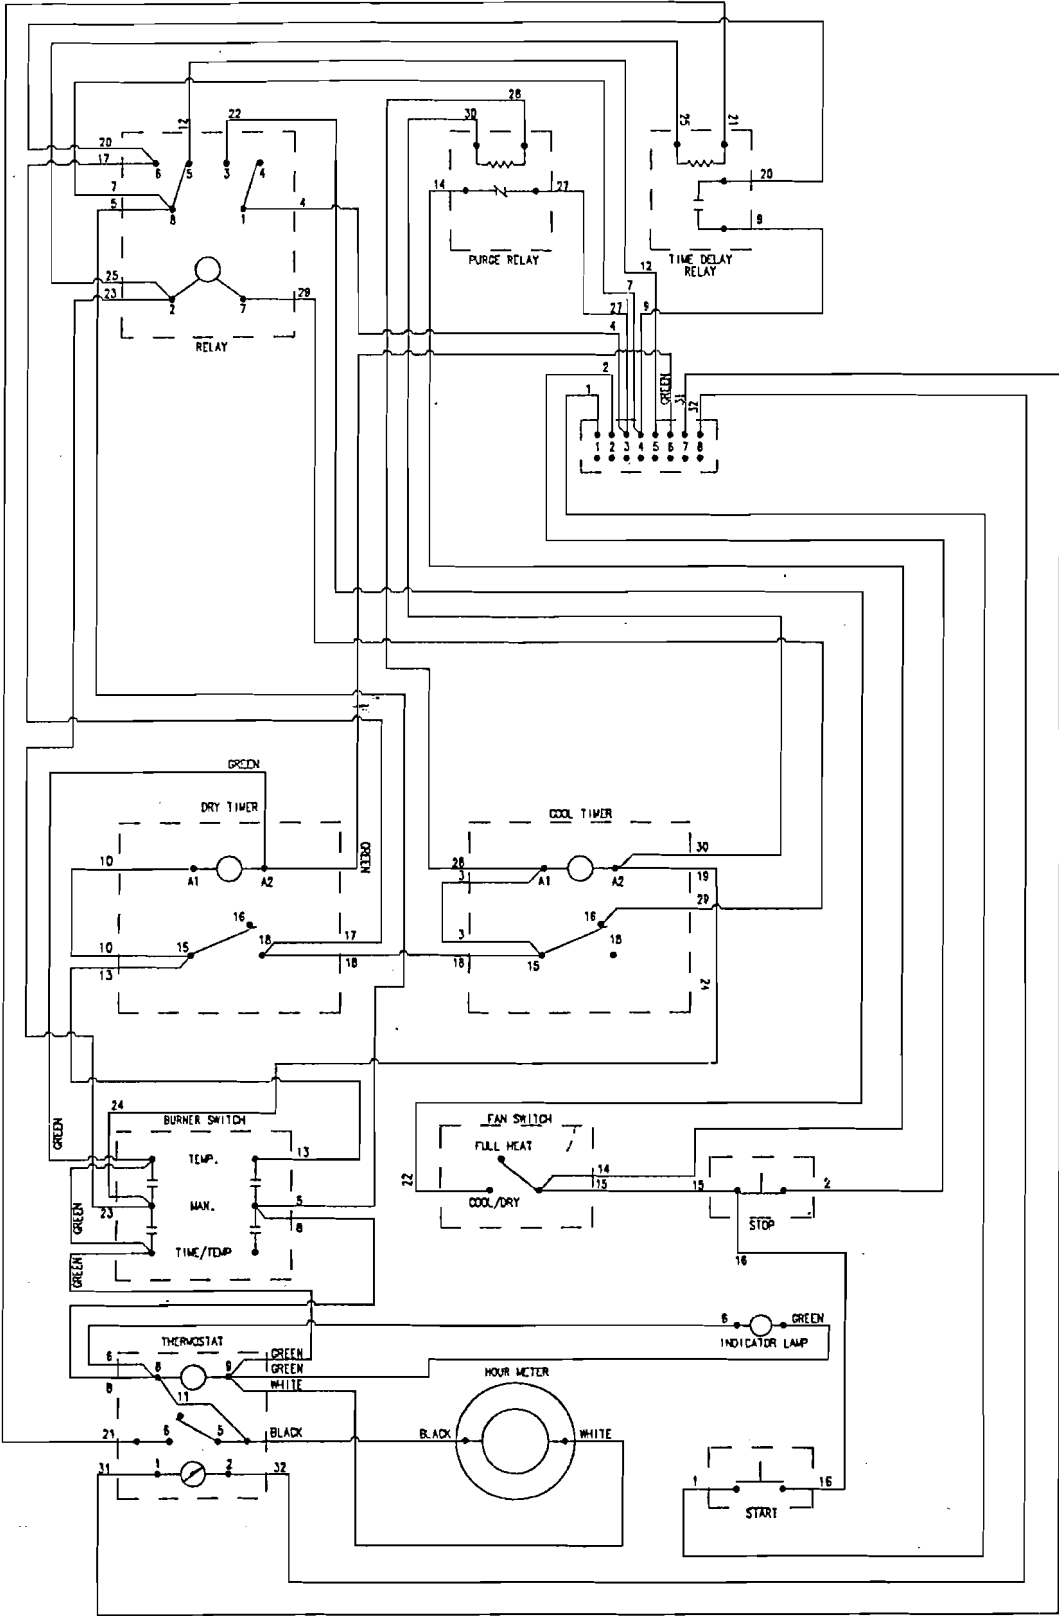

MULTIPLE CROP DRYER CONNECTION DIAGRAM


240 VOLT 1 PHASE

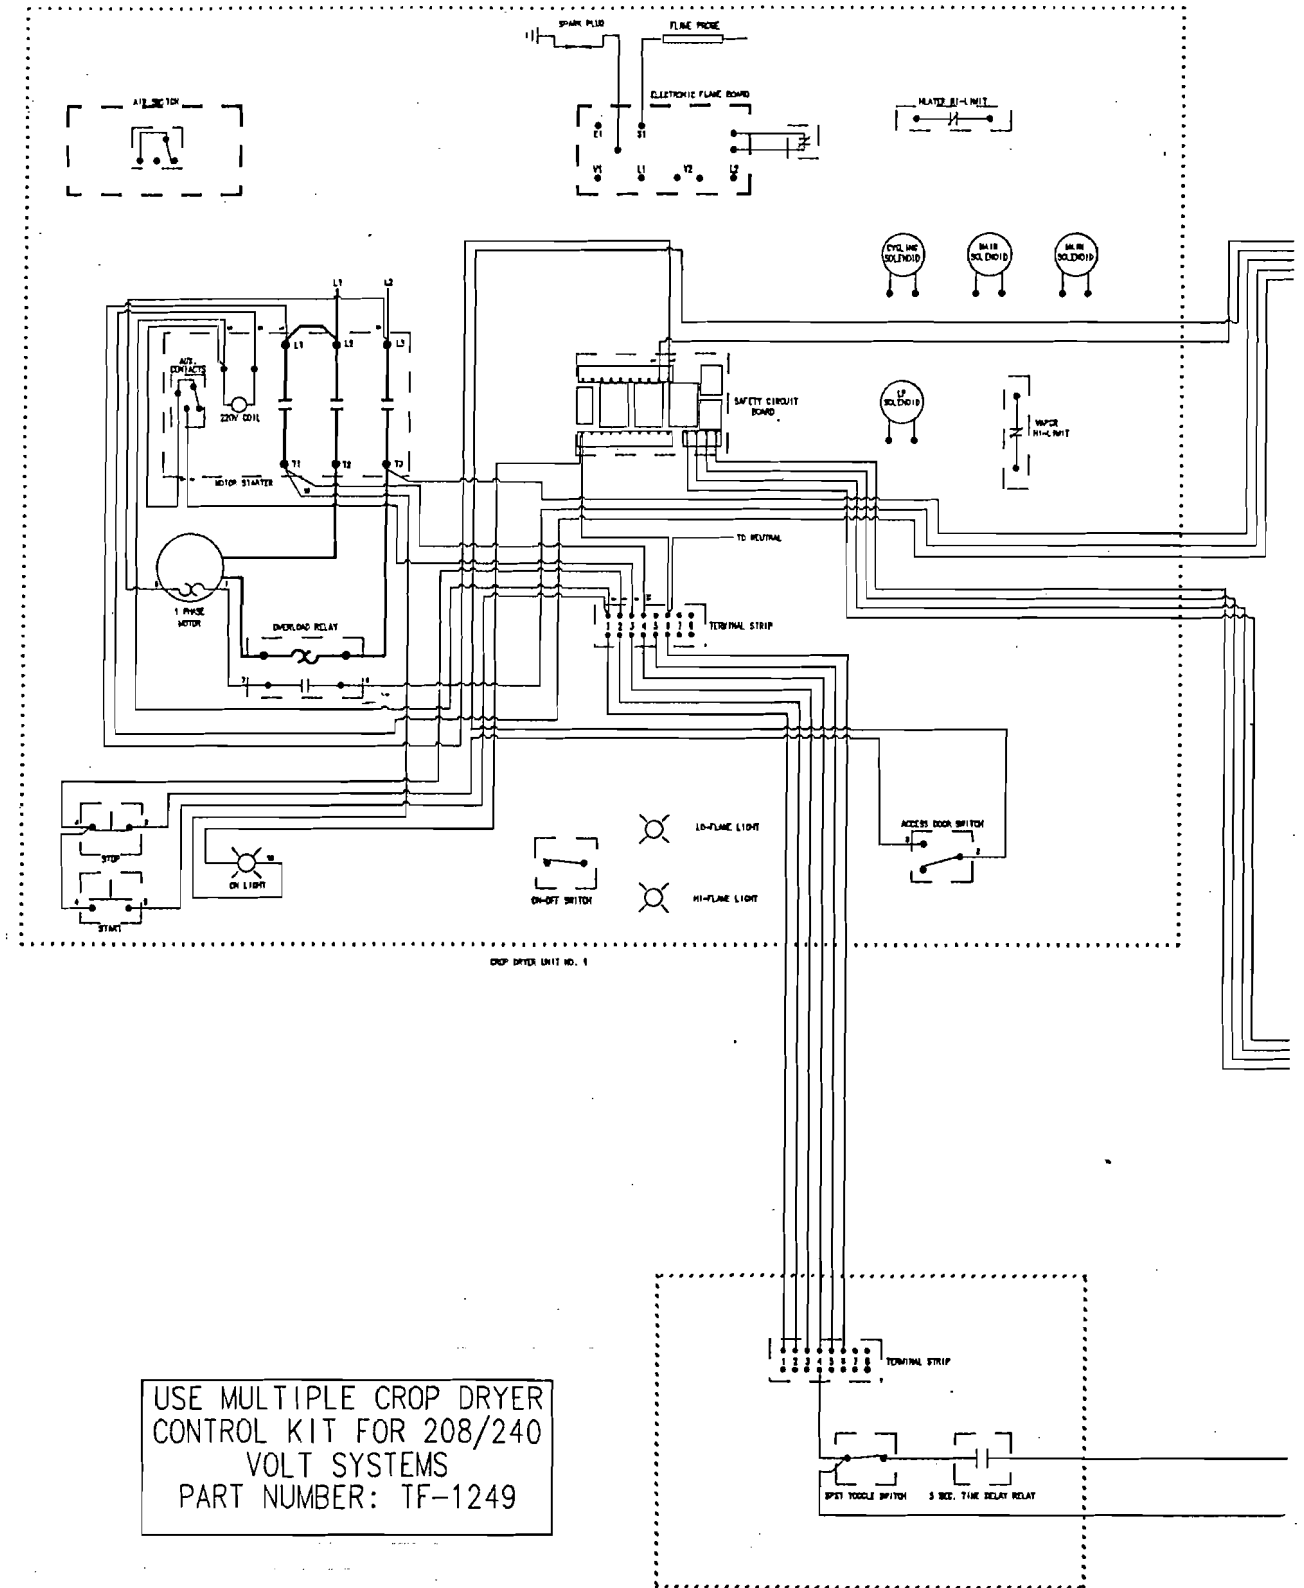

USE MULTIPLE CROP DRYER
CONTROL KIT FOR 208/240
VOLT SYSTEMS
PART NUMBER: TF-1249


MULTIPLE CROP DRYER CONNECTION DIAGRAM (CONT.)

240 V. 1 Phase Motor

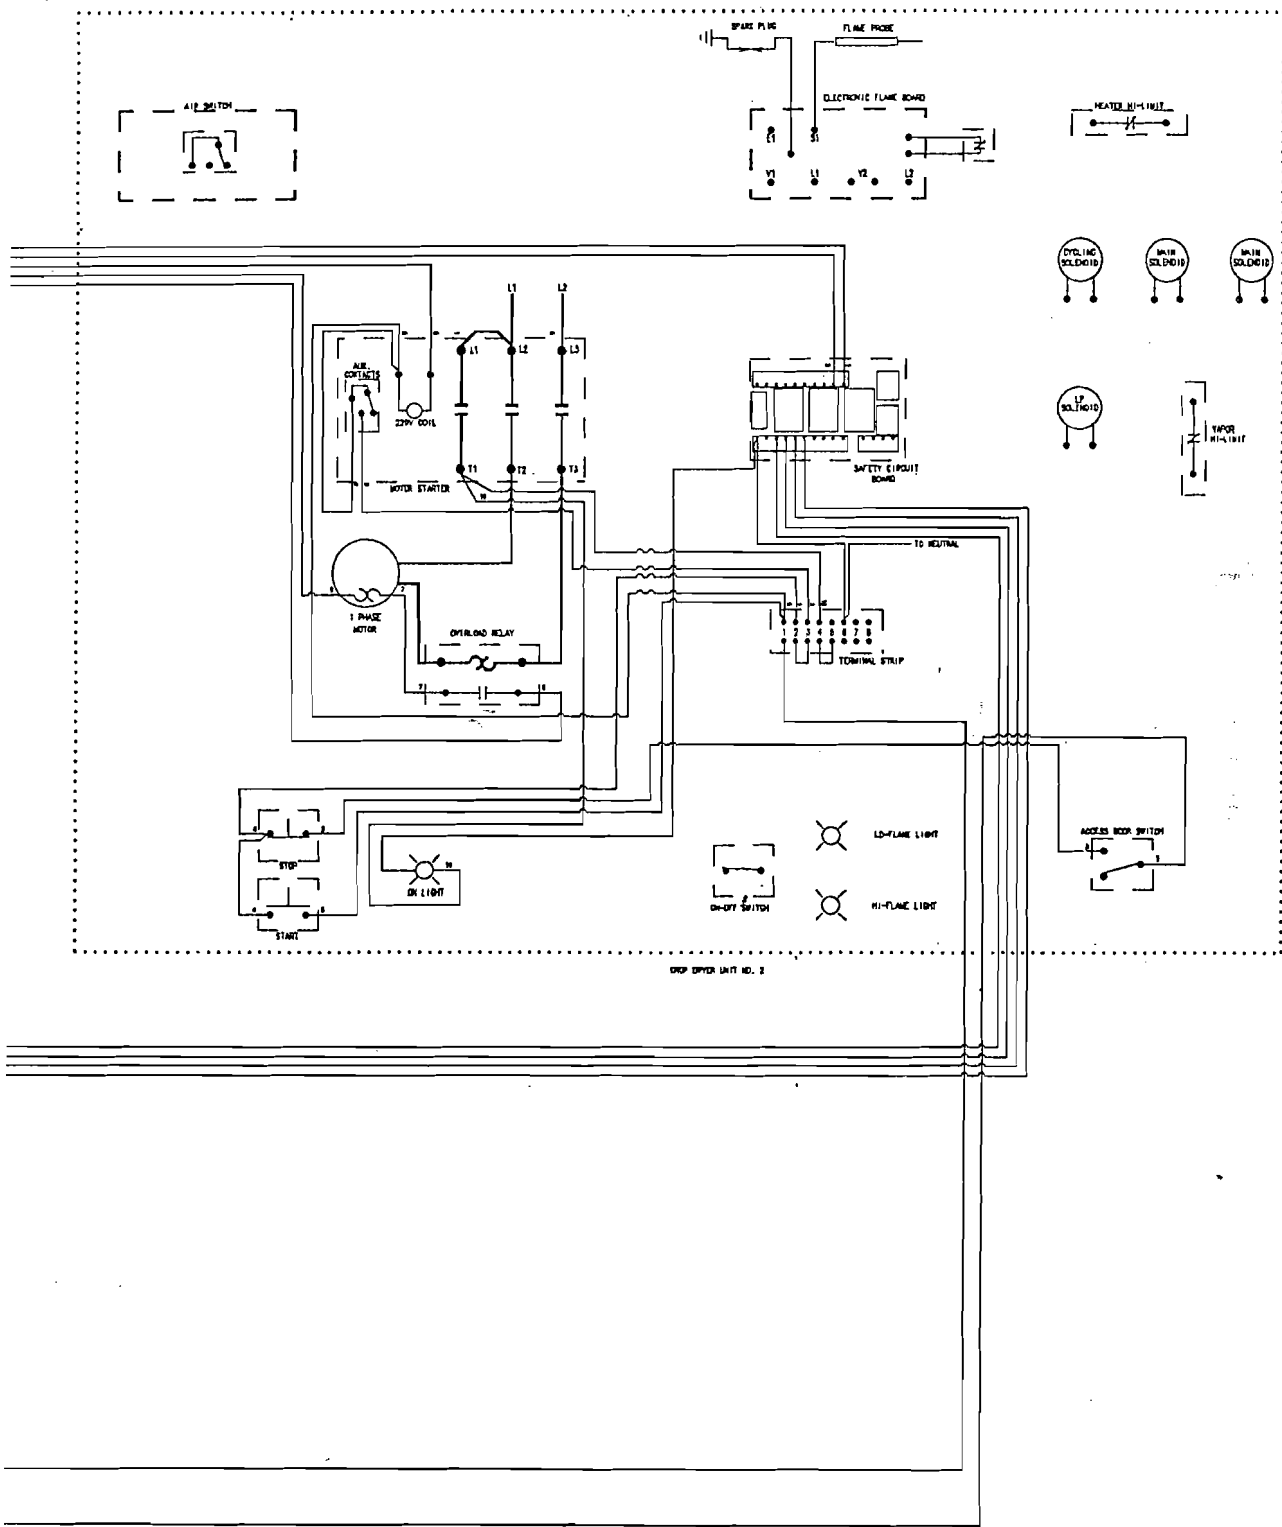


MULTIPLE CROP DRYER CONNECTION DIAGRAM

208 VOLT 3 PHASE

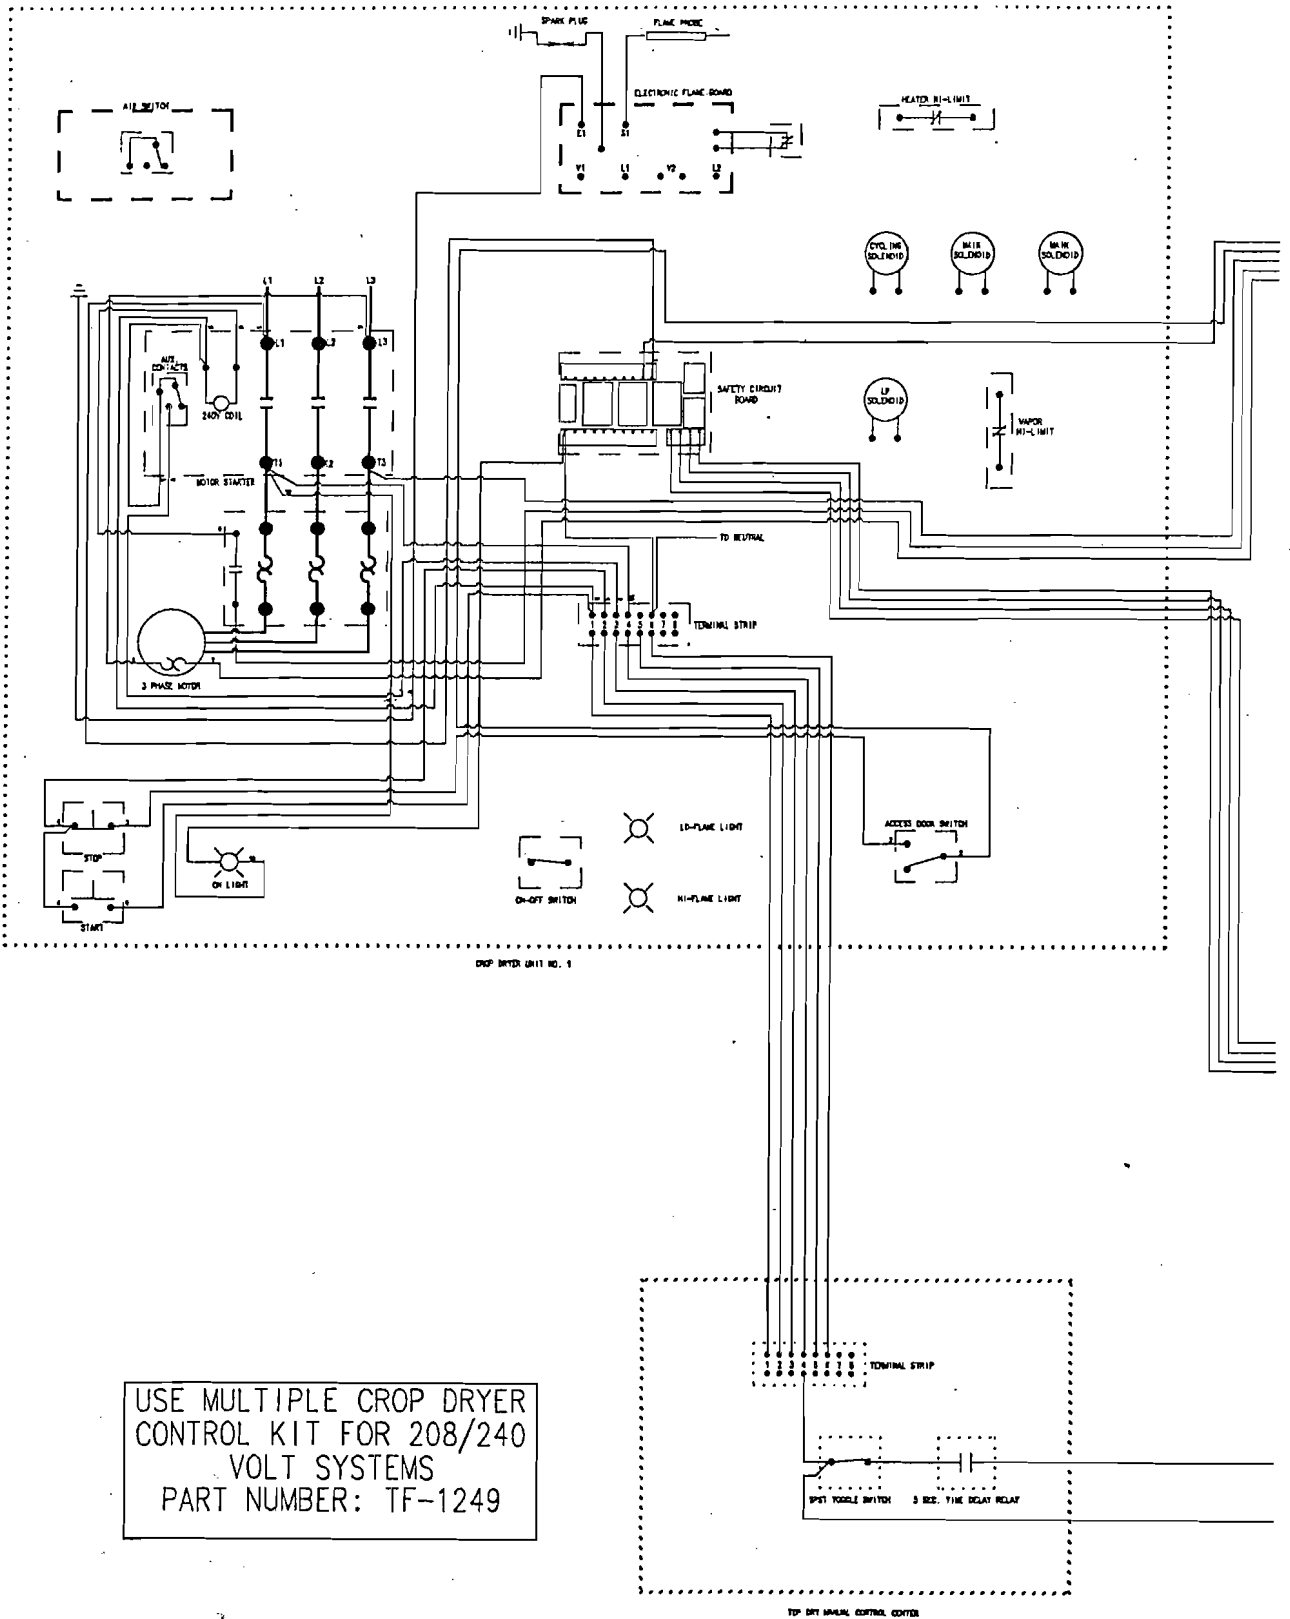


MULTIPLE CROP DRYER CONNECTION DIAGRAM (CONT.)

208 V. 3 Phase Motor

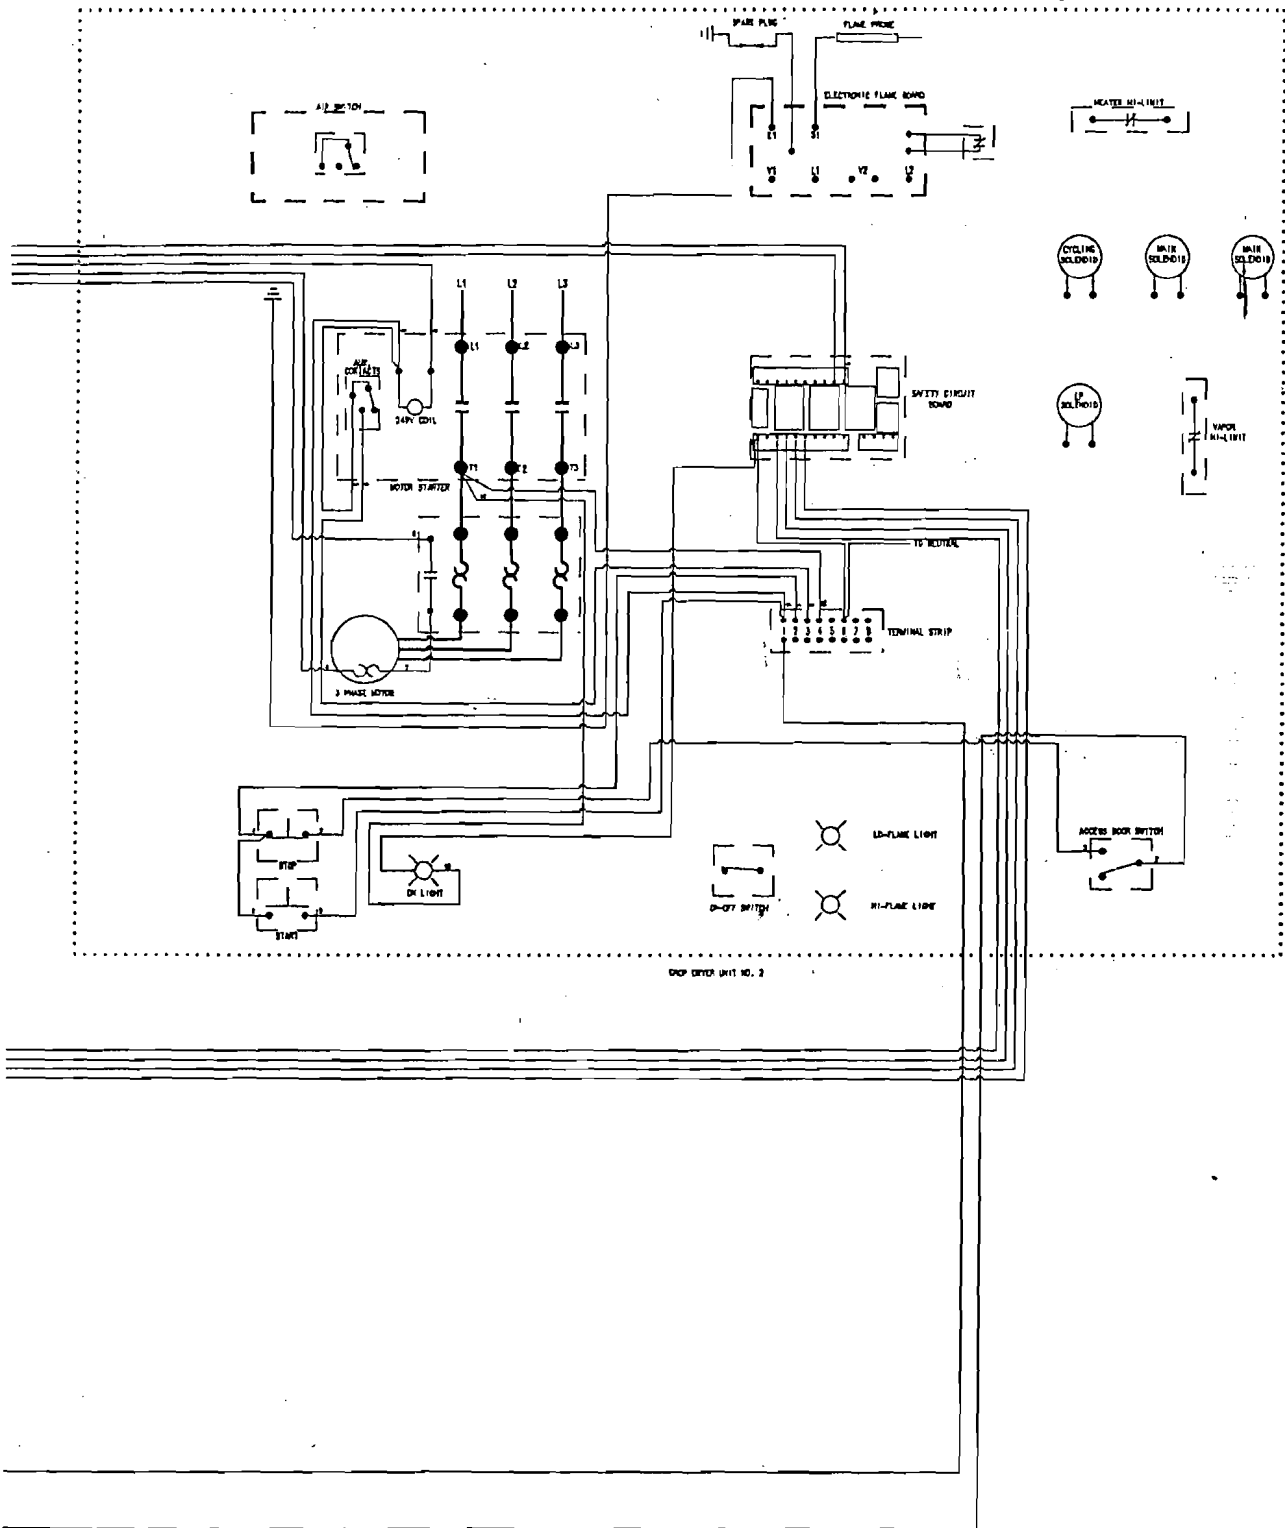


MULTIPLE CROP DRYER WIRING DIAGRAM

575 V. 3 PHASE MOTOR

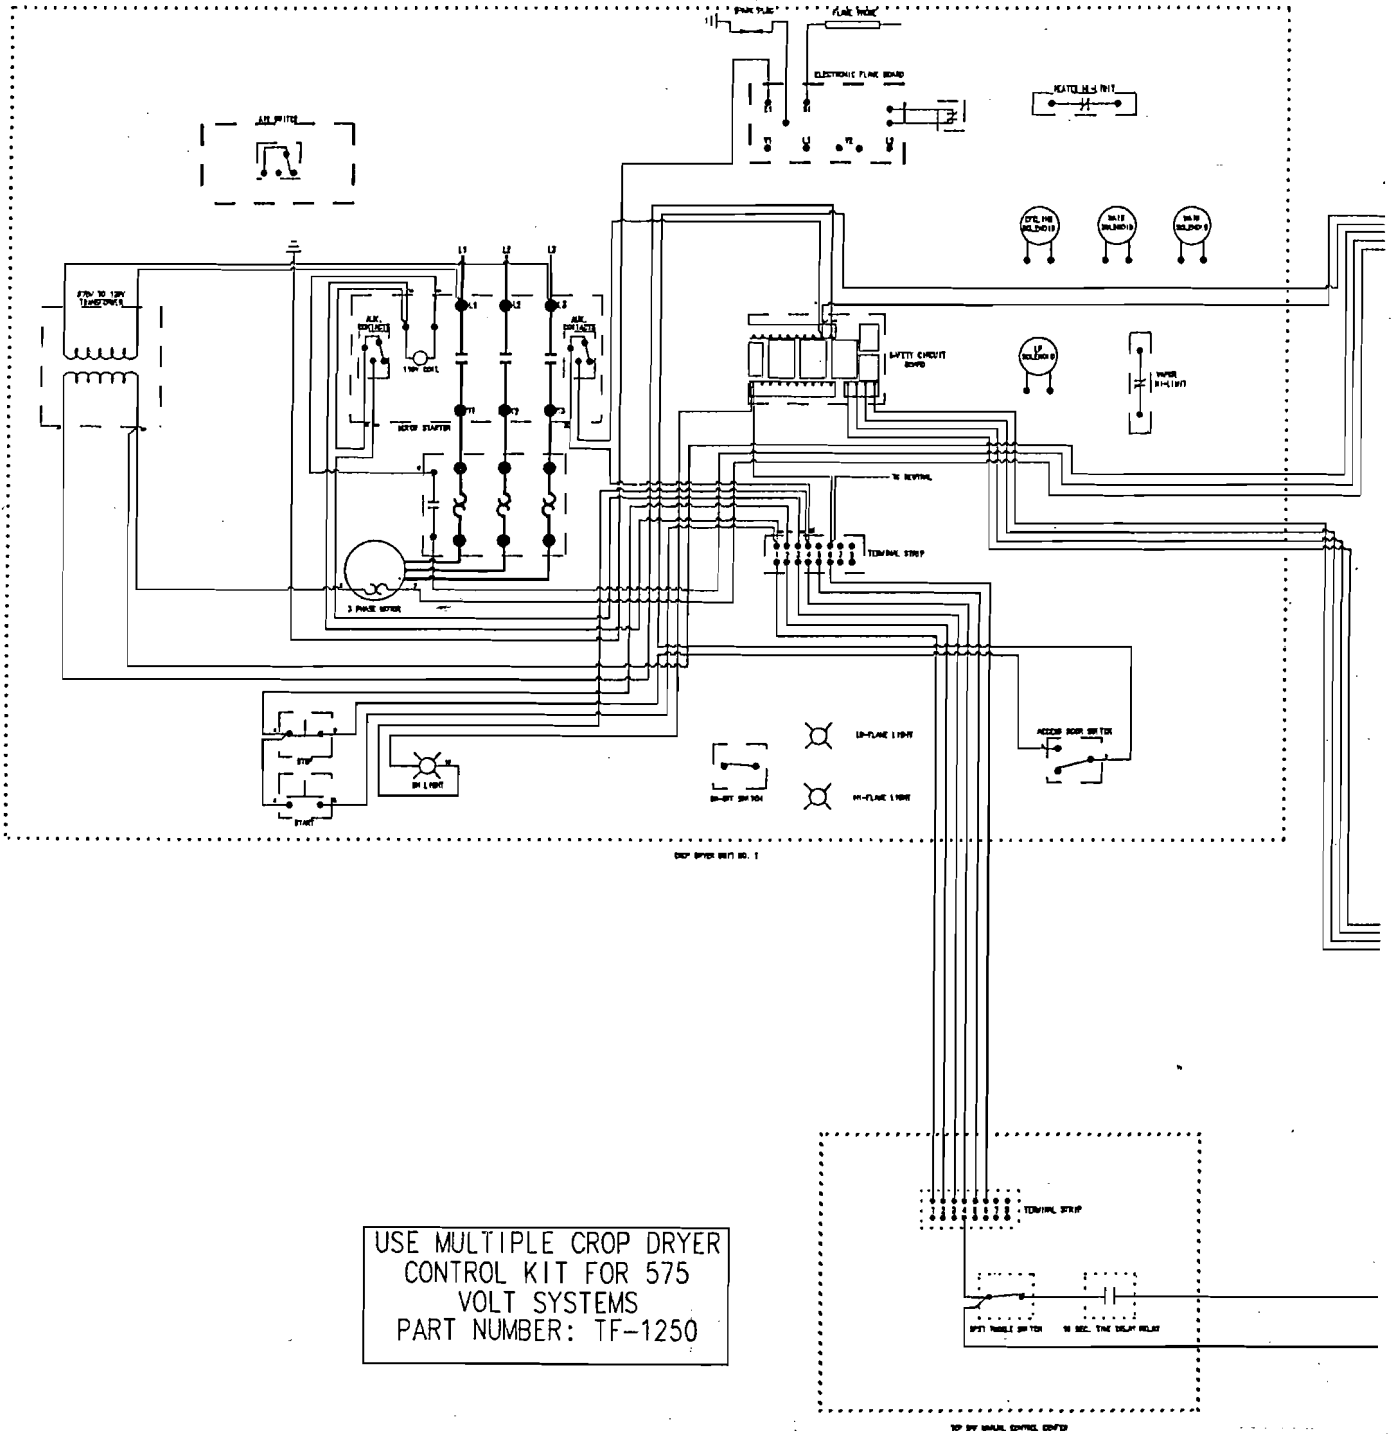


MULTIPLE CROP DRYER WIRING DIAGRAM (CONT.)

575 V. 3 PHASE MOTOR

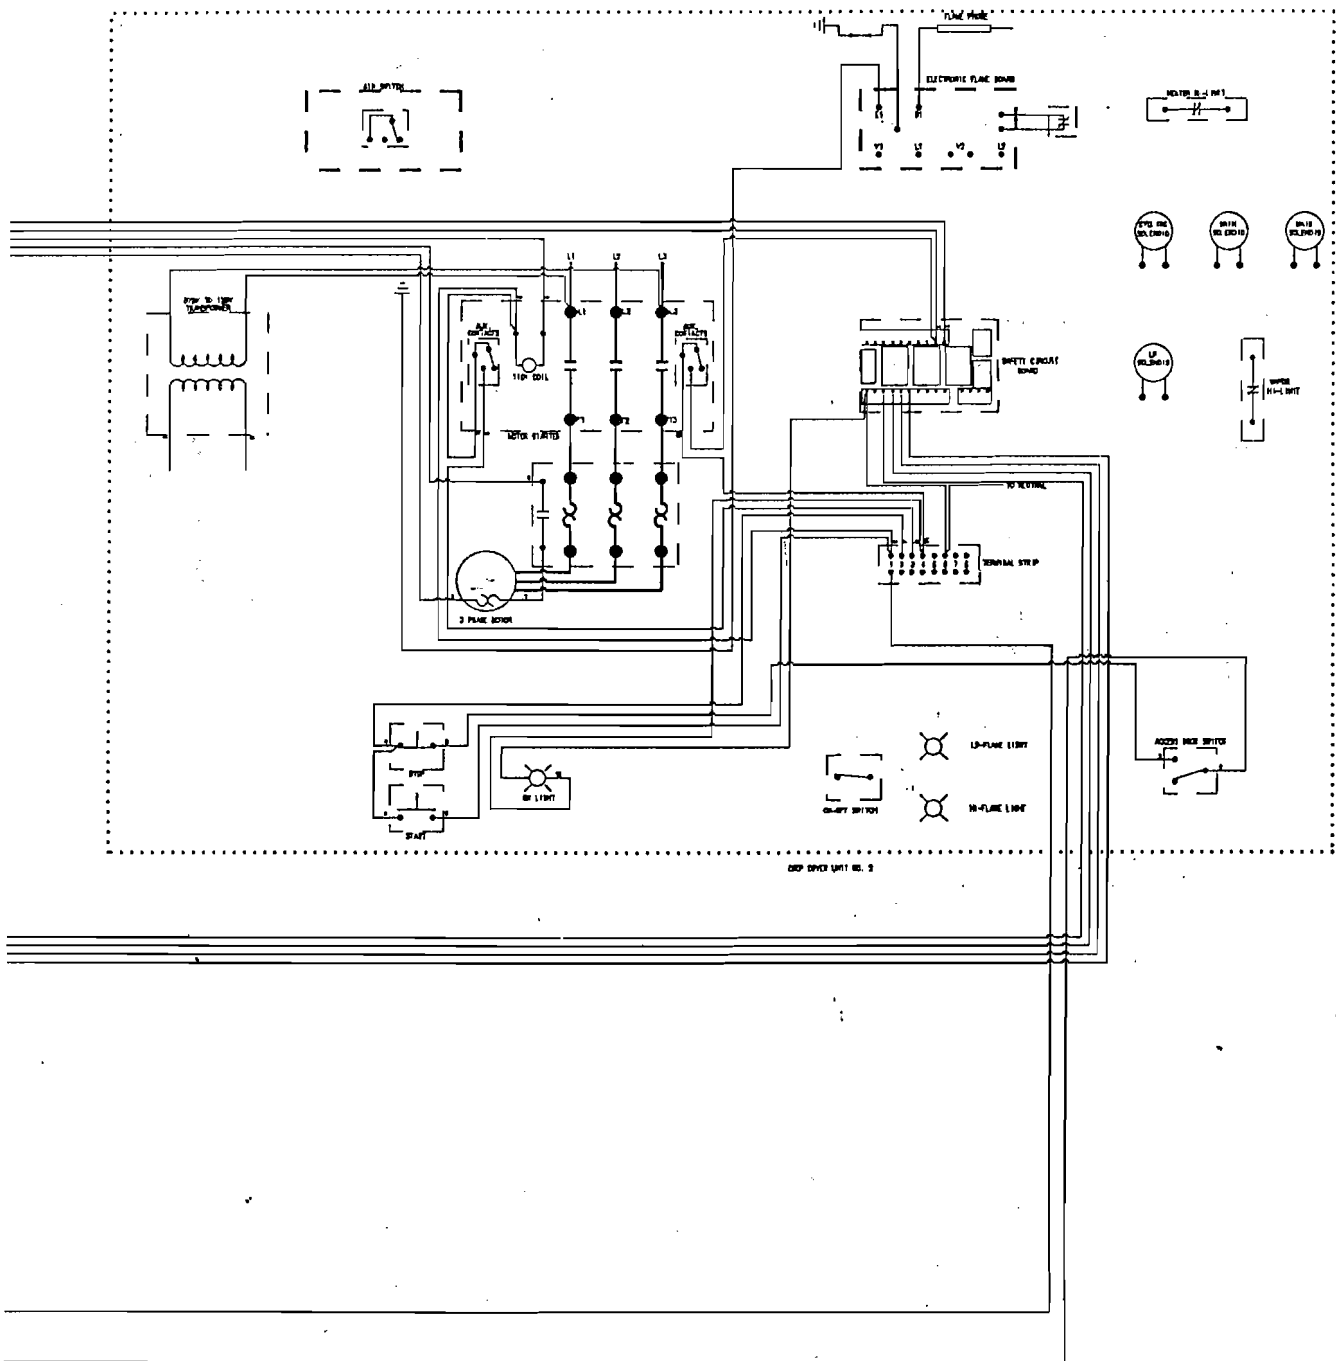

TOP DRY MANUAL CONTROL CENTER CONTROL PANEL WITH BOX

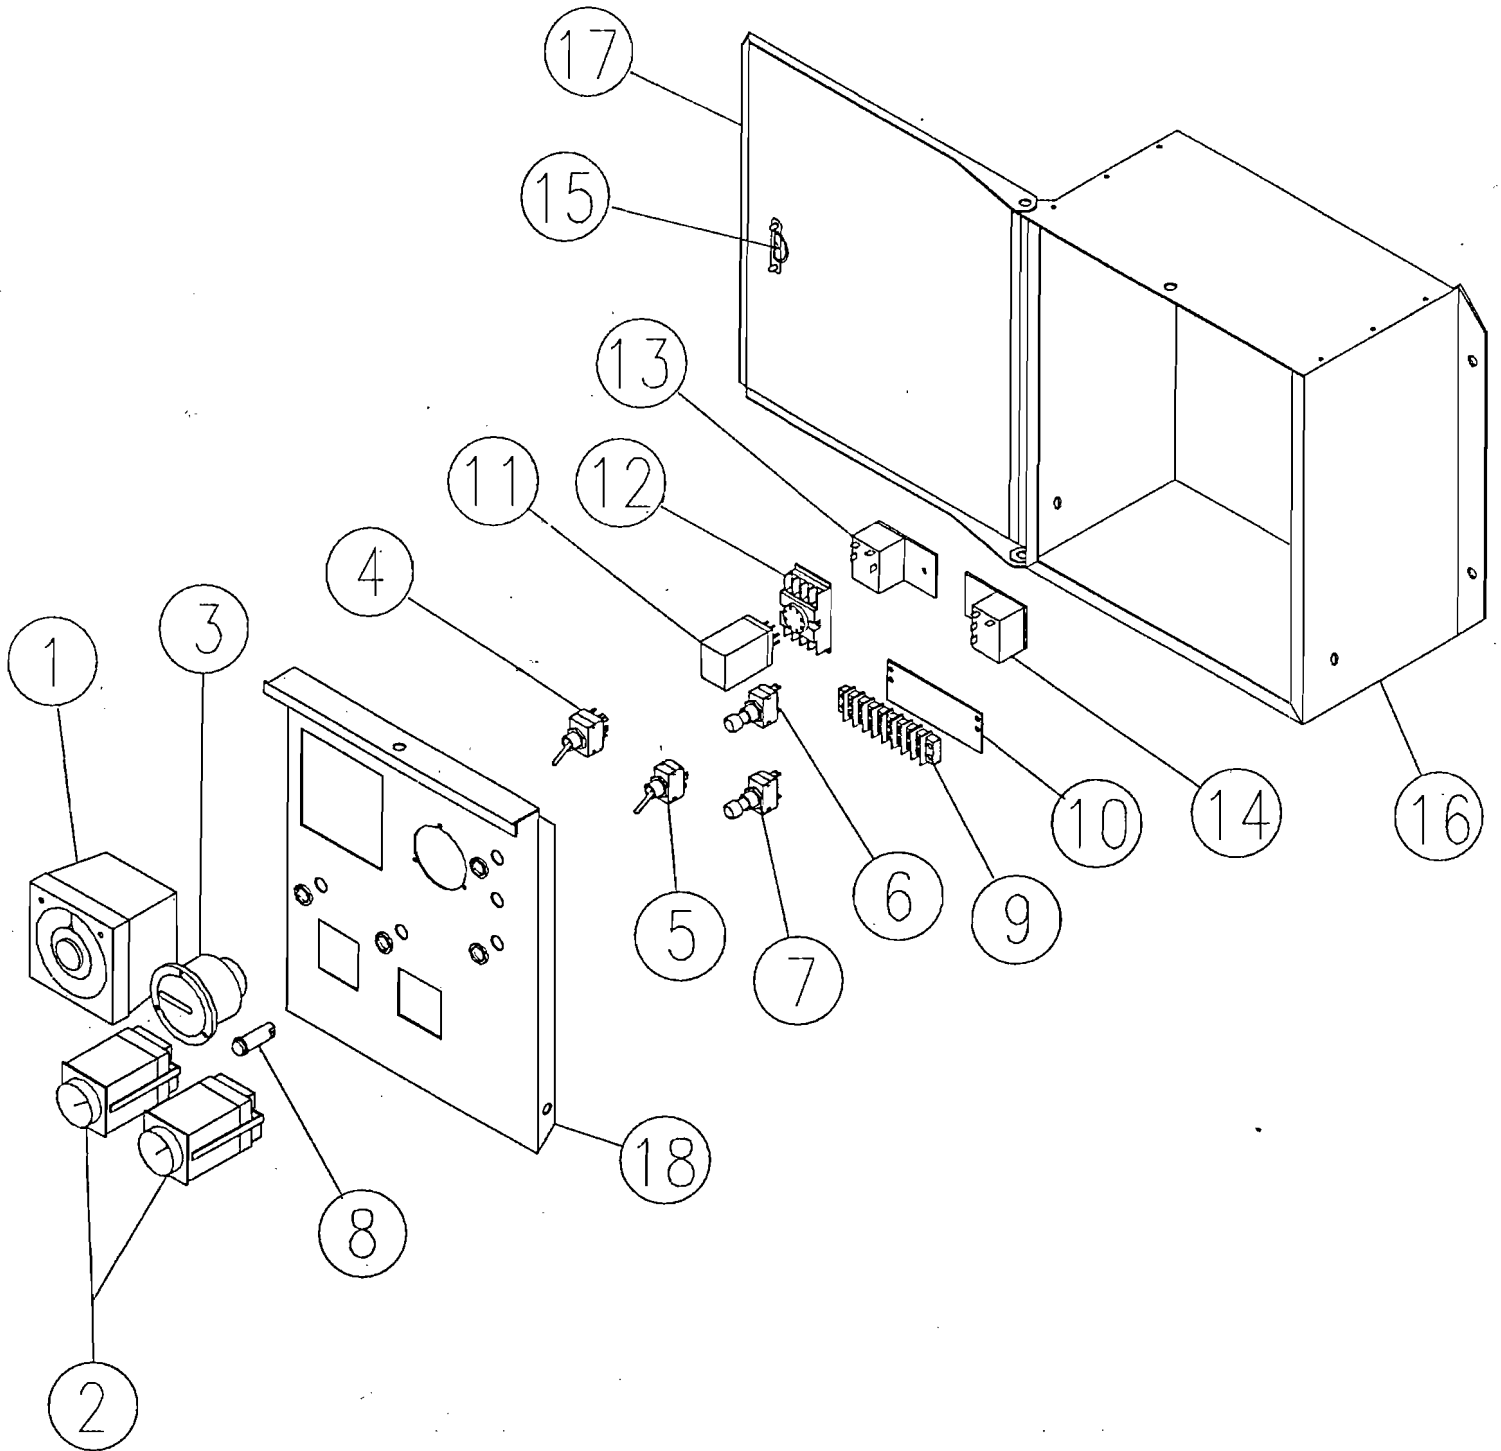

TOP DRY MANUAL CONTROL CENTER CONTROL PANEL WITH BOX

ITEM	PART NUMBER	DESCRIPTION	QTY.
1	D03-0041	THERMOSTAT	1
-	D03-0045	TEMPERATURE SENSOR	1
2	D03-0003	12 HR. TIMER	2
3	D02-0021	HOUR METER	1
4	TFC-0013	3-POS. TOGGLE SWITCH	1
5	HH-1442	SPST TOGGLE SWITCH	1
6	FH-999	START SWITCH	1
7	FH-1000	STOP SWITCH	1
8	TFH-2021	RED LIGHT.	1
9	TFH-2013	8 CONDUCTOR TERMINAL STRIP	1
10	TFH-2052	TERMINAL STRIP MARKER	1
11	TFH-2043	DPDT RELAY	1
12	TFH-2042	RELAY BASE	1
13	D03-0046	60 SEC. N.C. TIME DELAY RELAY	1
14	D03-0077	10 SEC. N.O. TIME DELAY RELAY	1
15	TFH-2046	SPRING LATCH	1
16	TF-1221	MANUAL CONTROL CENTER BOX BODY	1
	TF-1223	CONTROL CENTER LEFT SIDE	1
	TF-1224	CONTROL CENTER RIGHT SIDE	1
17	TF-1242	MANUAL CONTROL CENTER COVER	1
18	TF-1219	SUBPANEL	1
-	DC-423	MANUAL CONTROL CENTER DECAL	1
-	DC-539	WIRING DIAGRAM DECAL	1
-	DC-528	WARNING DECAL	1

DRYING RATE FOR SHELLED CORN

Fan & Heater Unit(s)	Plenum Temperature (Fahrenheit)	Initial Moisture Content Wet Basis	18' Dia. 1-Fan		21' Dia. 1-Fan		24' Dia. 1-Fan		27' Dia. 1-Fan		30' Dia. 1-Fan		30' Dia. 2-Fans		36' Dia. 1-Fan		36' Dia. 2-Fans	
			BU/HR	Batch Time Hours	BU/HR	Batch Time Hours	BU/HR	Batch Time Hours	BU/HR	Batch Time Hours	BU/HR	Batch Time Hours	BU/HR	Batch Time Hours	BU/HR	Batch Time Hours	BU/HR	Batch Time Hours
TF-2024 24" Fan 9.75 H.P.	120	20%	192	2.8	199	3.7	212	4.7	-	-	-	-	-	-	-	-	-	-
		25%	100	5.4	103	7.1	111	9.0	-	-	-	-	-	-	-	-	-	-
		30%	68	7.9	70	10.4	75	13.2	-	-	-	-	-	-	-	-	-	-
	140	20%	257	2.1	268	2.7	285	3.5	-	-	-	-	-	-	-	-	-	-
		25%	135	4.0	139	5.2	149	6.7	-	-	-	-	-	-	-	-	-	-
		30%	91	5.9	94	7.8	102	9.8	-	-	-	-	-	-	-	-	-	-
THF-4024 2 Million BTU/HR	160	20%	317	1.7	328	2.2	344	2.9	-	-	-	-	-	-	-	-	-	-
		25%	163	3.3	170	4.3	181	5.5	-	-	-	-	-	-	-	-	-	-
		30%	112	4.8	115	6.3	125	8.0	-	-	-	-	-	-	-	-	-	-
	120	20%	216	2.5	234	3.1	256	3.9	254	4.7	-	-	-	-	-	-	-	-
		25%	112	4.8	121	6.0	133	7.5	132	9.1	-	-	-	-	-	-	-	-
		30%	77	7.0	82	8.9	90	11.0	89	13.5	-	-	-	-	-	-	-	-
TF-2028 28" Fan 10-15 H.P.	140	20%	284	1.9	314	2.3	344	2.9	342	3.5	-	-	-	-	-	-	-	-
		25%	154	3.5	163	4.5	178	5.6	117	6.8	-	-	-	-	-	-	-	-
		30%	103	5.2	110	6.6	121	8.2	120	10.0	-	-	-	-	-	-	-	-
	160	20%	360	1.5	385	1.9	416	2.4	419	2.9	-	-	-	-	-	-	-	-
		25%	186	2.9	200	3.7	217	4.6	217	5.6	-	-	-	-	-	-	-	-
		30%	128	4.2	134	5.4	149	6.7	147	8.2	-	-	-	-	-	-	-	-
TF-2036 36" Fan 10-16 H.P.	120	20%	-	-	302	2.4	344	2.9	355	3.4	375	4.0	625	2.4	378	5.7	696	3.1
		25%	-	-	156	4.7	181	5.5	184	6.6	194	7.7	326	4.6	200	10.8	366	5.9
		30%	-	-	106	6.9	123	8.1	124	9.7	132	11.3	220	6.8	135	15.9	251	8.6
	140	20%	-	-	406	1.8	454	2.2	477	2.5	500	3.0	833	1.8	514	4.2	939	2.3
		25%	-	-	210	3.5	243	4.1	247	4.9	258	5.8	428	3.5	266	8.1	490	4.4
		30%	-	-	142	5.1	166	6.0	167	7.2	178	8.4	294	5.1	181	11.9	337	6.4
THF-4036 4 Million BTU/HR	160	20%	-	-	498	1.5	555	1.8	585	2.1	600	2.5	1000	1.5	617	3.5	1136	1.9
		25%	-	-	258	2.8	294	3.4	303	4.0	319	4.7	535	2.8	327	6.6	600	3.6
		30%	-	-	174	4.2	204	4.9	205	5.9	217	6.9	365	4.1	222	9.7	407	5.3
	180	20%	-	-	595	1.2	666	1.5	-	-	-	-	1153	1.3	-	-	1350	1.6
		25%	-	-	308	2.4	356	2.8	-	-	-	-	625	2.4	-	-	720	3.0
		30%	-	-	208	3.5	243	4.1	-	-	-	-	428	3.5	-	-	490	4.4
TF-2042 42" Fan 10-16 H.P.	120	20%	-	-	-	-	400	2.5	426	2.8	483	3.1	-	-	502	4.3	830	2.6
		25%	-	-	-	-	212	4.7	221	5.5	245	6.1	-	-	266	8.1	440	4.9
		30%	-	-	-	-	144	6.9	149	8.0	168	8.9	-	-	181	11.9	300	7.2
	140	20%	-	-	-	-	555	1.8	572	2.1	641	2.3	-	-	675	3.2	1136	1.9
		25%	-	-	-	-	285	3.5	297	4.0	333	4.5	-	-	354	6.1	583	3.7
		30%	-	-	-	-	196	5.1	201	6.0	227	6.6	-	-	295	7.3	400	5.4
THF-4042 5 Million BTU/HR	160	20%	-	-	-	-	666	1.5	701	1.7	786	1.9	-	-	830	2.6	1350	1.9
		25%	-	-	-	-	344	2.9	364	3.3	408	3.7	-	-	432	5.0	720	3.0
		30%	-	-	-	-	238	4.2	246	4.9	278	5.4	-	-	295	7.3	490	4.4
	180	20%	-	-	-	-	769	1.3	838	1.5	939	1.6	-	-	981	2.2	1661	1.3
		25%	-	-	-	-	416	2.4	435	2.8	488	3.1	-	-	514	4.2	864	2.5
		30%	-	-	-	-	285	3.5	294	4.1	332	4.5	-	-	354	6.1	583	3.7
TF-2042-33 42" Fan 30 H.P.	140	20%	-	-	-	-	-	743	1.6	750	2.0	-	-	800	2.7	1350	1.6	
		25%	-	-	-	-	-	-	544	2.2	405	3.7	-	-	423	5.1	744	2.9
		30%	-	-	-	-	-	-	260	4.6	272	5.5	-	-	288	7.5	502	4.3
	160	20%	-	-	-	-	-	-	910	1.3	937	1.6	-	-	981	2.2	1661	1.3
		25%	-	-	-	-	-	-	472	2.5	483	3.1	-	-	514	4.2	900	2.4
		30%	-	-	-	-	-	-	319	3.8	333	4.5	-	-	354	6.1	617	3.5
180	20%	-	-	-	-	-	-	1088	1.1	-	-	-	-	-	-	1963	1.1	
	25%	-	-	-	-	-	-	564	2.1	-	-	-	-	-	-	1080	2.0	
	30%	-	-	-	-	-	-	382	3.2	-	-	-	-	-	-	744	2.9	

1. DRYING RATES ARE ESTIMATED USING 45°F AND 85% R.H. AMBIENT AIR CONDITIONS
2. GRAIN DRIED TO 15% FINAL MOISTURE.
3. 1/5 CFM PER BUSHEL AERATION SYSTEM RECOMMENDED.
4. DRYING CHARTS ARE FOR SHELLED CORN. CHARTS ARE TO BE USED ONLY AS A GUIDE SINCE AMBIENT CONDITIONS WILL VARY.

NOTES

(FOR YOUR CONVENIENCE)

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100



Faint, illegible text or markings at the bottom of the page, possibly bleed-through from the reverse side.



MAKERS OF TOP QUALITY
DRYING/STORING SYSTEMS